


03-06 Chevy Silverado GMC Sierra Tow Mirrors Installing & Wiring Diagram


1. Screws location

- 1.1. Remove the two plastic cover and inner door locker.
- 1.2. Remove two 7mm bolts and T20 screw.

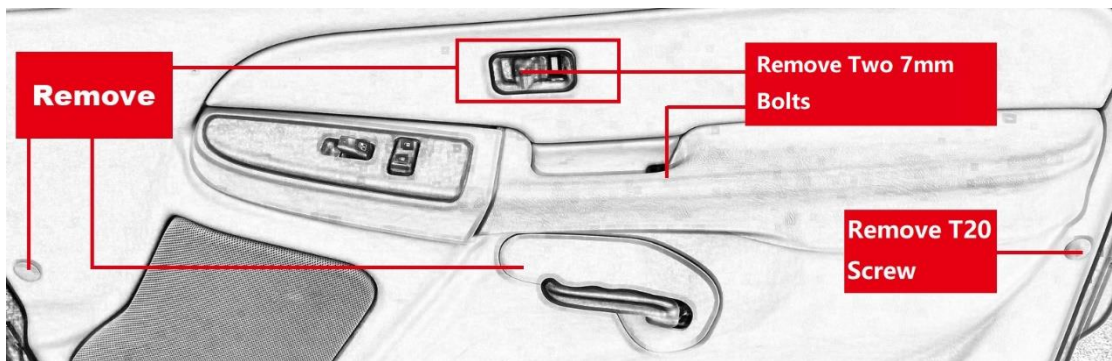

2. Wiring Diagram

2.1. Main Plug (Rear View)

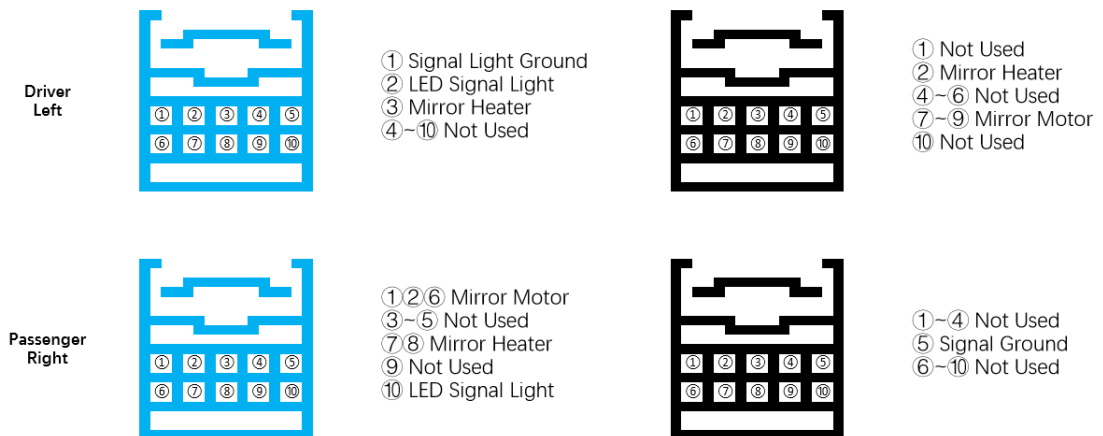

2.2. Small AUX Plug



Female Plug on Mirror Base

Male Plug on Harness

Ground (Black)

Spot Light (Purple)

- 2.3. Run the wires through the rubber tunnel between the door and body frame.
- 2.4. Connect the black wire to the ground pole on body frame.
- 2.5. Connect the spot light (purple) wire to the trailer backup spot in fuse block. (Find the mark: TRL B/U)

