

INSTALLATION & CARE


YG0801A056 YG0801W056

Tools Required

- 13mm Socket
- 10mm Socket
- Ratchet
- Torque Wrench

Part List

1	Driver Left Side Step Bar
1	Passenger Right Side Step Bar
4	Mounting Bracket
4	M8 Hexagon Bolt
16	M6 Bolt Set
4	M8*22 Flat Washer
8	M6*18 Flat Washer
4	M8 Spring Washer
8	M6 Spring Washer
8	M6 Flange Nut

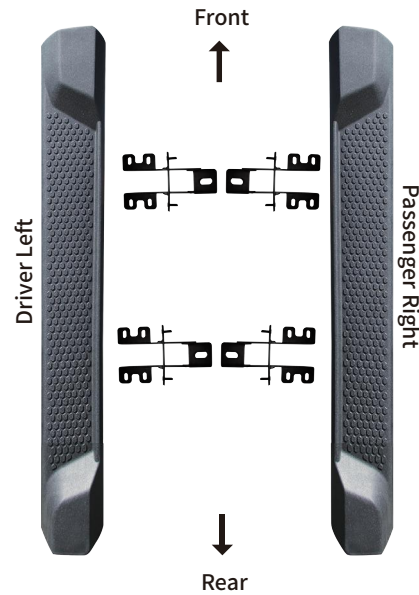

Step 1:

- Remove factory rock rail if equipped. Three mounting positions each side.
- Remove (4) M6 hex nuts on rocker panel and (2) M8 hex bolts on body frame.
- Note: The step bar and factory rock rail cannot coexist.

Step 2:

- Attach (2) brackets on the back of step bar.
- Secure with (8) M6 bolt sets.
- Note: The wider side of step bar towards front.



Step 3:

- With assistance, lift step bar up and attach the mounting bracket through the two holes on the rocker panel.
- And secure bracket on body panel with (2) M8 hex bolts, (2) M8 flat washers, (2) M8 spring washers.
- Do not fully tighten.



Step 4:

- After the bracket is attached, secure the bracket studs on rocker panel with (4) M6 flat washers, (4) M6 spring washers, (4) M6 flange nuts.
- Do not fully tighten.



Notes

- Read this instruction carefully before starting installation.
- We provide extra spare parts, only the necessary quantities were listed.
- Verify all parts especially the direction of step bar and bracket before installation.
- The WIDER side of step bar towards front.
- If the step bar was too close to against rocker panel, try to add M6 flat washers before attach the bracket on rocker panel.
- If missing parts or any damage found, please take a picture, and contact us.

Step 5:

Tighten the M6 bolts and nuts on rocker panel with 10 ft. lbs.

Tighten the M8 bolts on body panel with 20 ft. lbs.

Periodic check to ensure all mounting hardware were remain secure and tight.

