


How to Install Adhesive Panels on Clean, Dry Concrete

A. Remove “frame” around panel, then peel backing along one edge of template. Fold backing.

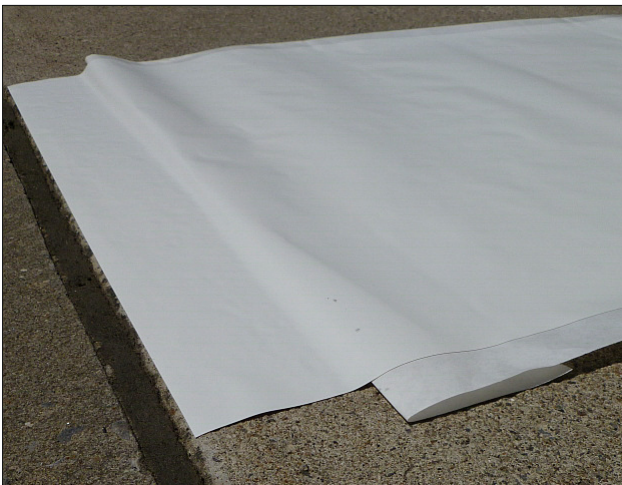

B. Align panel to straight edge and apply to surface.



C. Roll panel up to applied edge.



D. Pull firmly and evenly on backing to unroll panel.



E. Measure panel placement to main axis & 90 degree lines. Smooth down panel and assure even adhesion to surface.



F. Apply all panels, aligning to previous panels and axis lines. Weed out design to expose concrete for your application.



NOTE : Lines of the design are scored. Use a razor knife to “nick” the scored lines at each a panel edge to start the tear, then peel out. Use your razor knife to ease this weeding out process, such as where a long arc meets a turn or the outer edge.