SAGITINE

SHANGHAI 14 BOX STAND


ASSEMBLY INSTRUCTIONS


To complete the assembly of your Shanghai Stand you will need the following tools:

ANo2Phillips Head Screwdriver





A No 4 Allen Key (Hex)



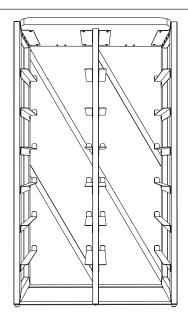


Within your delivery you'll find the following parts and hardware.

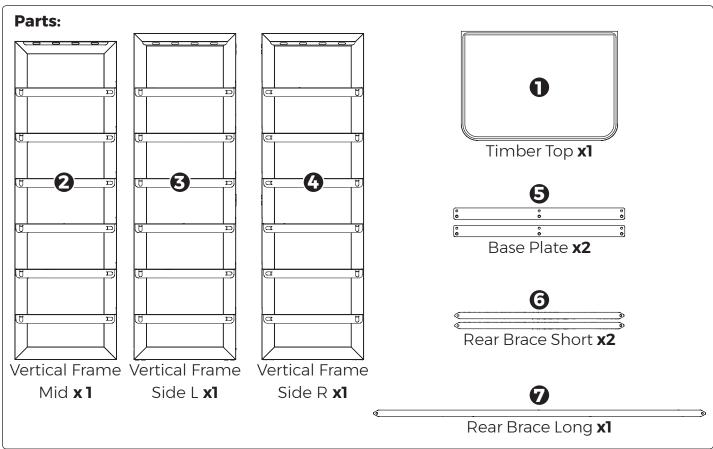

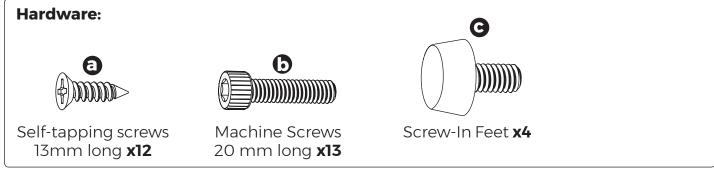


Step 1 Place a clean towel or blanket on the ground first to place the Timber Top on to avoid scratching or marking the timber.


Place the Timber Top upside down on top of the towel or blanket on the ground so that the holes are showing.

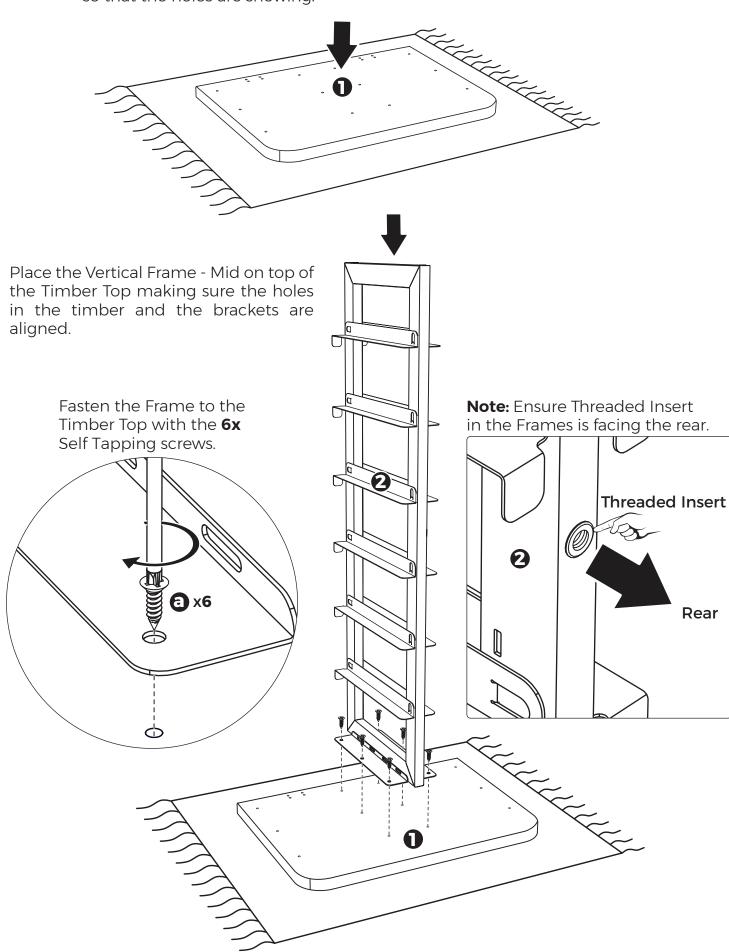


Step 2 Attach both Vertical Frames - Side L and R to the Timber Top as shown using **6x** Self Tapping screws.

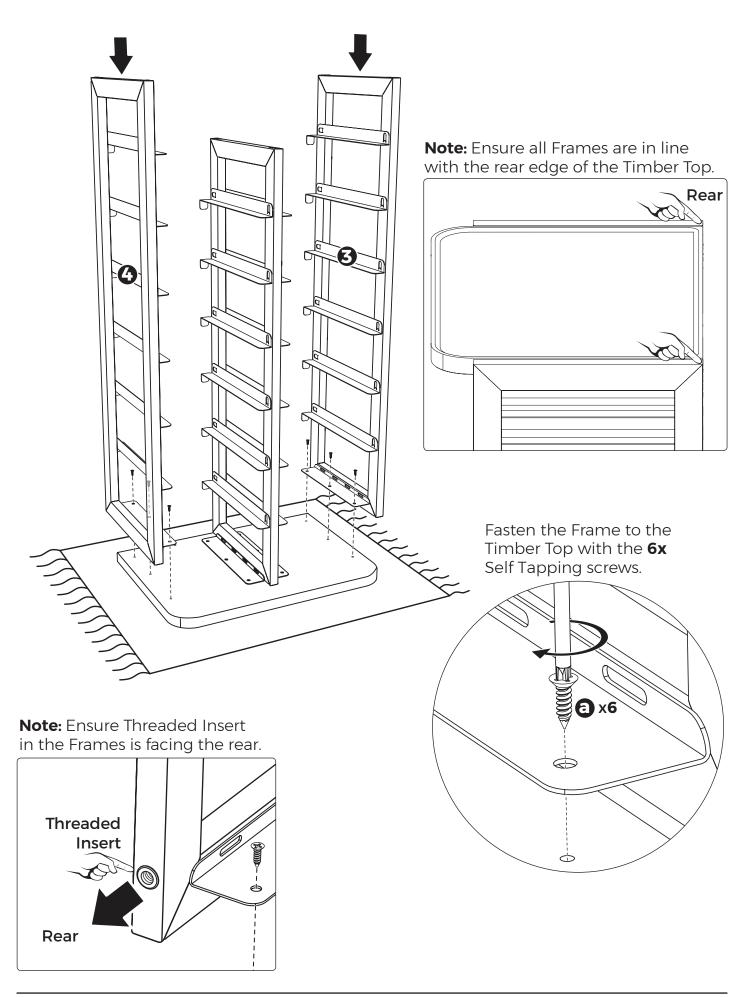


Step 3 Place the Base Plates across the three Vertical Frames as shown, aligning the holes with the Threaded Inserts.

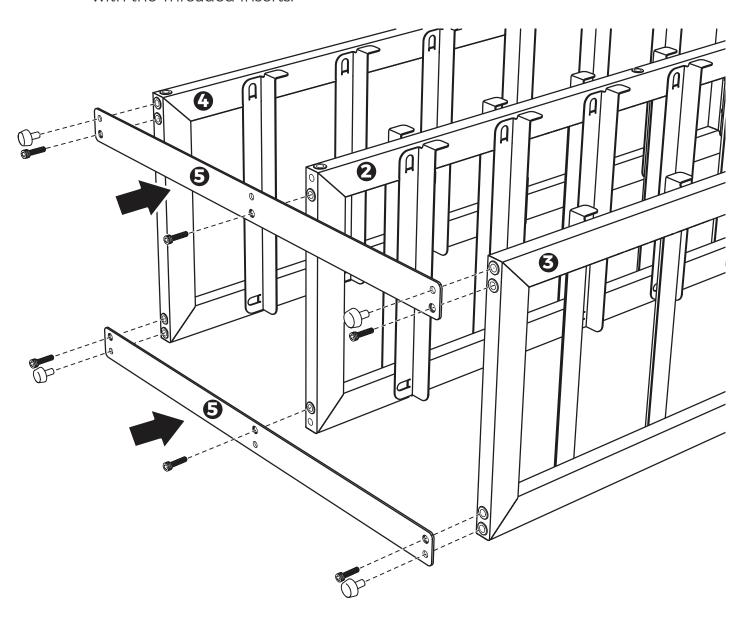

Fasten the Base Plates to the Vertical Frames with **6x** Machine Screws and **4x** Screw-In Feet.

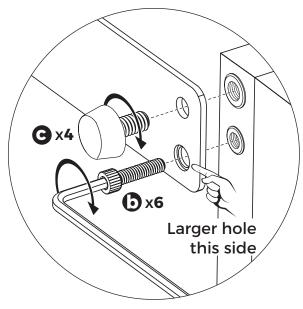

Step 4 Install the Rear Braces by aligning holes in the brace with the Threaded Inserts in the Vertical Frames.

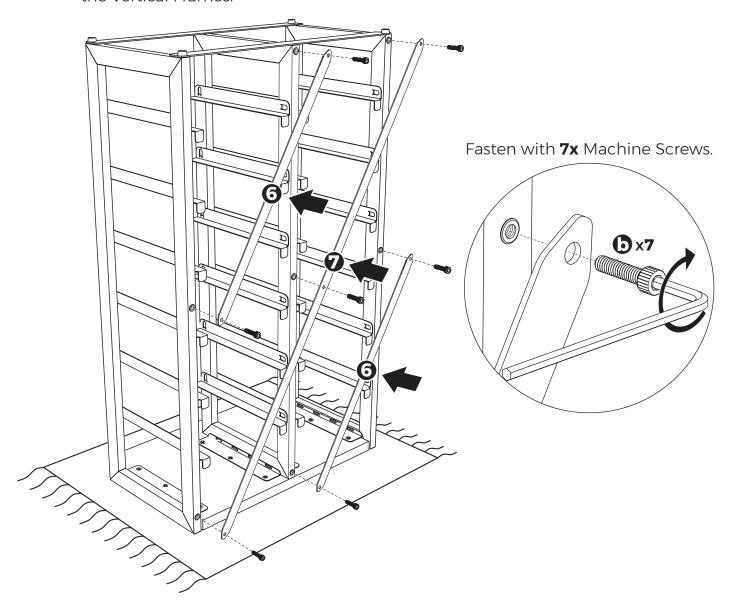

Flip your Shanghai Stand so that the Timber Top is upright, insert your 14 Milan Boxes and enjoy your new Sagitine piece.

