


## Over Boarding Solid Floors 6mm PrePrimed NoMorePly



1A

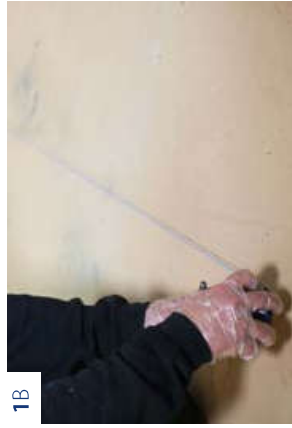

1B


### Step 1

6mm **NoMorePly** is ideal for covering dirty, cracked, worn out concrete floors. Always start by removing loose material, then prime the floor with one coat of **NoMorePly** Tiler's Primer (mixed 1 part primer to 3 parts water).

Mark or chalk a straight line on the floor.



2A

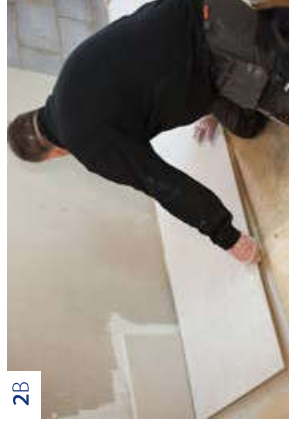


2B

### Step 2

For best results, lay **NoMorePly** on single part flexible rapid set adhesive. This can straddle both solid and timber flooring surfaces.

Stagger the boards where possible.

**Cutting Boards** NoMorePly Boards can be easily cut by scoring one side with a scoring knife, then snapping over a block. For curves and shapes use tile nippers.

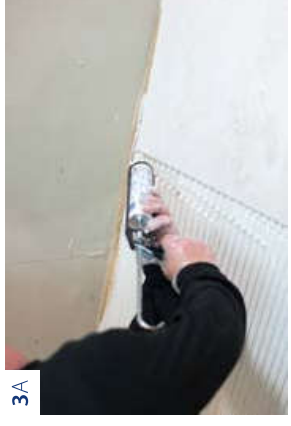

3A



3B

### Step 3

Apply a small bead of MEGA Strength onto the edges of each board to achieve a waterproof seal.

Wipe off excess adhesive using a cloth and use solvent in case of spillage.



4A



4B

### Step 4

When boards have straddled both solid and timber flooring, use screws to secure into any timber floorboards.

**Now you're ready to tile!**