

# NoMorePly®

## Insulation Board

The first tile backing system with a lifetime guarantee

**QUICK  
& EASY**



**HIGH  
INSULATION**



**STRONGER  
BUILD**



**WATER  
RESISTANT**



**LIFETIME  
GUARANTEE**



**QUICK  
& EASY**



**HIGH  
INSULATION**



**STRONGER  
BUILD**



**WATER  
RESISTANT**



**LIFETIME  
GUARANTEE**



## Why professionals choose NoMorePly Insulation Board

**NoMorePly** Insulation Board is the perfect tile backing system for use on solid floors, providing the ideal foundation on which to lay electric underfloor heating. It's the right choice for kitchens, bathrooms, wetrooms and comes highly recommended by professional tilers.

- **Quick and easy** to handle, cut and lay
- **High insulation properties**, perfect for solid floors and when using electric underfloor heating
- **Strong**, therefore ideal for large and heavy tiles
- **Water resistant**, unlike plywood which weakens when damp
- **A lifetime guarantee**, providing complete peace of mind

**Follow the guidance in this leaflet to learn best practice on installing the NoMorePly Insulation board system.**



'Lots of customers are asking for electric underfloor heating. I choose NoMorePly to guarantee the job'

**Craig Sellars**

Professional tiler since 1984




# Over Boarding Solid Floors with NoMorePly Insulation Board

1A



2A

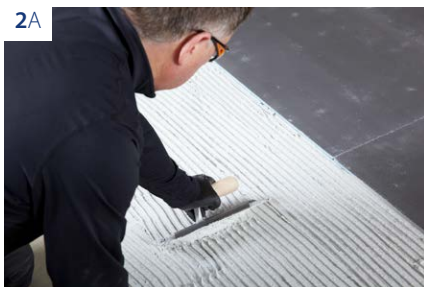

1B



2B



## Step 1

Sweep clean, then prime the floor to improve tile adhesion using a sponge to apply SBR (mixed 1 part SBR to 3 parts water).

You are now ready for **NoMorePly**.

## Step 2

For best results, lay **NoMorePly** on single part flexible, rapid set adhesive.

Apply a small bead of MEGA Strength onto the edges of each board to seal and reinforce the joints.

**Insulation board dimensions:**

**1200mm x 600mm x 10mm (which covers 0.72 square metres)**



**Cutting Boards** NoMorePly Insulation boards can be cut easily using a utility knife, with both straight and curved cuts being easy to achieve.



3A



4A



3B



4B



### Step 3

Stagger the boards where possible.  
Roll out the electric underfloor heating directly onto the insulation boards following instructions provided by the manufacturer.

### Step 4

Use rapid set self-levelling floor compound over the electric underfloor heating.  
Once set, lay tiles using a single part flexible tile adhesive.

For sales or advice on installation  
Call: 0800 0094 354 or Visit: [NoMorePly.net](http://NoMorePly.net)

**NoMorePly**®

# NoMorePly - Guarantee and guidance

## Lifetime Guarantee Terms

The **NoMorePly** board lifetime guarantee only applies when the correct installation procedures, as set out in our Installation Guide, have been followed and the recommended **NoMorePly** system essentials used during installation.

### LIFETIME GUARANTEE



## For guidance only

As conditions of use and any labour involved are beyond our control, the end user must satisfy himself by prior testing that the product is suitable for his specific application. No responsibility can be accepted or any warranty given by our representatives, agents or distributors.



## Tested and Approved

Tested and approved: **NoMorePly** boards with CE approval and low in emissions.



For sales or advice on installation

Call: **0800 0094 354** or Visit: **NoMorePly.net**

Lines open: Monday-Friday **7am-5pm**

**NoMorePly**®