

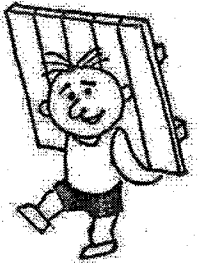


6



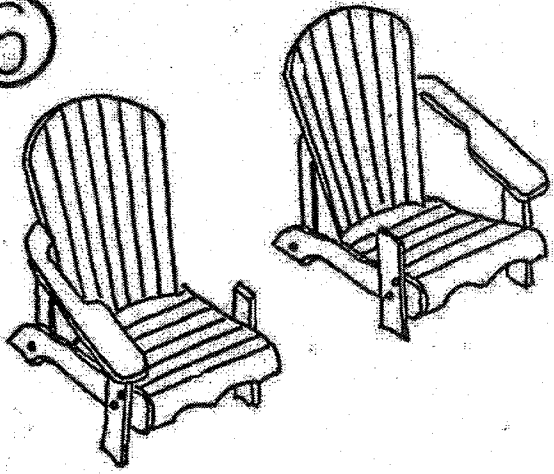


Comfort Double Relax Chair


7

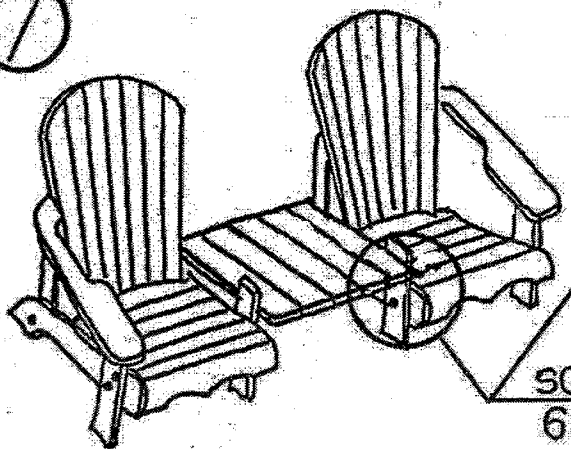


SCREW
6x60

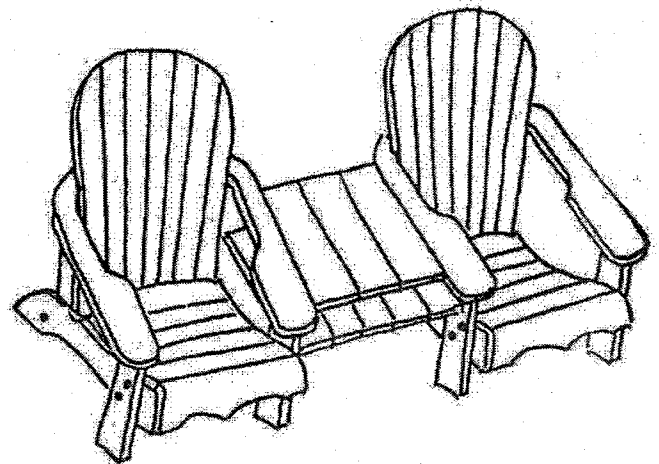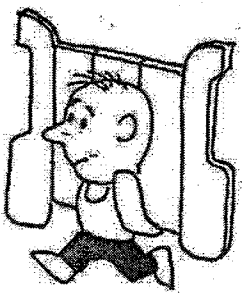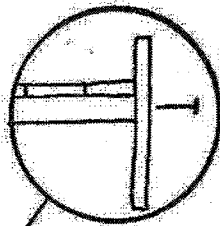

8

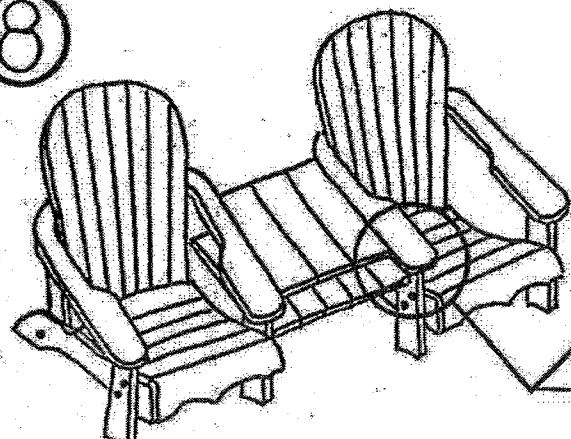


SCREW
4x60

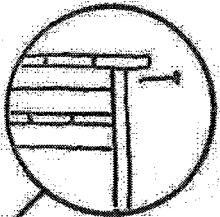





12X

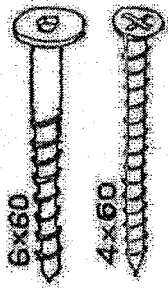


4X 18X 12X




1X

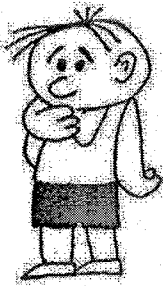



③

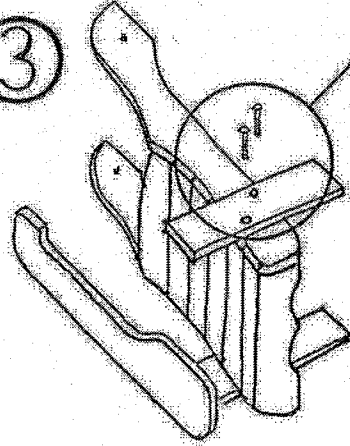


BOLTS 6x60 + NUTS

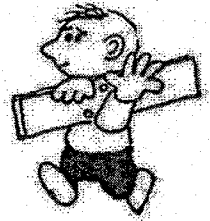

①

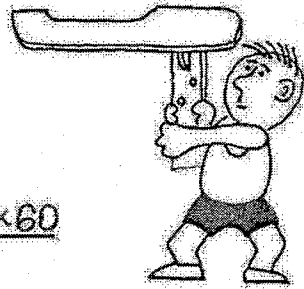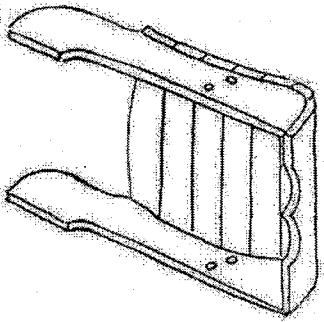


②

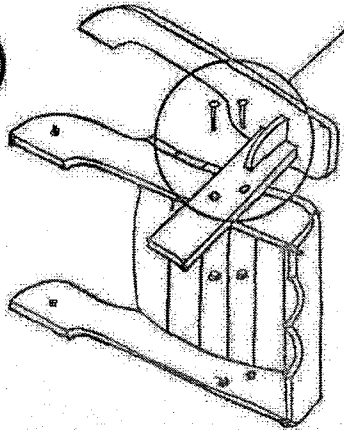

BOLTS 6x60 + NUTS



④

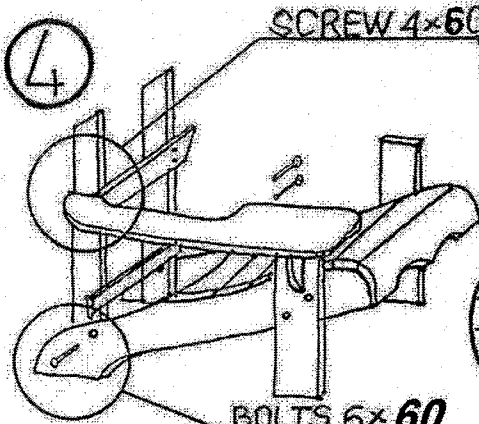

SCREW 4x60

BOLTS 6x60 + NUTS

This bolt must be screwed last.

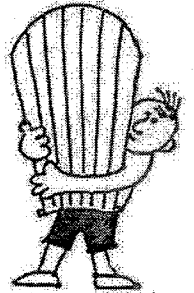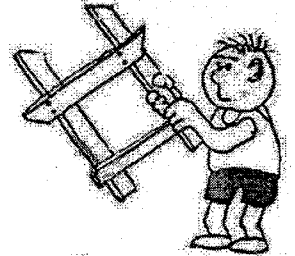

SCREW 4x60

⑤

