

10,5 mm


,5 mm

14

## 90mm Hi Flow Shower Tray Waste Installation and Assembly Instructions

- 1 Remove upper assembly, and seal from the bottle trap. Re-assemble on to the Shower Tray as shown in diagram below.
- 2
- 3 To clean the trap, remove the dome then twist and remove the inner section. Wipe clean, re-assemble and fit.

**NB: A suitable quality silicone sealant should be used on all surfaces against the Shower Tray.**

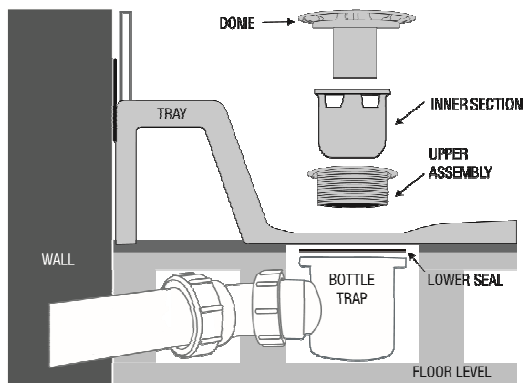

SC-01