
MATERIALS NEEDED:

- Unisub Bare Award or Plaque
- Printed Transfer and Scissors
- Sublimation Printer (RIP Printing Software)
- Small Swing Away Heat Press set to 385° F (Heat Gloves and Heat Tape)
- · Blowout Paper
- Cloth for Cleaning and All-Purpose Cleaner


INSTRUCTIONS

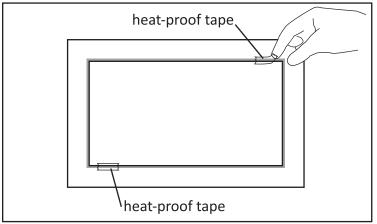


Awards

First, remove film and clean. Next, line up and tape award to the transfer. With bare side facing up, place in heat press between two sheets of blowout paper at 385 Degrees F for 1:25-1:35. Time may vary based on equipment. Remove transfer, and allow to cool. You can display streamline awards with a wood stand (sold separately).



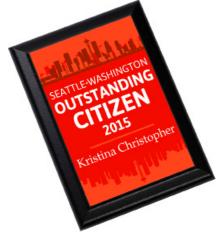

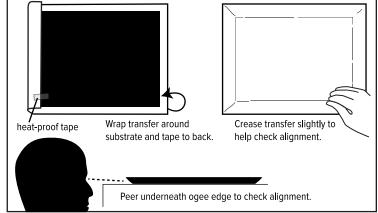

Plaques

First, remove film. Make sure to gently scrape perpendicular to where the sides meet the surface once you peel the film to get remove any excess foil or material. Clean the product. Next, line up and center the plaque to the transfer, paying attention to keyhole placement. If the plaque has an ogee edge, be sure to look closely at the plaque where it meets the transfer to make sure they align. Flip the plaque and transfer over, and crease the edges to make sure the bleed lines up. Tape edges of the transfer to the back of the product. With bare side facing up, press between two sheets of blowout paper at 385° F for 1:05-1:10. Time may vary based on equipment. Remove transfer, allow to cool, and hang to display.

Extra Tip: If you notice any foil imperfections finish the edges with a furniture touch up pen which can be found at local hardware stores.

