

2012-2020 SEADOO RXPX AIR FILTER KITS

Part No. WR04038-RXPX

Suits Models: • 2012-2019 SeaDoo RXPX

Parts Supplied: • Air Filter Adaptor

- 4" Air Filter
- 1" Breather Air Filter
- 1" Hose Clamp
- 3 x 4" Hose Clamps
- WR04034-8 Mounting Bracket
- WR04034-1 Silicon Hosing
- M6 x 12mm Cap Head Bolts
- M6 Washer

Tools Required: • T27 Torx Bit

- Phillips H
- Flat Blade Screwdriver5mm Hex Key
- Phillips Head Screwdriver
- M10 Socket/Spanner

IMPORTANT: READ ALL INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION INSTALLATION INSTRUCTIONS:

- **1.** Make sure ski is secure and on a flat surface. Remove lanyard and disconnect battery.
- 2. Pull the seat housing off the ski.
- **3.** Undo and remove the labelled bolts⁽¹⁻²⁾ with a torx bit.



4. Pull front of panel away from the ski as pictured below and remove.



5. Undo clips⁽³⁻⁸⁾ and bolts⁽⁹⁻¹¹⁾ shown below.







Australia: 10B 354 Brisbane Rd Arundel QLD 4214 Phone: +61 7 5563 1031 info@worx.com.au | worx.com.au United States: 9251 Orco Parkway Unit G, Riverside CA 92509 Phone: (951) 684-9679 info@worxracingusa.com | worxracingusa.com **6.** Unclip and disconnect the cooling fluid tank from the ski.




7. Undo bolts⁽¹²⁻¹⁷⁾ pictured below and remove plastic.



8. Undo and retain hose clamps pictured below ⁽¹⁸⁻²⁰⁾



9. Remove Intake Hose and breather hose.

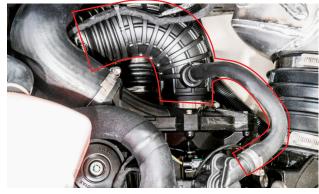


Australia: 10B 354 Brisbane Rd Arundel QLD 4214 Phone: +61 7 5563 1031 info@worx.com.au | worx.com.au

10. Fit the breather filter as pictured using the provided hose clamp.



11. Fit the supplied silicon hose to the supercharger using the OEM hose clamp.

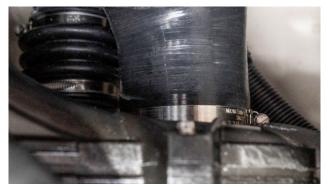

12. Assemble the pod and air filter adaptor with bracket as pictured below. With the pod facing forward, attach the bracket to the left most position on the air filter adaptor.





United States: 9251 Orco Parkway Unit G, Riverside CA 92509 Phone: (951) 684-9679 info@worxracingusa.com | worxracingusa.com **13.** Replace the plastic top piece and attach the bracket to the ski using the OEM bolts.



14. Connect the adaptor to the silicon hosing and use the hose clamp supplied to tighten. Then reclip in the coolant tank.



15. Ensure all connections are tight and secure before reinstalling all panels and seat.

Australia: 10B 354 Brisbane Rd Arundel QLD 4214 Phone: +61 7 5563 1031 info@worx.com.au | worx.com.au