

ST3 AIR FILTER INSTALLATION

Part No. WR04034/8-ST3

Suits Models:
• ST3 MODEL SKIS

Parts Supplied:

- WR04034/8 4" Seadoo 4-TEC Supercharger Adaptor
- Billet Air Filter Bracket
- 4" Air Filter
- 1" Air Filter
- 1" Hose Clamp
- 3 x 4" Hose Clamps
- WR04034-9 Mounting Bracket
- 550mm of Air Filter Hose
- 2 x M6 x 20mm Button Head Bolts
- 2x M6 Washers
- 2 x M6 Nyloc Nuts
- 2 x M6 x 20mm Cap Head Bolts

Tools Required:

- T27 Torx Bit
- Flat Blade Screwdriver
- Electric Drill
- 6mm Drill Bit
- T27 Torx Bit
- 4mm Hex Key
- 5mm Hex Key
- 10mm Spanner

IMPORTANT: READ ALL INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION


INSTALLATION INSTRUCTIONS:

1. Make sure ski is secure and on a flat surface. Remove lanyard and disconnect battery.
2. Pull the rear plastic and seat housing off the ski.
3. Undo and remove the labelled bolts⁽¹⁻¹¹⁾ with a torx bit.
6. Fit the WORX supercharger adaptor. Add Loctite to 2 bolts and secure.

TIP have the adapter in a 45-degree angle while putting the first bolt in enough so that it won't fall out, then spin the adaptor around and put the second bolt in before tightening both.




4. Disconnect engine breather hose from intake and OEM air intake hose. Retain OEM Hose clamps.
7. Connect the 4" adaptor to the mounting bracket before fitting to the ski. For best fit we recommend putting it in the left positioning point on the adaptor.

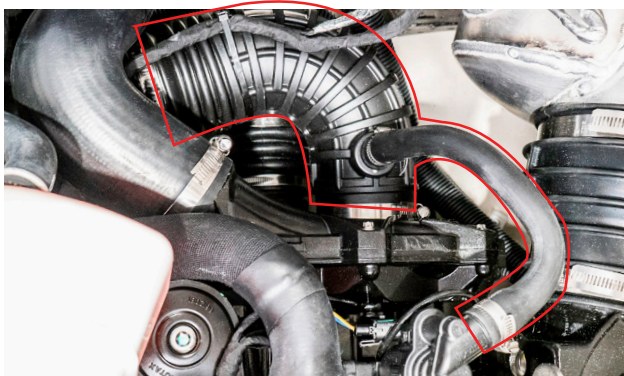


8. Drill out the holes needed for the mounting the bracket using a 6mm drill bit.

Drawing a line between the centre of the two back seat support mounting holes on the right side of the ski, the first hole should be drilled 50mm from the centre of the front hole, and the second drilled 82mm from the first. (As pictured below).

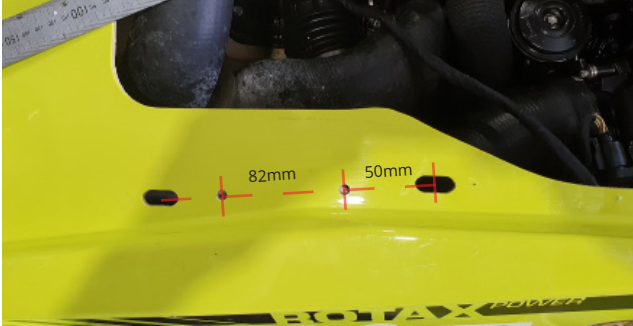


9. Connect the hose to the supercharger adaptor and tighten hose clamp.

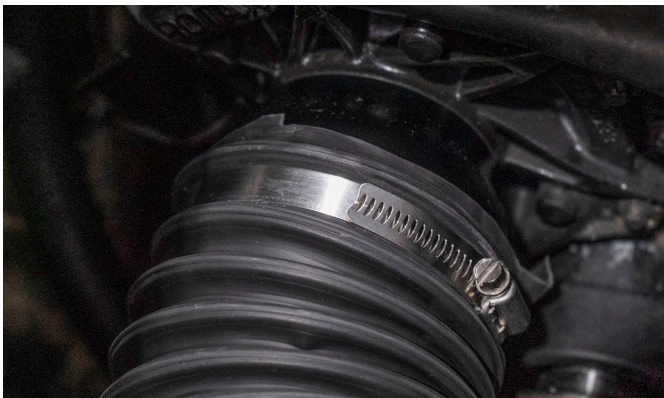

10. Connect the other side of the hose to the 4-inch adaptor, tightening with a hose clamp.

11. Connect the pod filter to the other side of the adaptor and secure with a hose clamp.

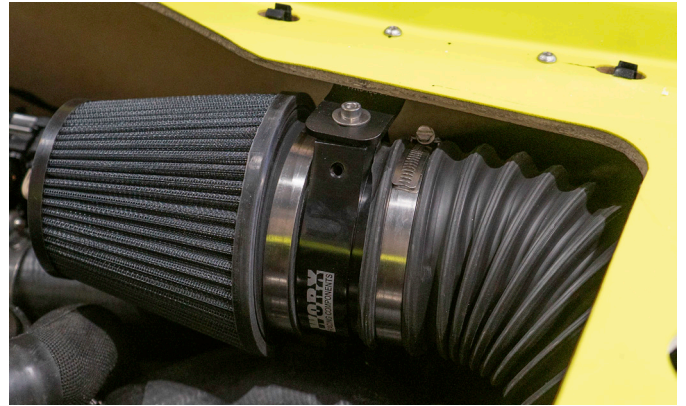

12. Place the breather filter on the breather outlet and secure with 1" hose clamp.

