

# **WORX**

## **RACING COMPONENTS**

### WORX RACING YAMAHA 1.8 BOV KIT

**PART # - WR04021**

**MODELS: YAMAHA 1.8 SUPERCHARGERD MODELS**

### **INSTALLATION INSTRUCTIONS**


**IMPORTANT: READ ALL INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION**

- 1- Make sure ski is secure and on a flat surface. Remove lanyard and disconnect battery.
- 2- Remove OEM supercharger hose between supercharger and intercooler (pic 1). Retain OEM hose clamps.
- 3- Fit WORX Racing BOV into location (pic 2) and secure with OEM hose clamps. Position vent spout of BOV facing down towards tank and secure with hose clamp provided.
- 4- Remove OEM map line from manifold and map sensor (pic3a/3b). Cut in the centre of the hose and fit supplied 'T piece'. Secure with zip ties.
- 5- Refit OEM map line with 'T' piece to map sensor and intake manifold. (pic 4)
- 6- Run supplied map line along fuel rail (pic 5) and fit end to top of BOV map port (pic 6). Secure with zip ties. (You can trim map line to suit if required)
- 7- Check all clamps are secure. Run ski on flusher and check for any boost leaks.

Thank you for purchasing **Worx Racing components** products. We firmly believe that **Worx Racing Components** products are among the finest watercraft parts available. A great deal of time and effort has gone into the design and development of this product to ensure that it will perform to the highest standard and that installation is a relatively straight forward and simple procedure. If you have any questions or comments on the performance and/or installation of our products please contact us at the numbers listed on page one or through your local **Worx** dealer.

8B 354 Brisbane Rd Arundel QLD 4214 Phone: +61 7 5563 1031


[www.worx.com.au](http://www.worx.com.au) / [info@worx.com.au](mailto:info@worx.com.au)

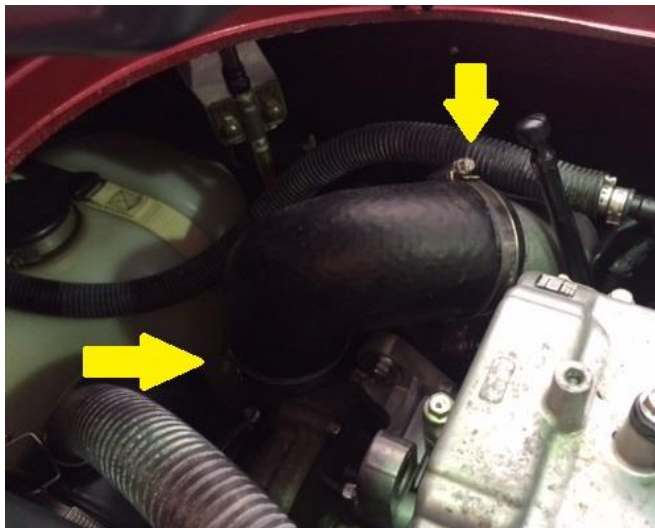


Pic 1



Pic 2

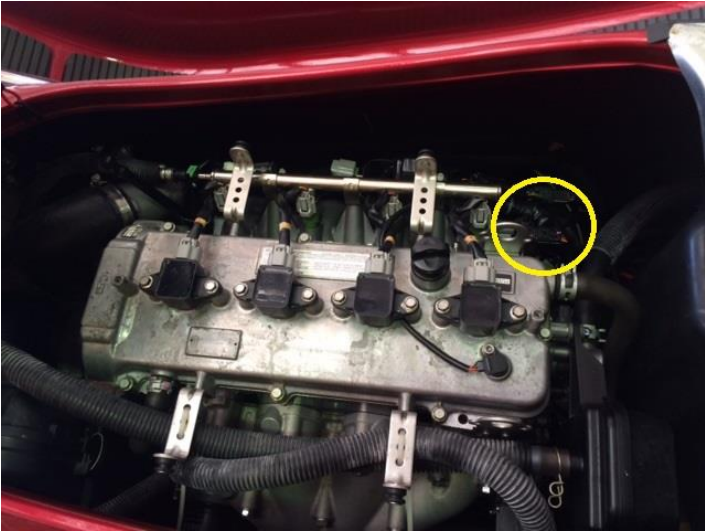


Pic 3a

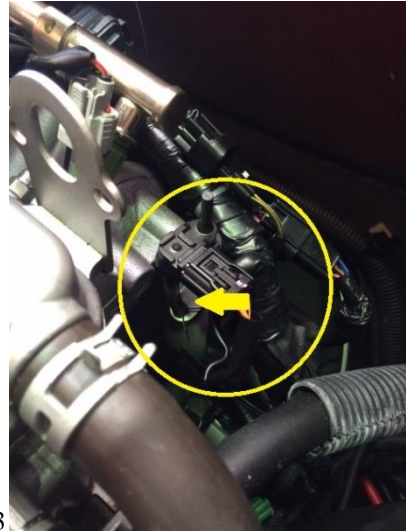

Pic 3b



Pic 4

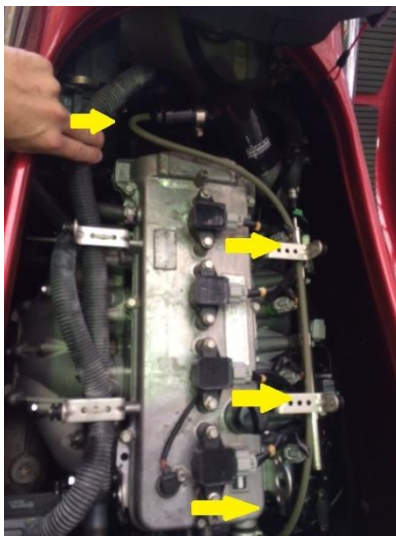

Pic 5



Pic 6



Pic 7