
## AII CPM



Note: Clean surface of the product before transfer! Leave a small unprinted border around the image!

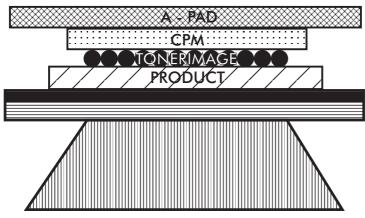



Strip off the backing paper after cooling down. Tip: Apply extra heat for glossy finish and higher durability!

Note: For certain Substrates/Materials/Products you can use the T.Pad or the Application Sponge instead of the A-Pad. This will allow to reduce pressing time. Please consult your MagicTouch Support Team for more details.

## **PRINT**





## **PRESS**







## **PEEL**

