T.One



Important: Pre-press the garment 3 to 5 seconds and allow time for all moisture to evaporate! Any moisture left in the fabric will have a negative effect on the performance of the transfer process.


















80 PSI HIGH

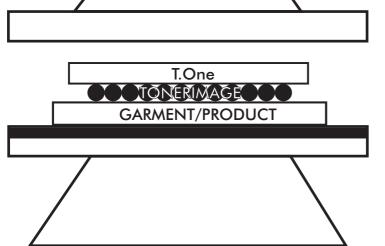

Note: Wait a few seconds before stripping off the base paper. Strip liner <u>right on the heat press</u> in one slow steady motion in a very shallow angle!

Important for Washing Durability of the garment: Cover the image with T.Seal and press again for 15 seconds for the final seal!

Note: First wash after minimum 48 hours only!



