




INSTALLATION INSTRUCTIONS

Armorlite® Rear Cargo Seatback

Vehicle Application
Jeep Wrangler JK 4-Door

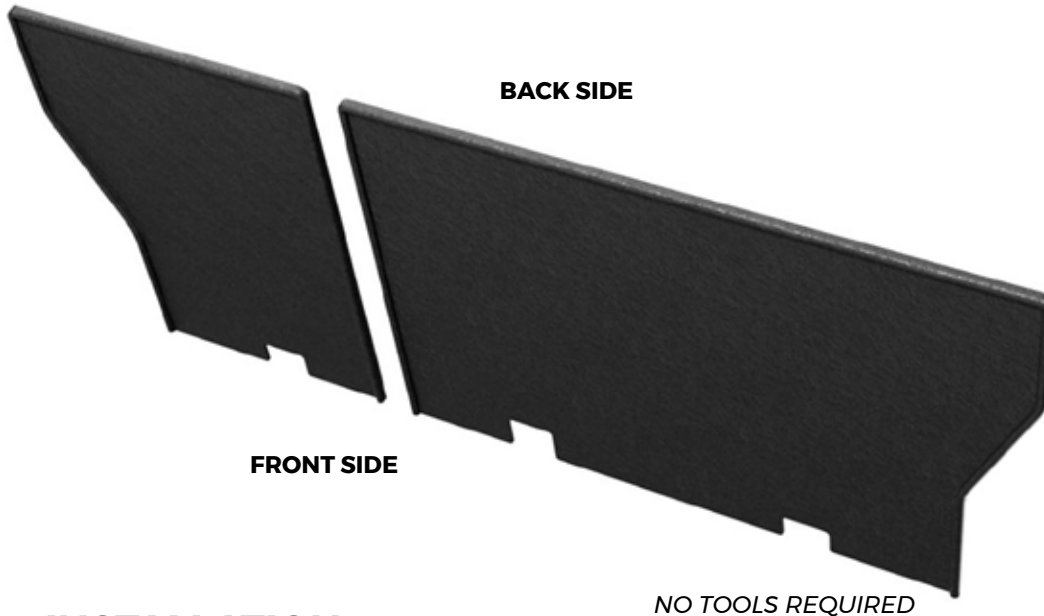

BEFORE INSTALLATION


- 1 Armorlite seatback covers to be installed over existing factory seatback material. DO NOT attempt to remove factory seat covers.
- 2 Please make sure all contents are removed from your rear cargo area before installation.
- 3 Carefully clean cargo seatback area to ensure any dust, pet hair and dirt is removed.
- 4 DO NOT INSTALL in any other vehicle make or model.
- 5 Warnings label and instructions should be kept with the owner's manual of your vehicle.
- 6 Ensure the car is in "Park," and the emergency brake is applied.

INSTALLATION

- 1 Fold down both of your back seats.
- 2 Before applying the Velcro, lay the seatback panels in place to familiarize yourself with their location and fit.
- 3 Cut the Velcro strips to the lengths shown in the diagram.
- 4 Following the layout guide remove the paper backing from the Velcro and place the adhesive side of the Velcro against the Armorlite seatback as shown in the illustration and press down firmly. Take special care to align Velcro as it is a 1 time use adhesive.
- 5 Holding the Armorlite seatback panel away from the back of your seat. Line up the seat back panel with the factory fabric seam that runs along the top of your back seat. Attach the Armorlite seatback with the top Velcro 1st then work the panel down to the bottom, once in place apply firm pressure where the Velcro is located to ensure it is secured in place.

ATTENTION: Please take your time as the Velcro can pull away the fibers of your seat back if you attempt to remove and readjust.

LAYOUT GUIDE

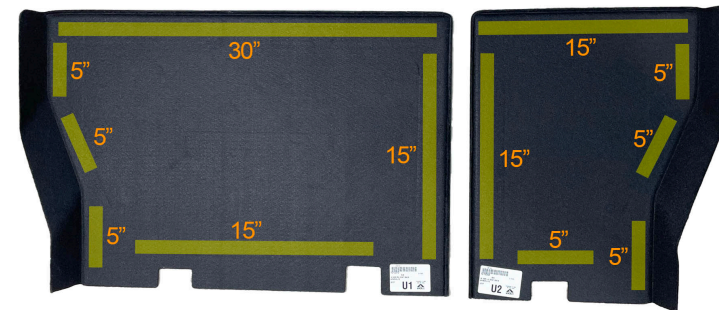

NEED SUPPORT?

Visit www.GoArmorlite.com/support
View Full Warranty at www.GoArmorlite.com/warranty

CLEANING Use a damp cloth or sponge with soap and water to clean the front side of the seatback cover.