



# Hardware Installation Guide

Kit Number: KH2x4

## Hardware

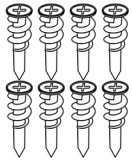

**SKU: AN6**  
#6 dry wall  
anchor (A)

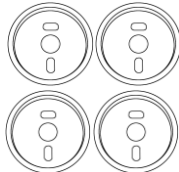

**SKU: BR1**  
bracket  
(pre-installed on rack)  
(B)



**SKU: SCA6**  
#6 anchor  
screw (C)

(not shown)

towel rack  
(D)



**SKU: HK3/32**  
3/32" Allen wrench  
(E)

## Tools Required




screwdriver



power drill

## Assembly

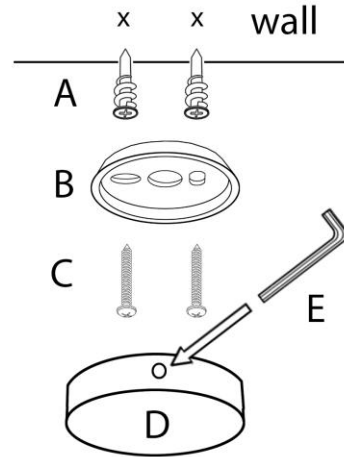

1. Determine wall type (dry wall, wood, concrete, etc.). If dry wall or wood, proceed to next step. If concrete, obtain concrete wall anchors.
2. Determine distance between two vertical racks. Installing 6 – 8" apart works well for most situations.
3. Place towel rack (D) on the wall and mark center of ring on each end where bar will be installed. Repeat for 2<sup>nd</sup> rack beside the first rack, spaced as discussed in previous step.
4. Remove four brackets (B) from hardware with Allen wrench (E).
5. Place each bracket on wall with center hole over previous mark and then add two additional marks for oblong side holes. These marks are where the anchors will be located. Ensure the bracket is oriented as shown in diagram.
6. If installing on dry wall, screw in dry wall anchors (A) into marked spots. If installing on wood, pre-drill holes for anchor screws (C).
7. Align bracket with holes on wall and secure with anchor screws.
8. Place hardware over brackets and secure set screw with Allen wrench.

**Your installation is complete.**