

## **WORK INSTRUCTIONS FOR INSTALLING FROG SHIELDS**

### **Tools required**

- 2- 5/32 inch (4mm) Allen wrenches

The following steps are how to install Frog Legs Shield.

Step 1. Remove current wheel or if there is no wheel proceed to the next step.


Step 2. Below are the only components you will use. There is no spacer between the fork and the wheel, only the Frog Shield.



Step 3. Place one Frog Shield over one bearing



Step 4. Place the other over the other side and and pinch between your fingers.

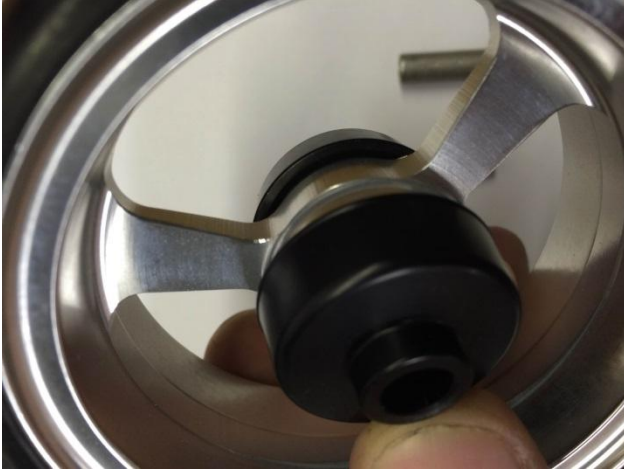

Step 5. Slide the wheel with each Frog Shield between the fork to the desired position. Once the holes are aligned slide the axle pin through and tighten with the 4mm Allen wrenches. Give the wheel a spin to make sure it spins freely.

