



INSTRUCTIONS FOR MEASURING SPECIALIZED HEADTUBE TO DETERMINE HEADSET COMPATIBILITY

- 1) DISASSEMBLE THE HEADSET, REMOVE UPPER BEARING FROM FRAME
- 2) USE DEPTH BLADE ON A CALIPER TO MEASURE FROM THE TOP OF THE HEADTUBE TO THE CORNER WHERE THE 45 DEGREE TAPER STARTS

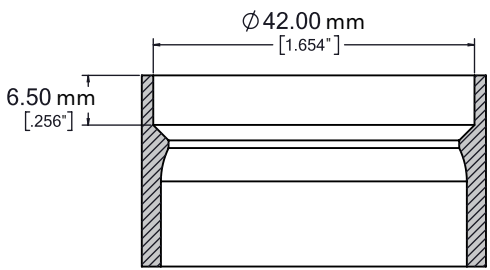

SECTION VIEW OF SPECIALIZED HEADTUBE

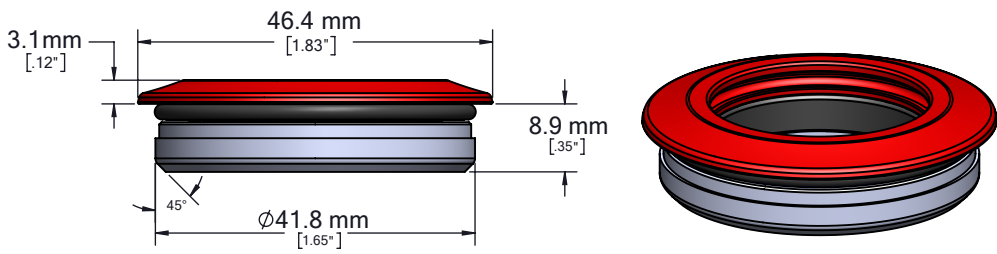

WOLF TOOTH HEADSET MEASUREMENT FOR SPECIALIZED

If a caliper is unavailable this guide can be printed at 100%. Use the scale below to verify scale.



METRIC UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MILLIMETER TOLERANCES: 3 PLACE 2 PLACE 1 PLACE ANGLES ±0.020 ±0.10 ±0.3 ±1°		DIMENSION FORMAT MM.MM (IN.IN) (ID#) KEY DIMS OUTLINED QC ID# IN ROUND BAL.	THIRD ANGLE PROJECTION DRAWN BY: KJA DO NOT SCALE DWG	SPECIALIZED HEADTUBE
PROPRIETARY & CONFIDENTIAL	MATERIAL:	SCALE 1:1	WEIGHT: SHEET 1 OF 1	