

Hypertherm

RO Set-up Guide

This guide shows you the proper steps needed to successfully set up your RO System prior to start-up.

Written By: Ryan Engelhardt



Step 1 — RO Set-up Guide





- Connect the incoming water. Available connections include a female garden hose fitting, 3/4" NPT, and 1" NPT.
- ⓘ Verify water supply complies with minimum system requirements.

Step 2



- Connect the "permeate" line to the bulkhead fitting in the water storage tank.

Step 3

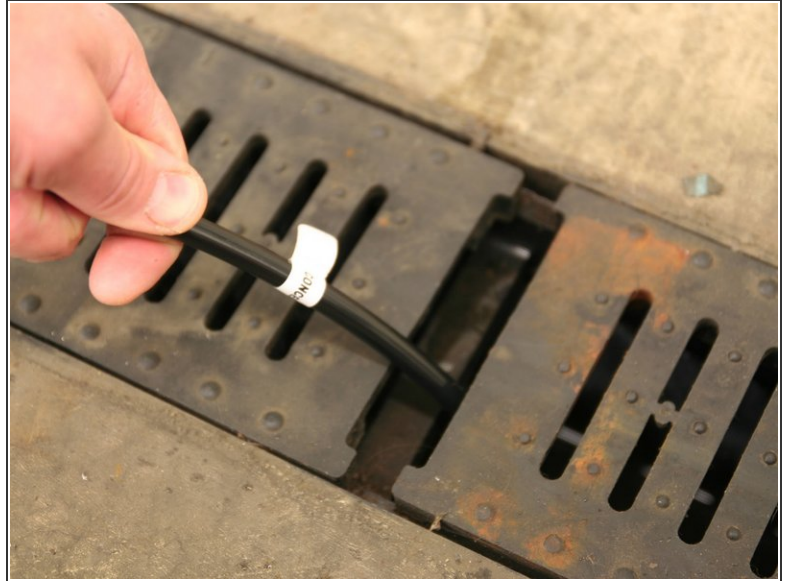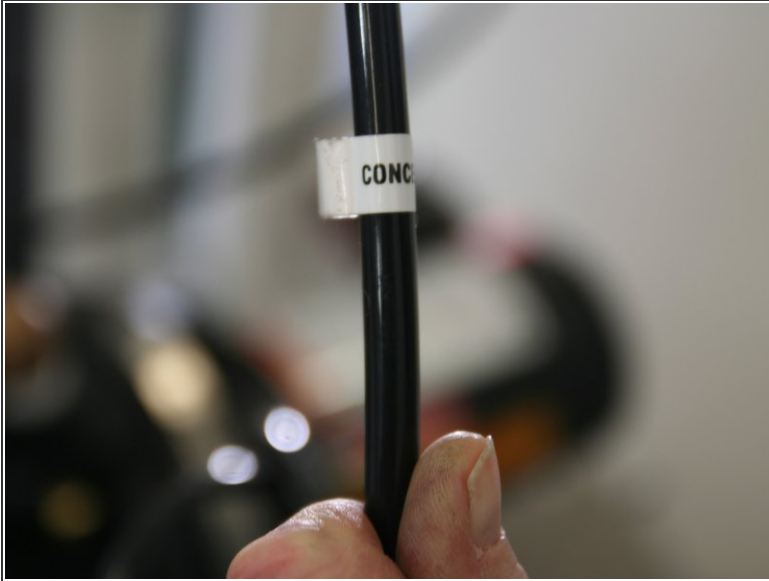


- Route the “concentrate” line to a drain.

Step 4



- Connect the union fitting from the boost pump to the atmospheric tank.
- Attach the grey hose to the boost pump.
- Attach the other end of the supply hose to your intensifier pump.

Step 5

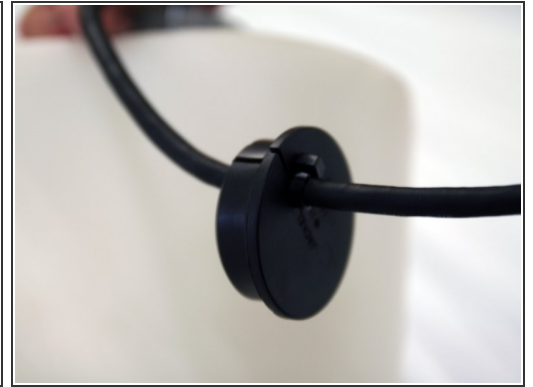


- Drop the float gauge into the tank and bring the plug end through the grey opening at the top. Attach the rubber stopper to the cord and reinsert into the grey opening. Make sure to adjust the cord to be 10" from top of tank to metal bullet.

Step 6



- Plug the cord for the RO system into the back side of the float gauge plug.

 Before proceeding further, please refer the RO System "Quick Start-up Guide". If the guide was not included with your system please contact an AccuStream representative for assistance. 866-566-7099