



AUTOSTOP ELIMINATOR

Installation Instructions 2015-2019 Ford Focus



Notice

This product is an aftermarket accessory and not designed by the vehicle's manufacturer for use on this vehicle. As such, the buyer assumes the risk of damage caused to the vehicle during installation or use of this product.

Recommended Tools

- T25 Torx Screwdriver
- (Optional) Small pick tool and/or flat screwdriver
- (Optional) Non-marring trim removal tool (tool can be smaller than the one pictured below)
- (Optional) Painter's tape.



Estimated installation time:

20 Minutes

Installation

1. Ensure the engine is off and the parking brake is set.
2. Remove the small horizontal trim panel directly above the HVAC controls. Then, disconnect the wiring harness. A small pick or trim removal tool may help to release the clips. It's small and delicate, so take your time to not damage the panel. Painter's tape can be used to protect the panel from light scratches.



3. Release the rear side of the right-hand finish panel so that the rear-most clip is fully released. You may remove the entire panel if you wish, but releasing the clip shown is all that is necessary. If a non-marring trim tool is used, protect any trim with painter's tape before contact with the tool.



Installation Instructions for 2015-2019 Ford Focus

- Starting from the rear, lift outward and upward gently on the floor console trim panel. The clips on the rear release upward while the frontmost clips release rearward. A small non-marring trim removal tool may be useful for releasing the rear clips. (During this install, we removed the shifter knob and boot for easier switch access, but the installation can be accomplished without this optional step.)




- Remove the three T25 torx screws from the floor console finish panel.



6. **Important:** If bends are required to the Autostop Eliminator wiring, keep pressure between the wire and the connector housings to ensure the wires are not pulled out of the housing. If the wires are accidentally pulled loose from the housing, do not install the device and contact us for a free replacement.

Connect the Autostop Eliminator between the auto stop-start switch assembly and the vehicle wiring harness. (In this install, the shifter boot was removed in order to fully release the finish panel and provide a better view of the switch. If you haven't removed the boot, reach under the panel to perform this step.)

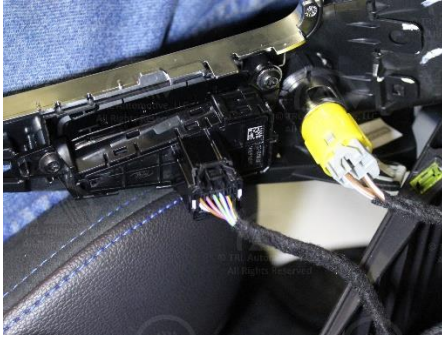

7. Reinstall the panels by traversing the instructions in reverse order.

This completes the Autostop Eliminator installation. Please remember that the Autostop Eliminator functions to restore the last state. Assuming OFF is your preference, you may need to press the button once to turn auto start-stop OFF. After that it will stay OFF.

