


<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

- REMOVE: Seats, side panels, and tail sections.
- REMOVE: Rear fender (unplug wiring to turn signals and license light).
- ADHERE: Supplied License Light to correct License Light Mount and route wires as shown in *FIG (A).
- MOUNT: Your license plate (use 6x10 allen bolts in bottom holes. 6x12 allen bolts in top holes and through Signal Brackets). *FIG (A)
- MOUNT: Turn Signals to Signal Brackets.
- INSERT: 6x20 Allen Bolt and route wires as shown in *FIG (A).
- FASTEN: Kit to bike with 6x20 Allen Bolt already in place. *NOTE* be careful of wires.
- SECURE: Kit with 6x16 allen bolts in remaining two holes
- CONNECT: Wires and check for proper function
- REPLACE: Tail sections, side panels, and seats

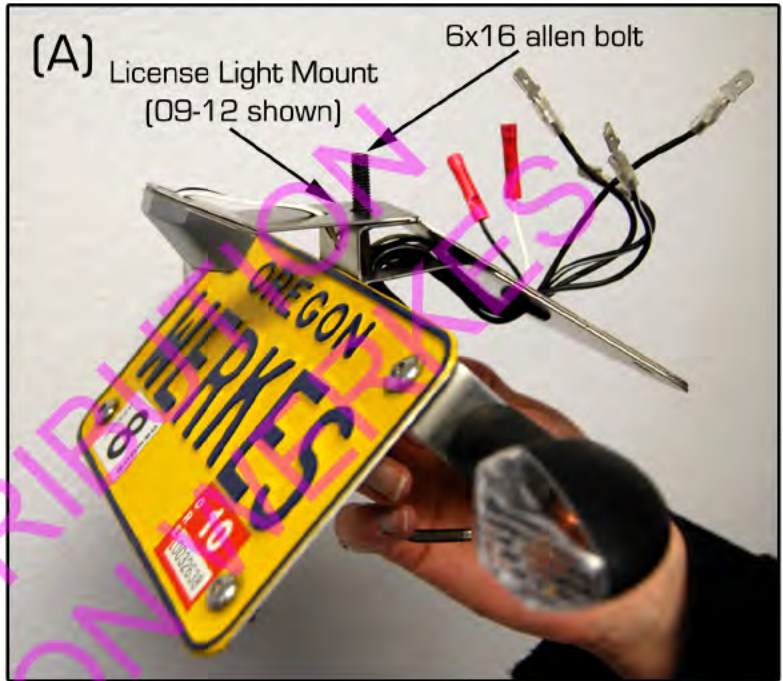

PARTS LIST:

- 1- License Assembly
- 2- Signal Brackets
- 1- 09-12 License Light Mount
- 1- 13-15 License Light Mount
- 1- Pair Signals (S1110-C)
- 1- License Light
- 1- 6x20 Allen Bolt
- 2- 6x16 Allen Bolts
- 2- 6x12 Allen Bolts
- 2- 6x10 Allen Bolts
- 6- 6mm Nuts
- 6- Washers
- 2- Butt Connectors

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.