
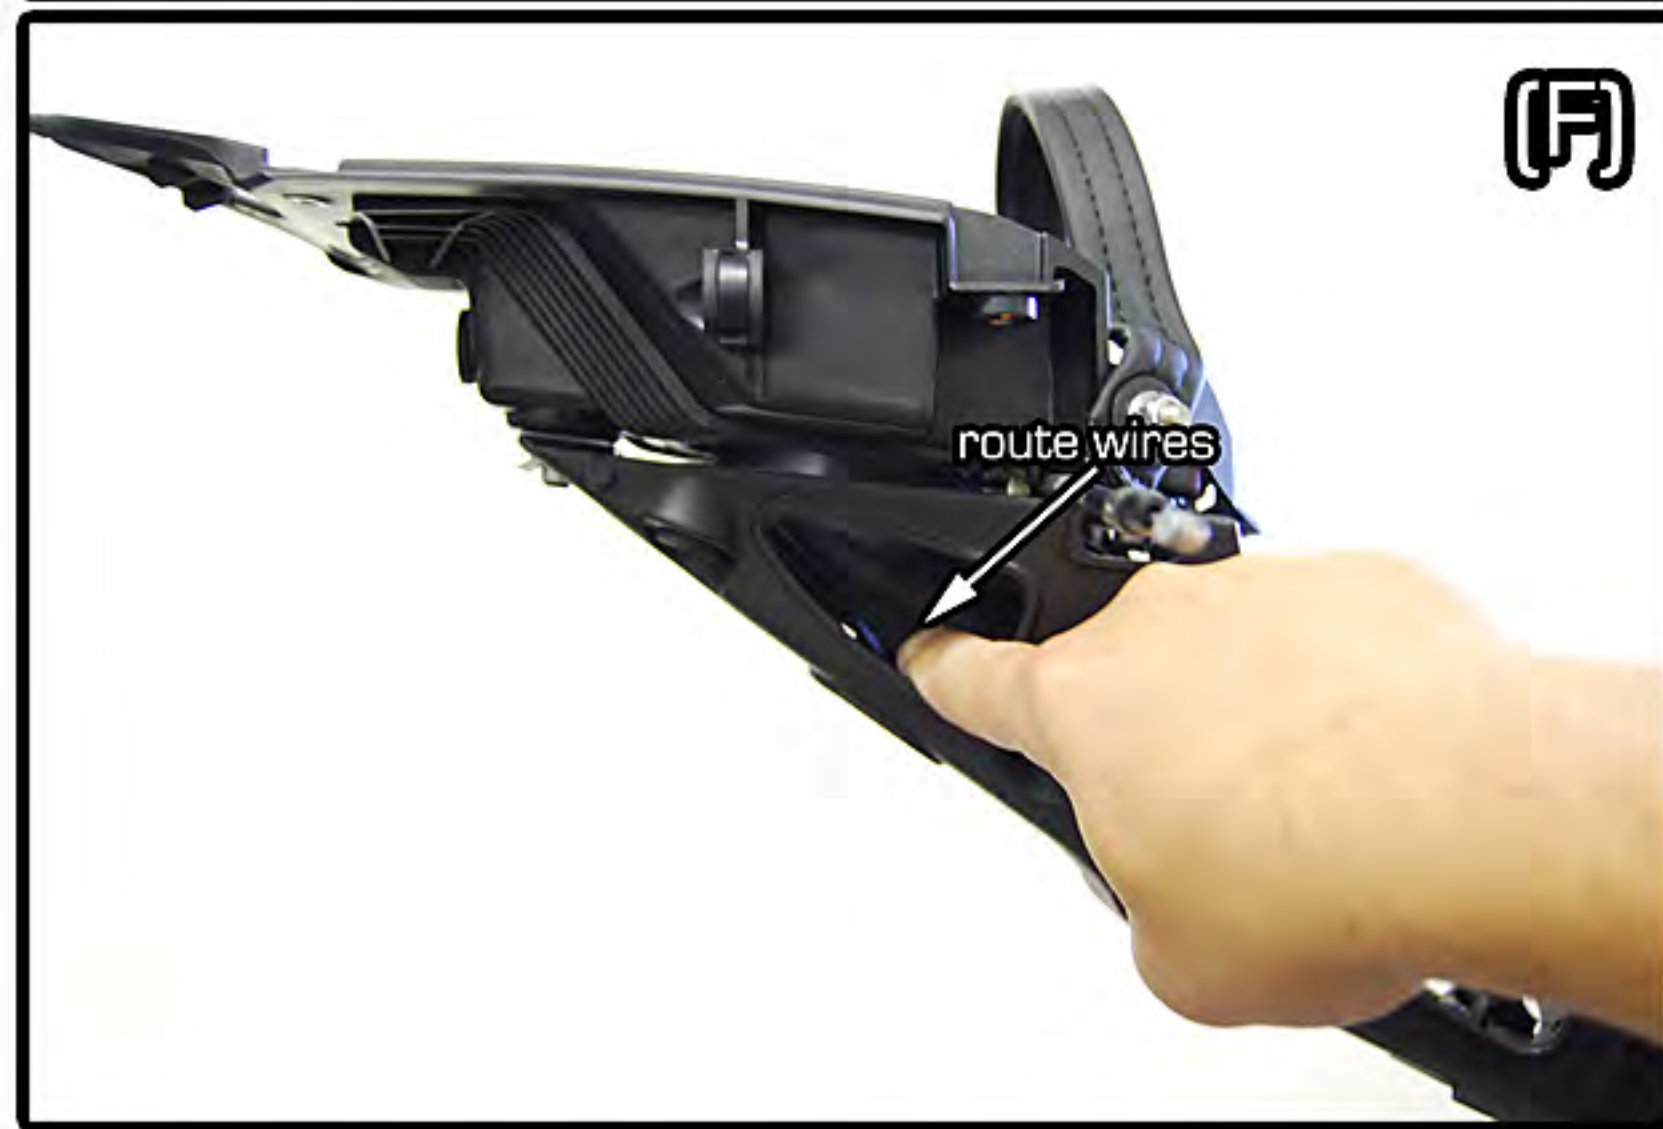
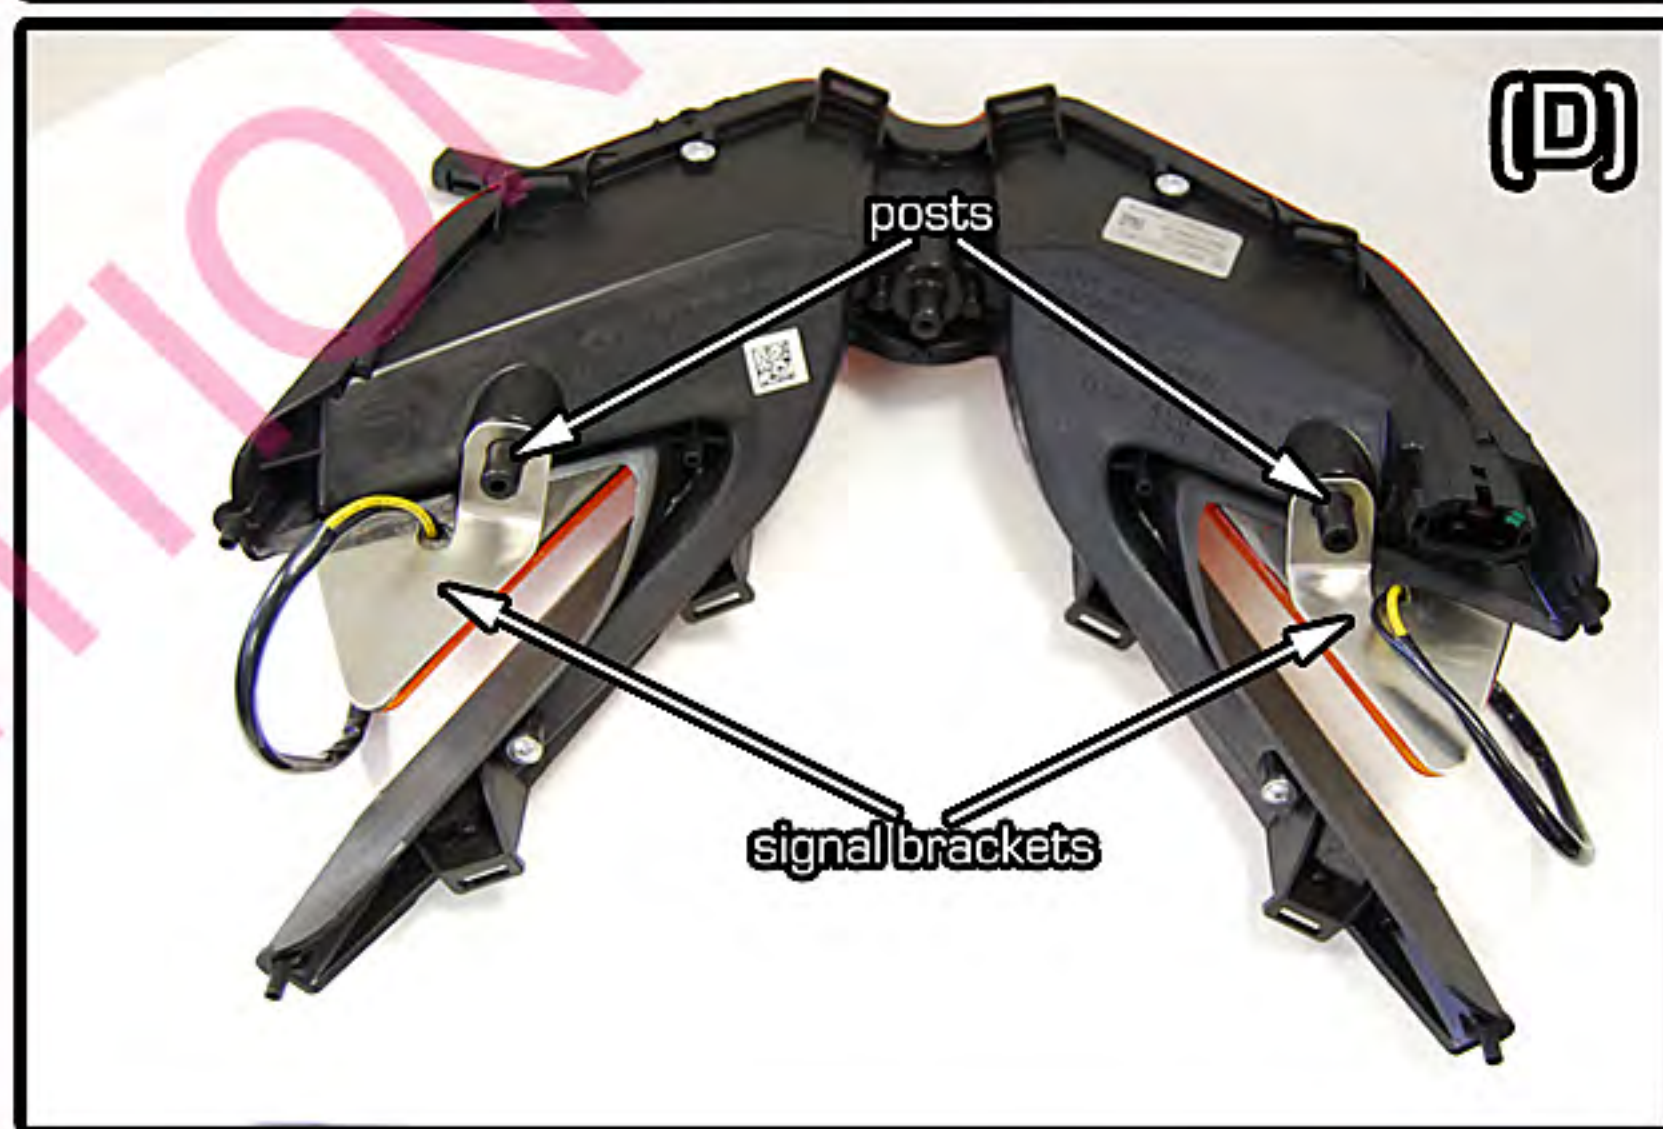
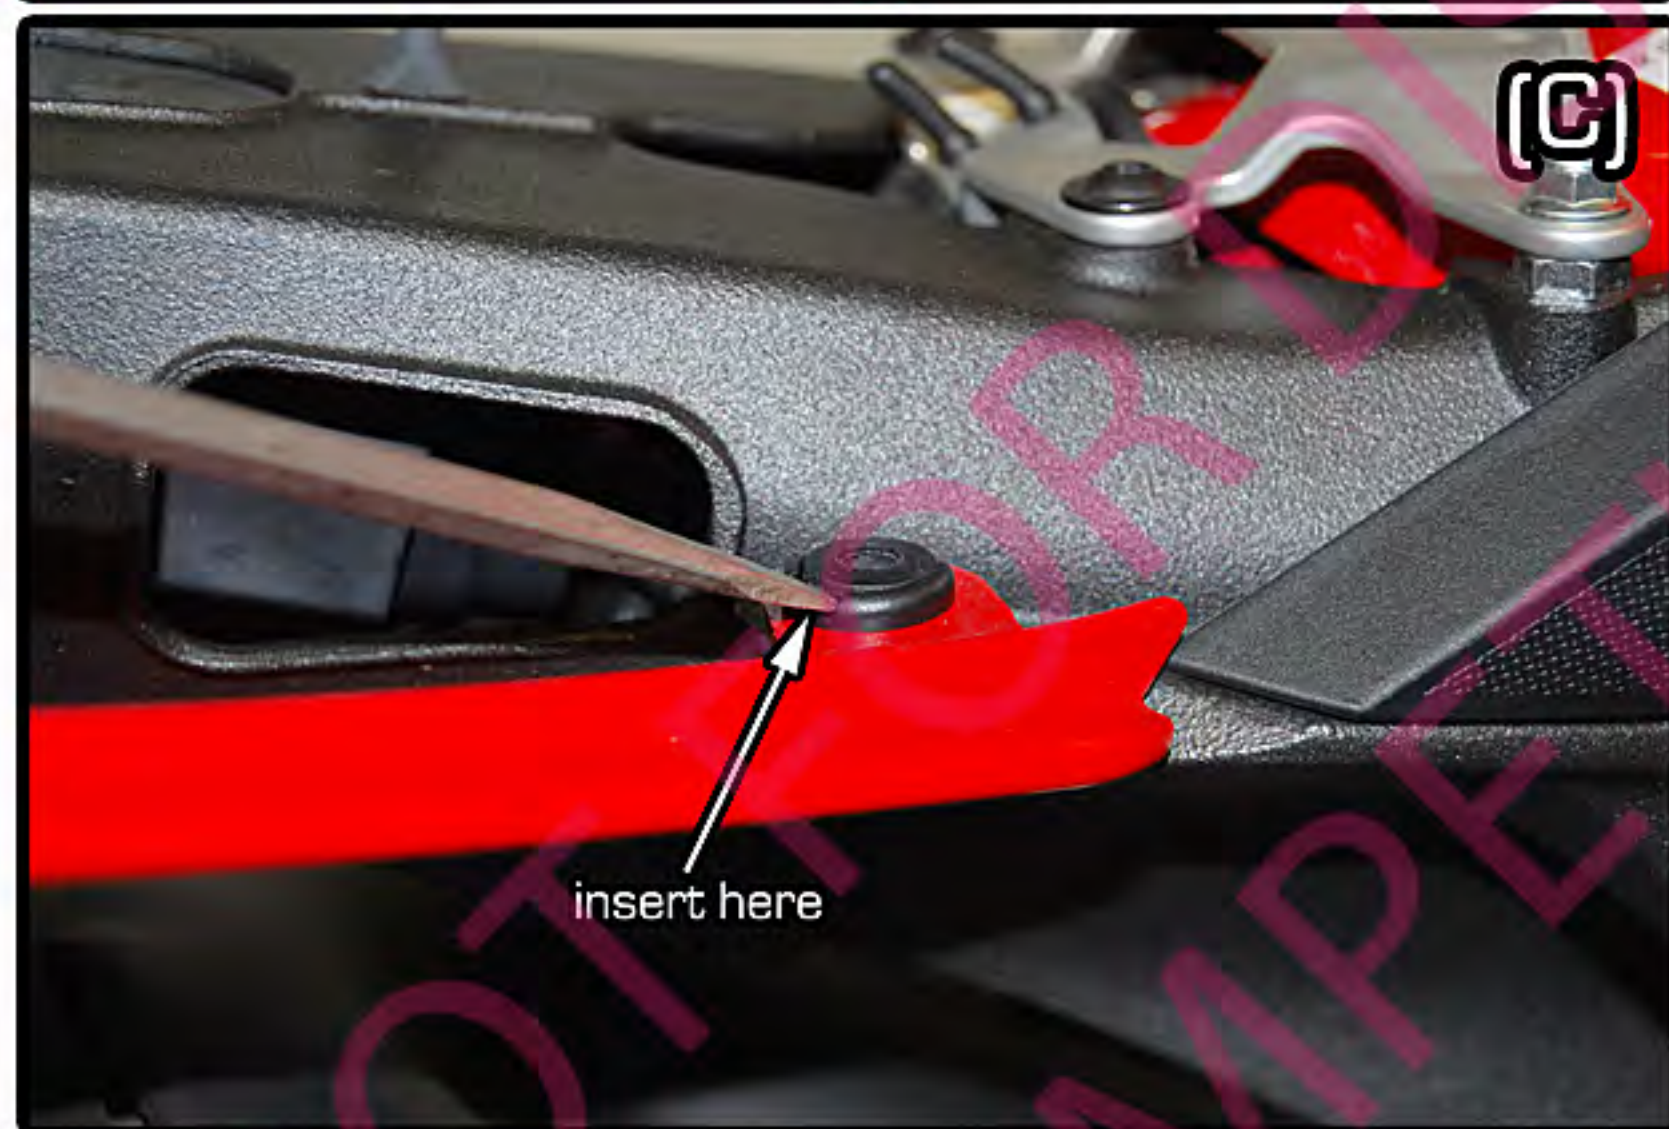
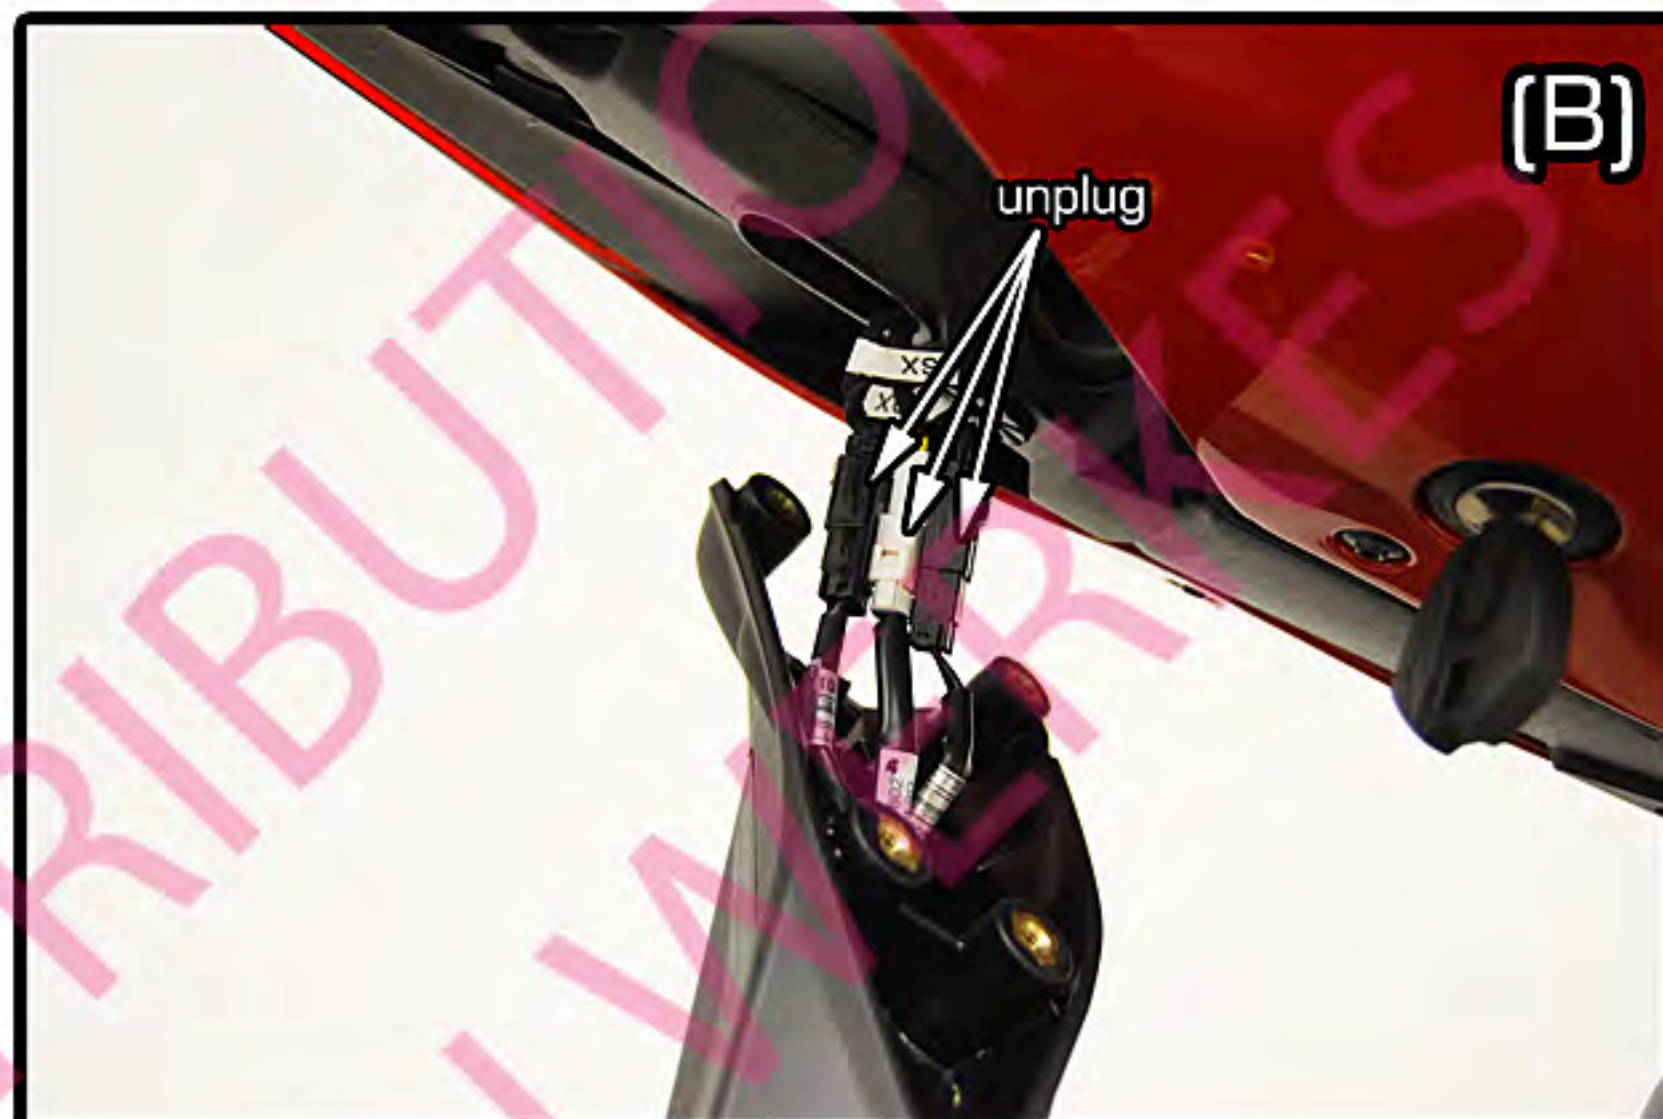


# COMPETITION WERKES

<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

(800)736-2114

## Ducati 1199 Panigale Standard Fender Eliminator

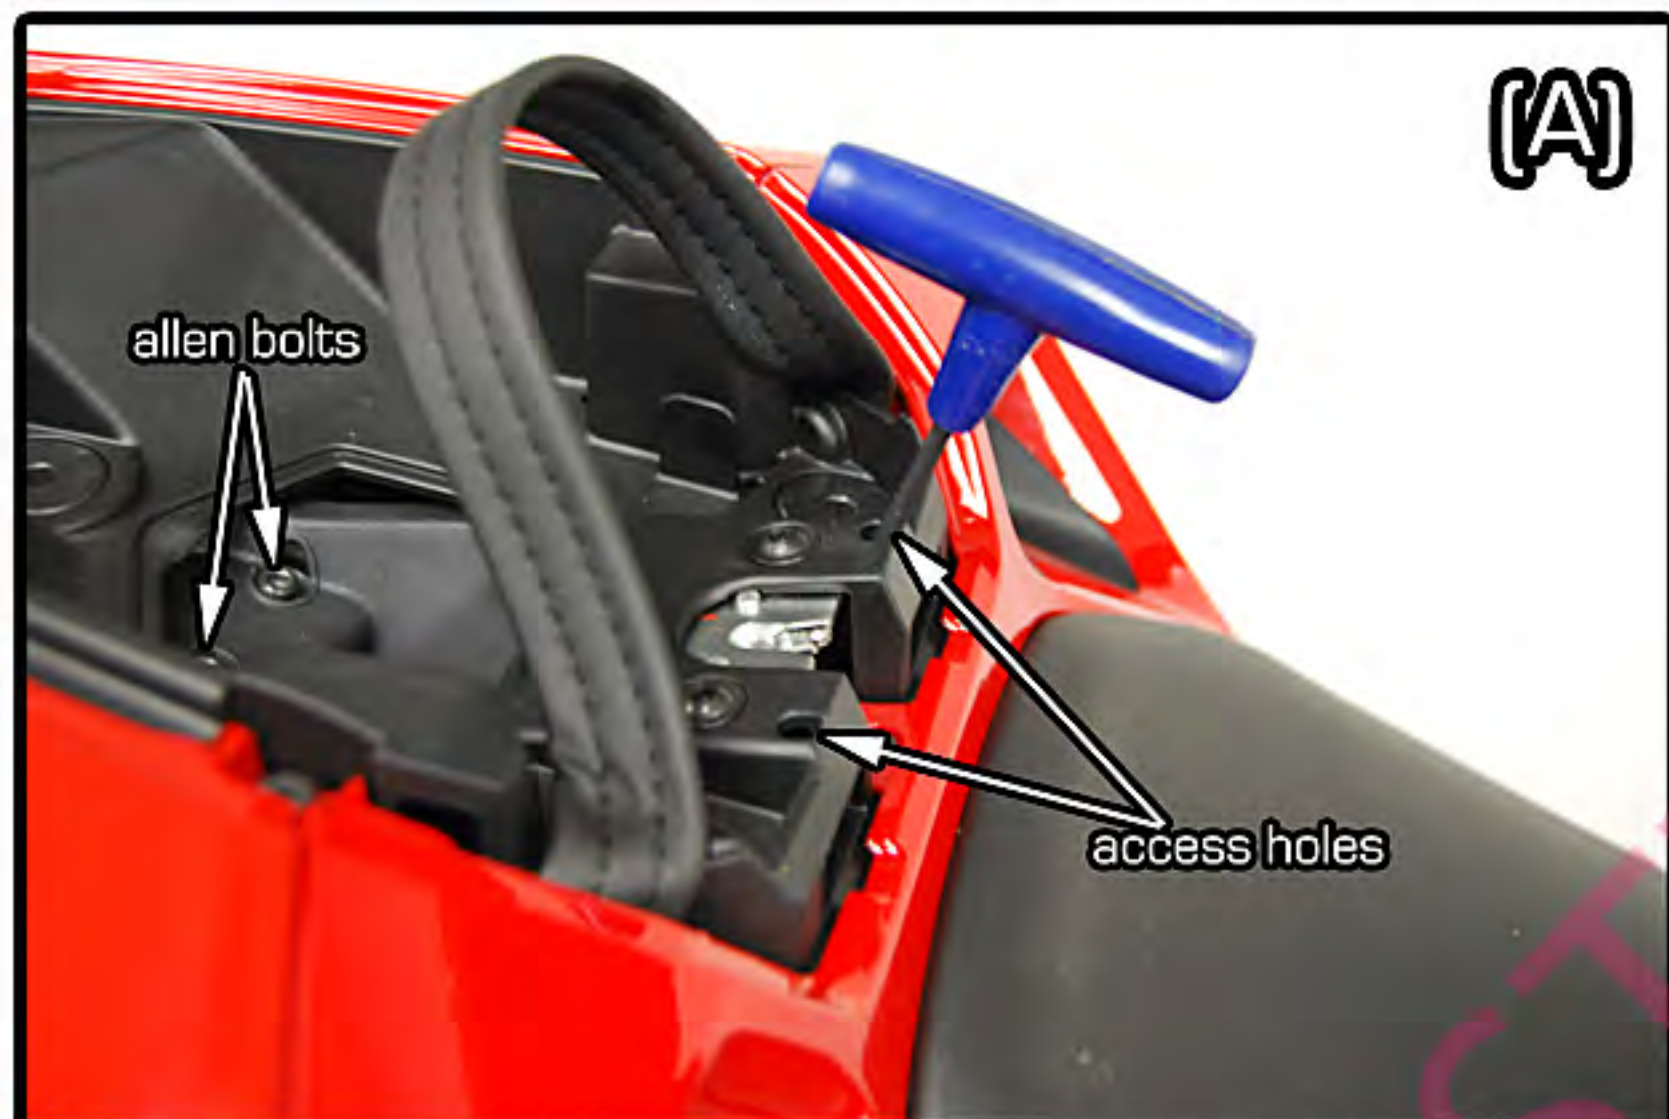

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

1D1199



<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>

**(800)736-2114**


## Ducati 1199 Panigale Standard Fender Eliminator

PARTS LIST: 1- Cover Plate    1- License Pan    1- License Light    1- Pair Turn Signals    2- Turn Signal Brackets  
2- 5x35 Allen Bolts    2- 5mm Nuts    4- 6x10 Allen Bolts    4- 6mm Nuts    6- Washers    2- Butt Connectors

**REMOVAL:** 1) Remove seat [allen bolt] and seat cowl. 2) Remove cover from base of storage area and tool bag inside. 3) Remove rear fender [4- allen bolts in storage area] \*NOTE\* use access holes to get to front two allen bolts \*FIG (A). 4) Unplug wire connectors \*FIG (B). 5) Remove painted bodywork from tail section [7-allen bolts on top, 4-allen bolts on underside, 2- plastic rivets on top, and disconnect seat latch cable] \*NOTE\* FIG (C) insert screwdriver to remove rivets. 6) Remove phillips screw in storage area that secures taillight. 7) Pull taillight/undertail/ & vent tubes (as a unit) off of subframe [unplug wiring]. 8) Remove vent tubes and undertail from taillight.

**ASSEMBLY:** 1) Position Signal Brackets to outer post of taillight \*FIG (D). 2) Adhere Turn Signals to taillight and Signal Brackets \*FIG (E). 3) Secure undertail and vent tubes back to taillight. 4) Adhere License Light to Cover Plate \*FIG (G). 5) Cut white connector from stock fender leaving about 2" of wire. 6) Connect white connector to supplied License Light (black to black, white to yellow) using Butt Connectors.

**INSTALL:** 1) Position taillight/undertail/ & vent tubes back onto subframe routing Turn Signal wires through side and [temporarily] out bottom as shown in \*FIG (F) on each side (plug in taillight wires). 2) Secure taillight with phillips screw. 3) Plug in Turn Signal and License Light wires. Push wires into rubber liner which previously stored the toolbag. 4) Check lighting for proper function. 5) Slightly compress sides of Cover Plate as you slide hook onto inner edge of the obround hole of subframe. 6) Secure Plate Mount and Cover Plate with 2- 5x35 Allen Bolts with 5mm Nuts in storage area. \*NOTE\* tighten until you see the Cover Plate start to flex. 7) Secure license plate using 4- 6x10 Allen Bolts/Washers/ & 6mmNuts. 8) Replace painted bodywork, place toolbag in storage area, replace seat & seat cowl.

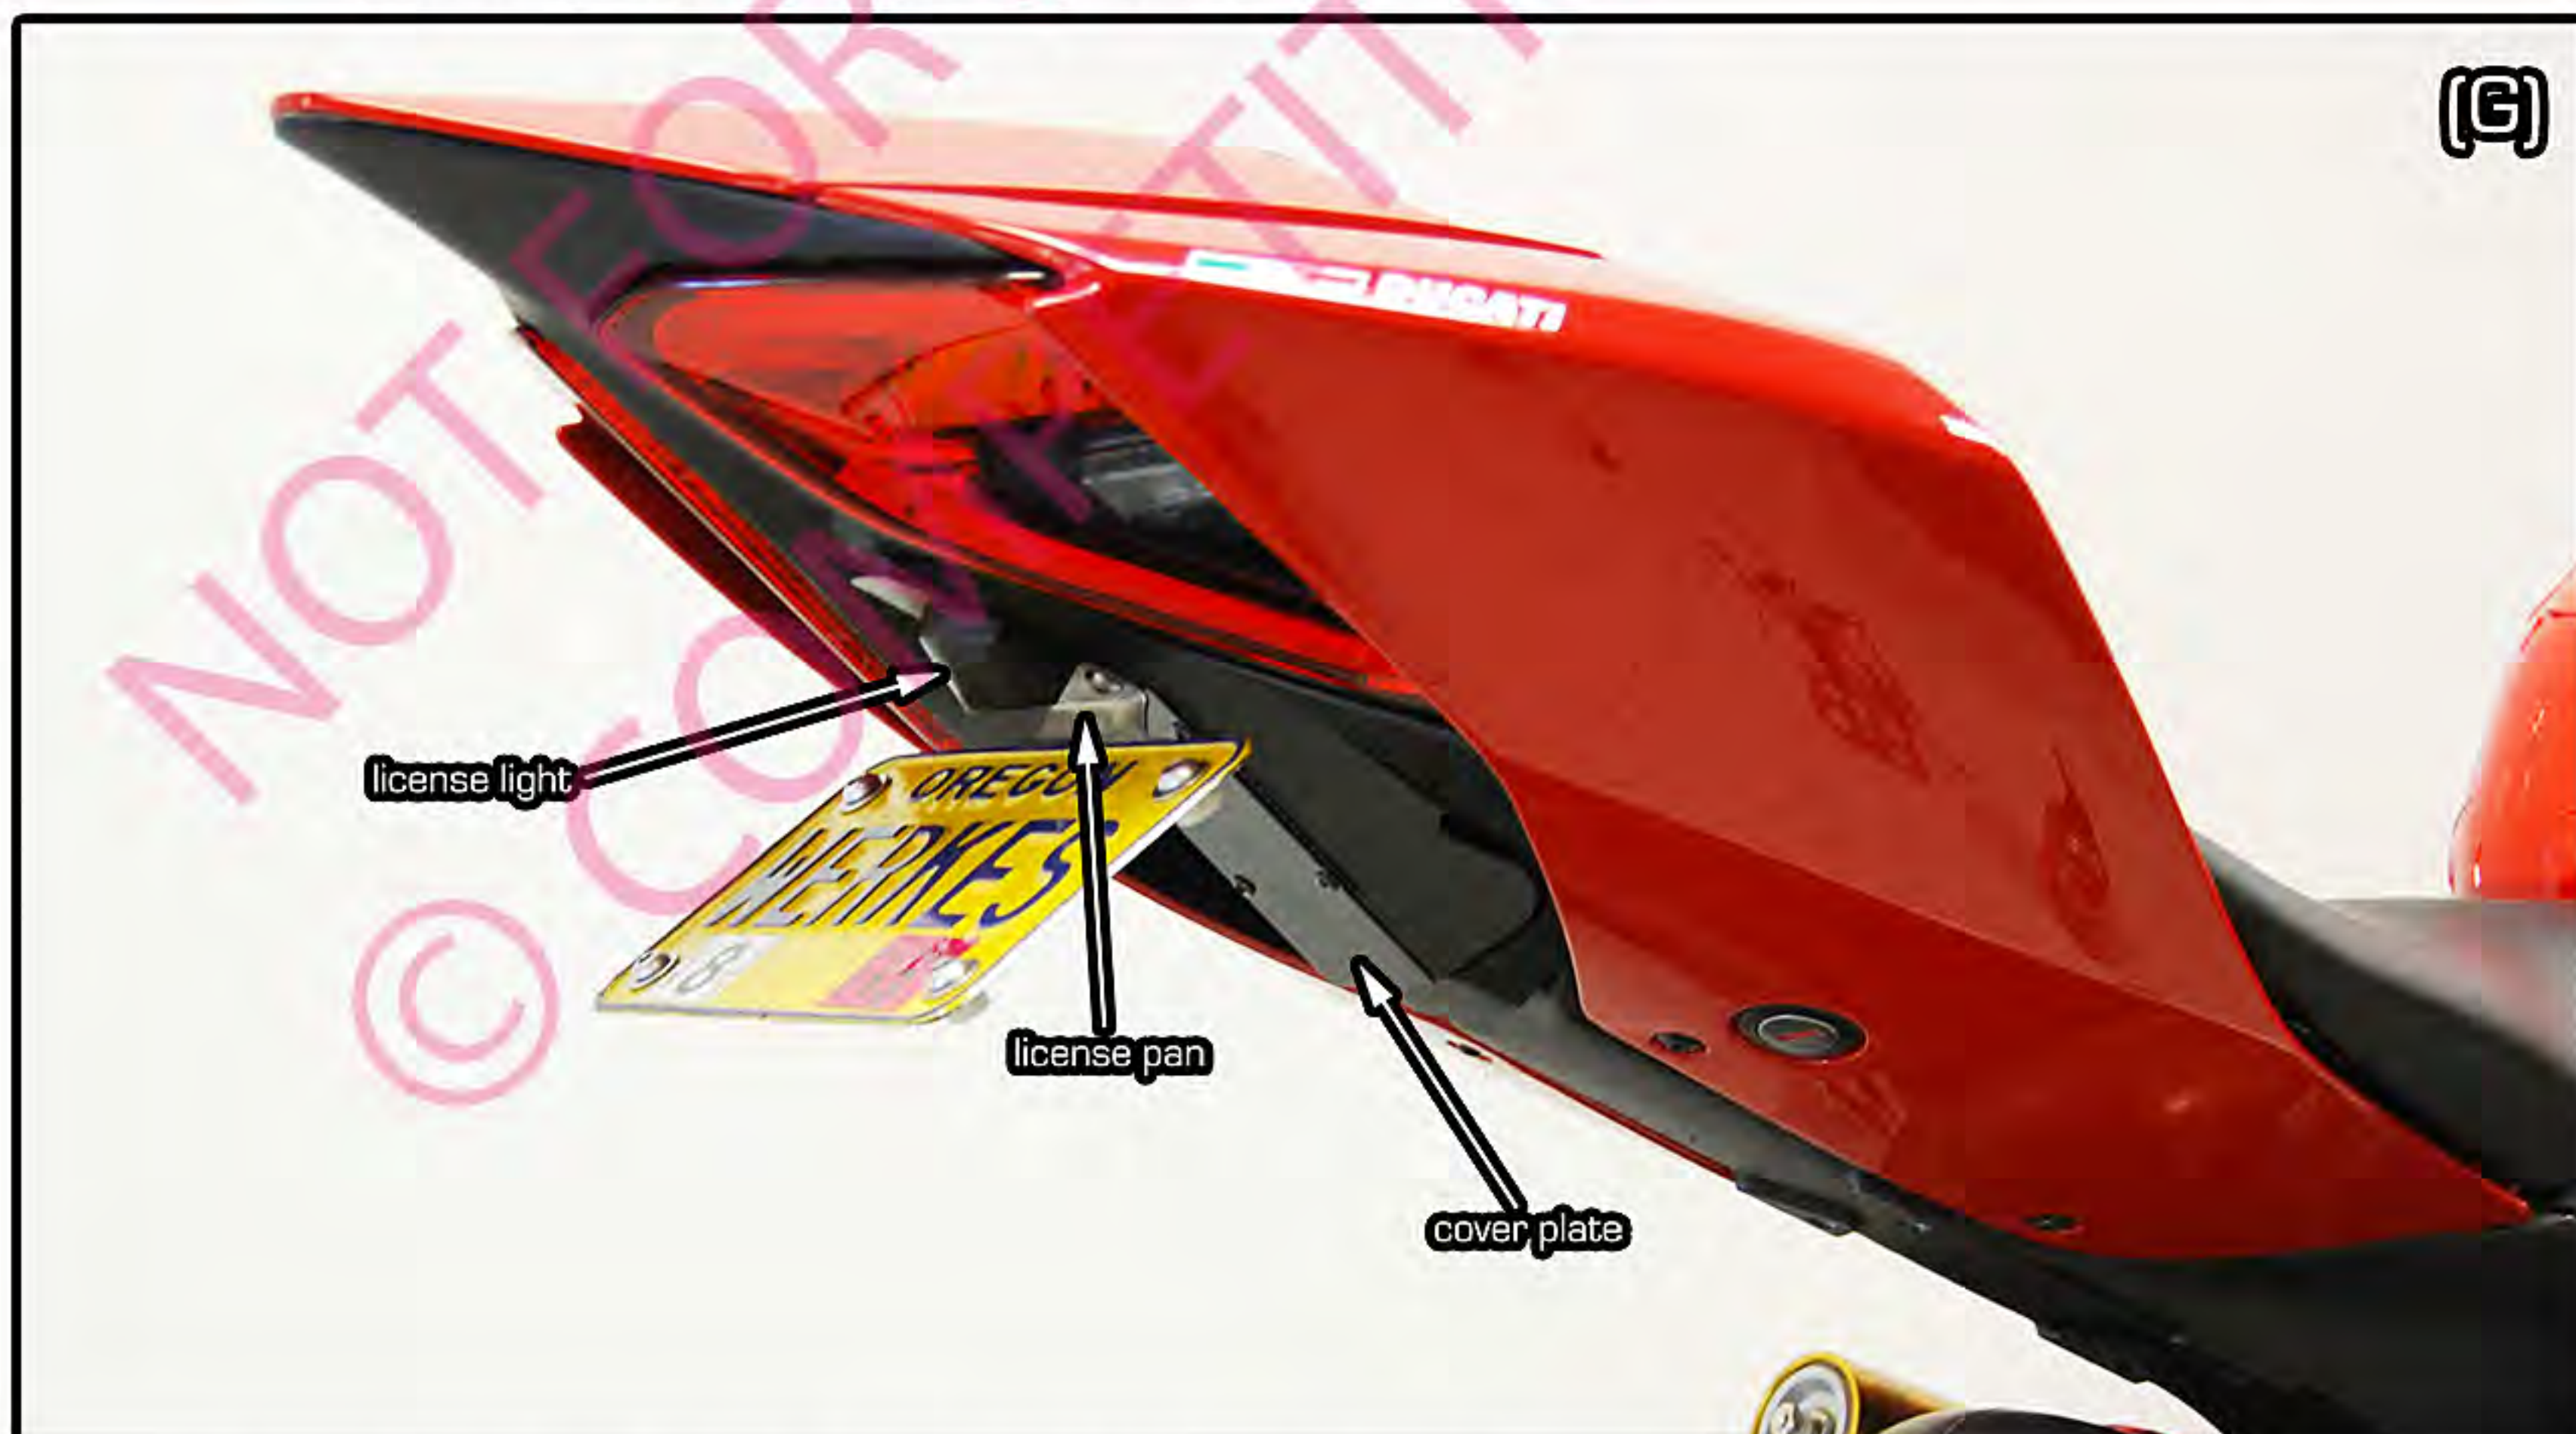

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

1D1199