

<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>

(800)736-2114

(A)

Page: 1












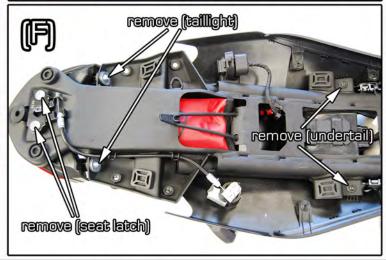

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.




<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>

(800)736-2114


Monster 1200



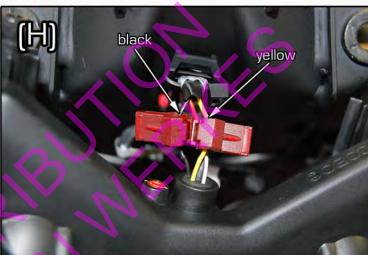

Page: 2



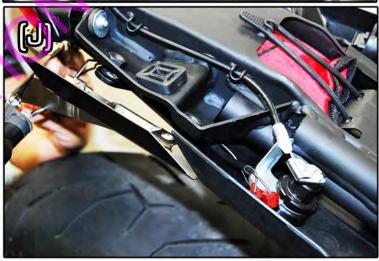



The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.



RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>

(800)736-2114

Page: 3

- DISASSEMBLY- 1) Remove seat (use key).
 - 2) Remove rear fender (3-6mm allen bolts) *FIG's (A) & (B). Carefully snip zip-ties holding wires to ABS sensor and unplug white license light connector.
 - 3) Remove turn signals and brackets (2-5mm allen bolts per side) *FIG (C). Cut signal wires as shown in *FIG (D).
 - 4) Remove grab handles (2-20mm bolts per side) *FIG (E).
 - 5) Remove undertail [2-4mm allen bolts in seat latch, 2-3mm allen bolts in plastic] *FIG (F).
 - 6) Remove taillight (2-T-20 screws), slide straight back and let hang. *FIG (F)

ASSEMBLY

- 1) Carefully strip back sheathing on taillight wires (about an inch). *FIG (G)
- 2) Attach Splice Connectors to the yellow and black taillight wires. *FIG (H)
- 3) Slide taillight back into position and secure with stock T-20 screws.
- 4) Adhere Licence Light to Main Assembly and put Spade Connectors on end of wires.
- 5) Secure your license plate to Main Assembly using 2-6x10 Allen Bolts in lower holes.
- 6) Mount Signal Brackets to Main Assembly using 2-6x12 Allen Bolts in upper holes.
- 7) Secure Short Stalk Signals to Signal Brackets.
- 8) Place Main Assembly on rear tire and connect wires *FIG (I). *NOTE* License Light wires white to yellow/black to black. Turn signals wires are interchangable.
- 9) Check lighting for proper function.
- 10) Position undertail and loosely install front to bolts.
- 11) Route wires into area above undertail and loosely install Main Assembly (4-8x16 Allen Bolts]. Double check wire positioning before tightening.
- 12) Tighten two front bolts of undertail and secure seat latch with stock hardware.
- 13) Adjust signals to point straight back and tighten bolts.
- 14) Replace seat.



1- Main Assembly 2- Signal Brackets (w/ grommets) 2- Tap Connectors 2-Spade Connectors 4-8x16 Allen Bolts 2-6x10 Allen Bolts 2-6x12 Allen Bolts 1- License Light 4-6mm Washers 4-6mm Nuts

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.