

<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

NOTE* 2010 or newer models have a removable fender. Some steps may not be required. These steps are marked *SKIP**** or may have notes.**

REMOVE: Rear seat (key), bottom section of rear fender (2 allen bolts on sides, 1 nut behind reflector).

SNIP: Wires at base of fender tube (right and left signals, and license light).

PULL: Wiring up into storage area.

ADHERE: Some masking tape to under tail.
FIG (A) **SKIP*

CUT: Rear fender as flush as possible. Clean up cut with a file or sandpaper. ***FIG (A) *NOTE*check for wires. **SKIP****

DRILL: Three 1/4" holes using Backing Plate as a template. ***FIG (B) *NOTE*check for wires. **SKIP** see *FIG (E)**

MOUNT: License Light to Main Pan. ***FIG (C)**

MOUNT: License Pan, and Main Pan to under-tail using 2 6X30m Allen Bolts up through Backing Plate. Run wires up through hole. ***NOTE* align before tightening. **2010** must have hole drilled for wiring.**



DRILL: Two 1/4" holes through the sides of the storage tray. ***FIG (D) *NOTE* use the 1/2" round mark molded into the plastic as a reference, drilling in the center.**

MOUNT: Turn Signals using supplied foam tape.

CONNECT: Wires using supplied connectors.

CHECK: Lighting for proper function.

REPLACE: Seat.

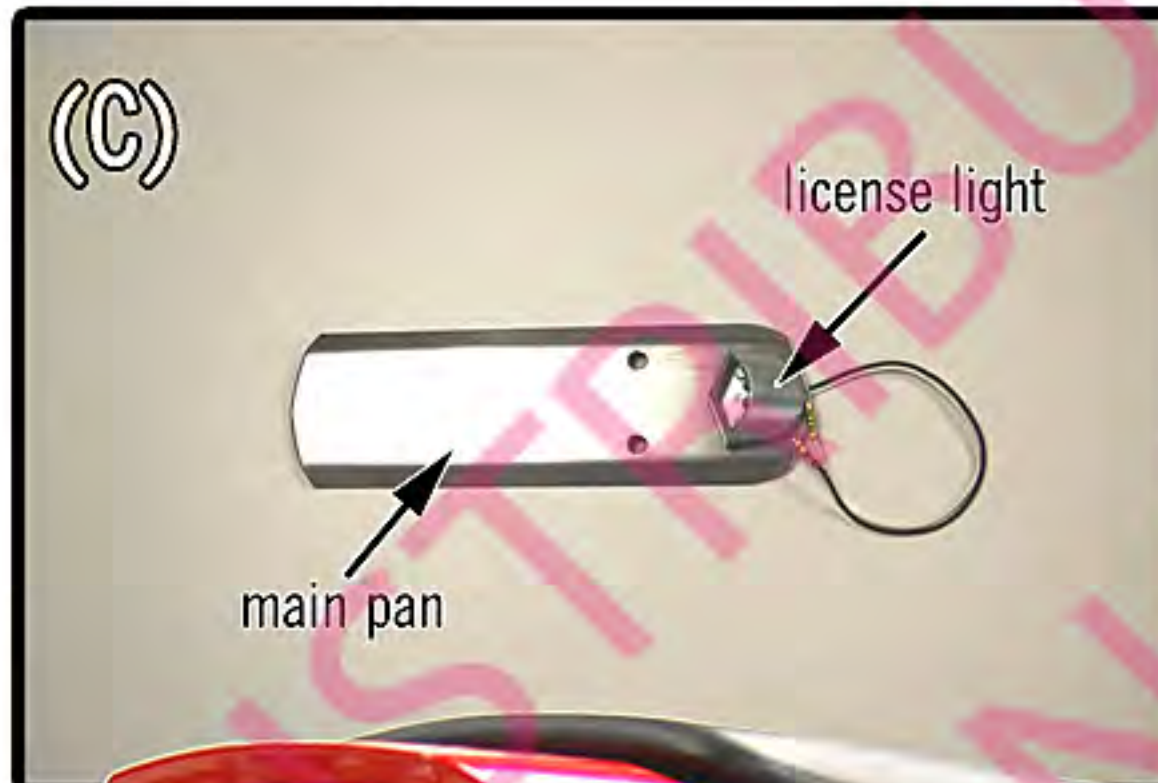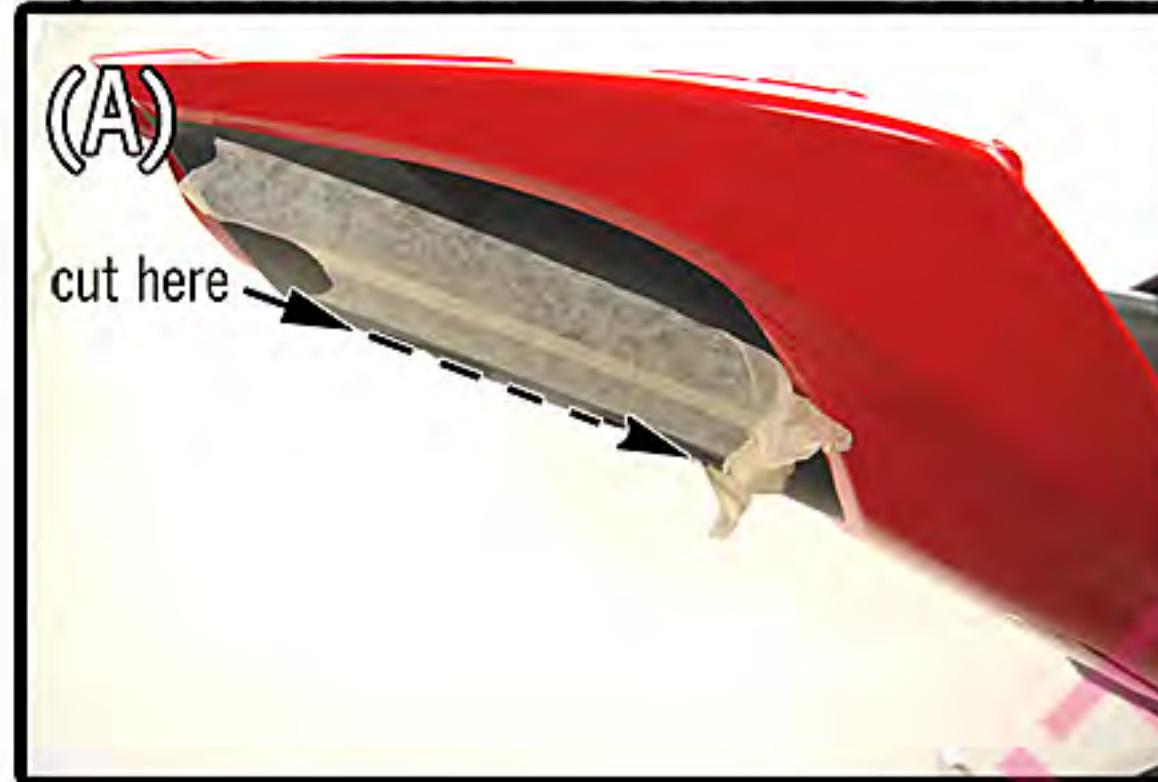

PARTS LIST:

- | | |
|-----------------------|---------------------|
| 1- Main Pan | 6- 6m Nuts |
| 1- License Pan | 2- Butt Connectors |
| 1- Backing Plate | 4- 6x10 Allen Bolts |
| 1- Pair Signals | 2- 6x30 Allen Bolts |
| 1- License light | 6- Washers |
| 1- 2010 Backing Plate | |

The purchaser releases Competition Werkes inc from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.