


COMPETITION WERKES

<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

(800)736-2114

- REMOVE:** Stock rear fender (4- Bolts. and unplug wires under the seat).
- ADHERE:** License Light to License Light Mount. Route wires through groove as shown in *FIG (A).
- MOUNT:** Main Pan (use 4- 6x16 allen bolts provided) to undertail. *FIG (B)
- SECURE:** License plate to Main Pan (2- 6x10 allen bolts in lower holes).
- MOUNT:** Signal Brackets (use 2- 6x12 allen bolts through upper holes of the license plate and Main Pan). *FIG (B)
- MOUNT:** Turn Signals to Signal Brackets. Route wires up through grommet.
- CUT:** Approximately 6" of wire from the previously removed stock fender. Plug these wires into the stock connector under the seat.
- CONNECT:** License Light wires using supplied Butt Connectors. [+ = W, - =B]
- CONNECT:** Signal wires using clips packaged with the signals. **See package backing card for instructions.

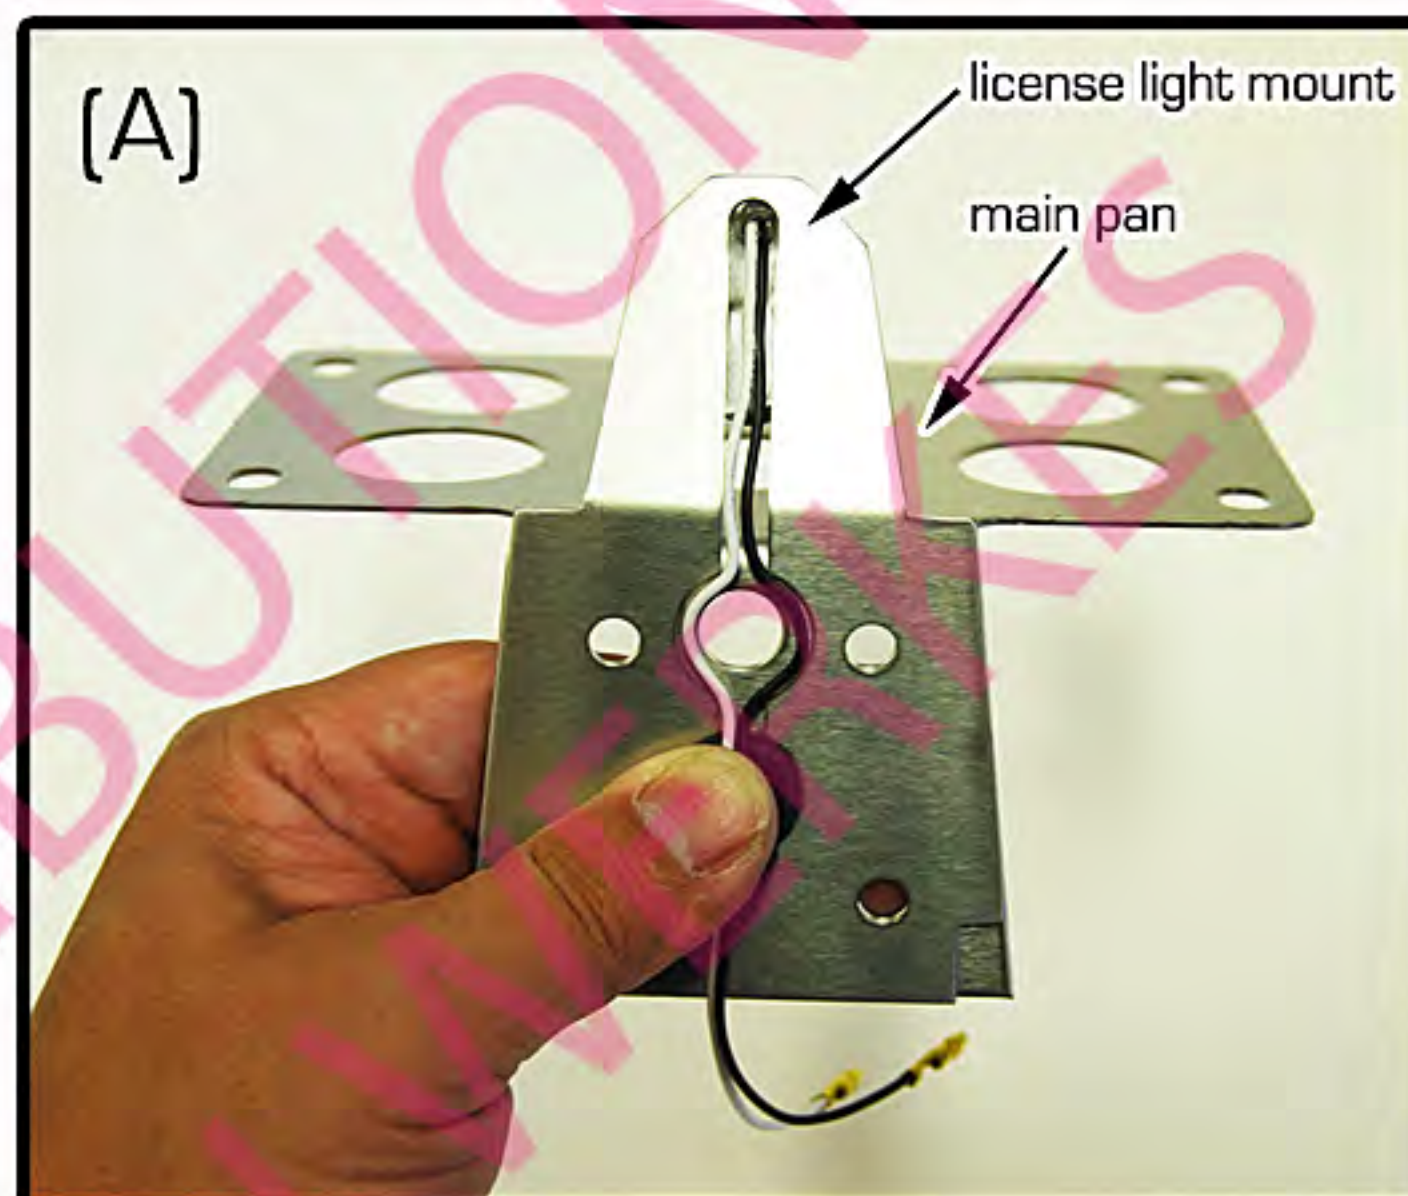

PARTS LIST:

- 1- Main Pan 1- License Light Mount, 1- Med. Grommet
 1- License Light, 2- Signal Brackets, 1- Pair of Short Stalks,
 2- 6x10 Allen Bolts, 2- 6x12 Allen Bolts,
 4- 6x16 Allen Bolts, 4- Nuts, 4- Washers, 2- Butt Connectors

KTM Factory Wire Colors:

Purple= Left, Black= Right, Brown= Ground, Yellow= License light



The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

1KT1190