
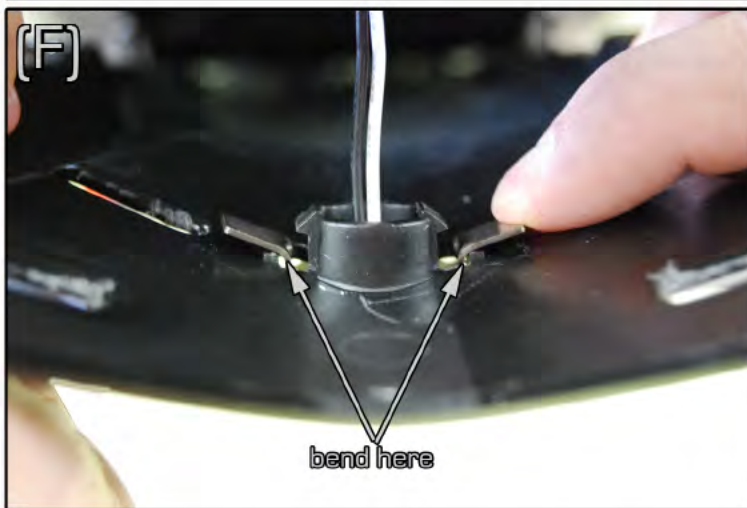


<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

(800)736-2114

Page 1

KTM Super Duke 1290r

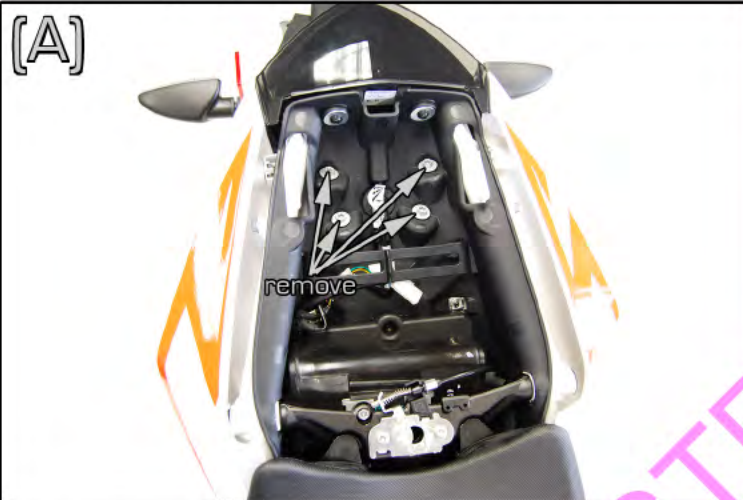

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

1KT1290LTD


COMPETITION WERKES

<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>

KTM Super Duke 1290r

(800)736-2114

Page 2

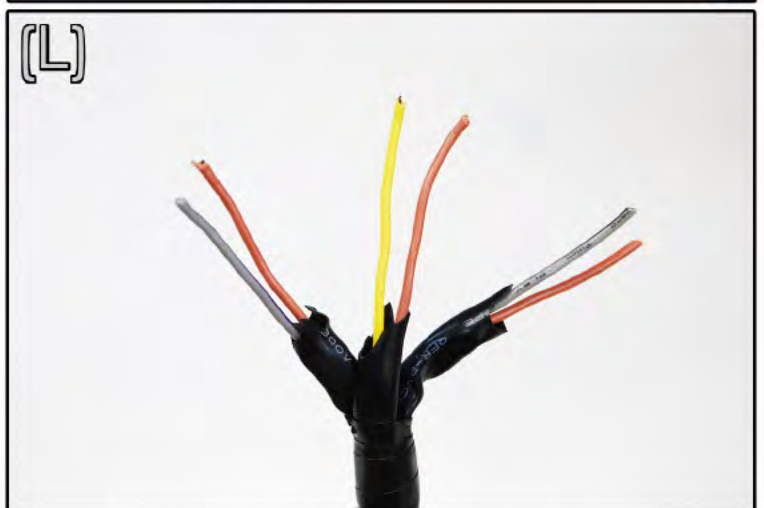

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

1KT1290LTD

COMPETITION WERKES

<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

KTM Super Duke 1290r

(800)736-2114

Page 3

- REMOVAL:
- 1) Remove back seat (use key).
 - 2) Slide rubber storage strap forward.
 - 3) Unplug rear fender wire harness (the largest one).
 - 4) Remove rear fender (4- T-30 bolts). *FIG (A)
 - 5) Remove front seat.
 - 6) Remove passenger peg brackets (2- T-45 bolts per side). *FIG (B)
 - 7) Remove rear side panels (3- T-30 bolts per side). *FIG (B)
 - 8) Carefully release clips and lower undertail as shown in *FIG (C), Let hang.

Stock Wire Colors

Left- Gray w/ Purple
Right- Gray w/ Black
License- Yellow
Ground- Brown

- INSTALL:
- 1) Adhere License Light to License Light Bracket. *FIG (D)
 - 2) Route License Light wire up into storage area and insert tabs into slots in undertail. *FIG (E)
 - 3) Bend tabs over to secure as shown in *FIG (F). Swap wire ends for Spade Connectors provided.
 - 4) Mount License Pan to subframe using 4- 8x12 Bolts provided. Access holes provided for Allen wrench to reach top bolts *FIG (G)
 - 5) Secure your license plate and Signal Brackets to License Pan using 4- 6x12 Bolts, washers, and nuts provided. *FIG (H)
 - 6) Adhere Flush Mount Signals to Signal Brackets *FIG (I). Route wires as shown in *FIG (J), Use Zip-tie to secure to subframe. Route wires into storage through access in side of storage tray.
 - 7) Cut wire ends from rear fender *FIG's (K & L) *NOTE* use tape to identify wires.
 - 8) Use supplied connectors to tie wires to lighting. *NOTE* wire chart above.
 - 9) Check lighting or proper function.
 - 10) Replace rear side panels and seats.

PARTS LIST

- 1- License Pan
- 1- License Light Bracket
- 1- Right Signal Bracket
- 1- Left Signal Bracket
- 1- Pair Flush Mount Signals (F-111D)
- 4- 6x12 Allen Bolts
- 4- 8x12 Allen Bolts
- 4- 6mm Nuts
- 4- Washers
- 2- Splice Connectors
- 2- Spade Connectors
- 2- Small Zip-ties
- 1- Black License Light



The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

1KT1290LTD