

TRIUMPH "street triple" 675





- REMOVE:** Seat.
- REMOVE:** Undertail cover plate. (2-plastic rivets, 1-allen bolt)*FIG (A)
- REMOVE:** Rear side panels. (2-allen bolts per side)
- REMOVE:** Tail light surround. (slide off towards the rear)
- UNPLUG:** License light and rear turn signals.
- REMOVE:** Rear fender and frame work. (4-bolts in subframe. 1-bolt holding wire harness)
- REMOVE:** Reflector from tail light surround. Then remove plastic tabs.*FIG(B)
- DRILL:** 3/8" hole centered between two holes in tail light surround.*FIG(C)
- MOUNT:** Turn Signals & License Light to Main Pan.*FIG(D)
- SECURE:** Main Pan to tail light surround. (use 2-6x12 allen bolts, washers and nuts behind)*FIG(E)
NOTE insert allen wrench through access holes.
- PLACE:** Stock allen bolt through undertail cover plate placing Large Washer and 6mm nut above.
*FIG(F) *leave loose*
- POSITION:** Tail light surround/Main Pan back into place on subframe.
- CONNECT:** Wires. (cut ends off stock lighting and connect to supplied lighting with butt connectors)
- CHECK:** Lighting for proper function.
- PLACE:** Excess wiring into rear storage area.
- INSTALL:** Undertail cover plate. (use stock rivets, slide large washer above slot on tail light surround.)
- REPLACE:** Side covers using stock hardware.
- SECURE:** Tail light surround to Undertail cover plate. *NOTE* socket extension will be needed from above to reach nut.
- LOOSEN:** Exhaust clamps. Pull exhaust away from signals and retighten clamps. *NOTE* should have 1/2" clearance from turn signals. CHECK PERIODICALLY.
- REPLACE:** Seat.



The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

TRIUMPH "street triple" 675

<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>

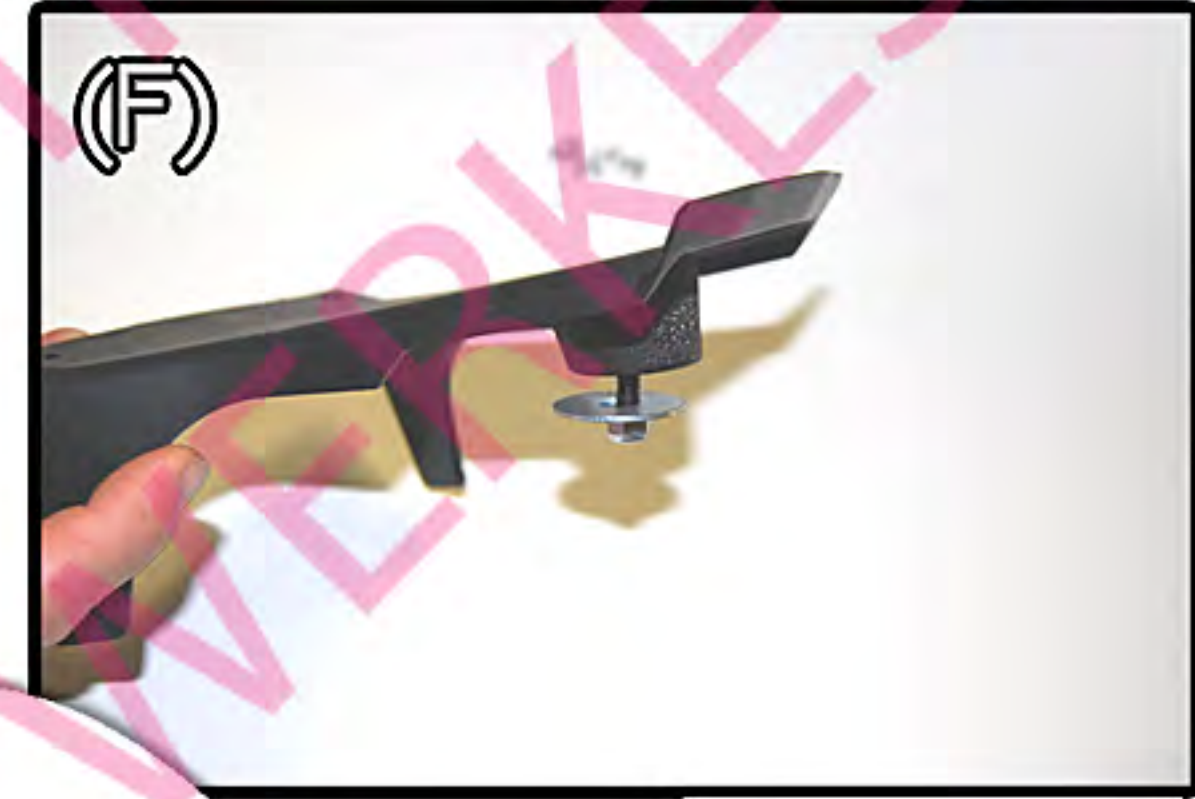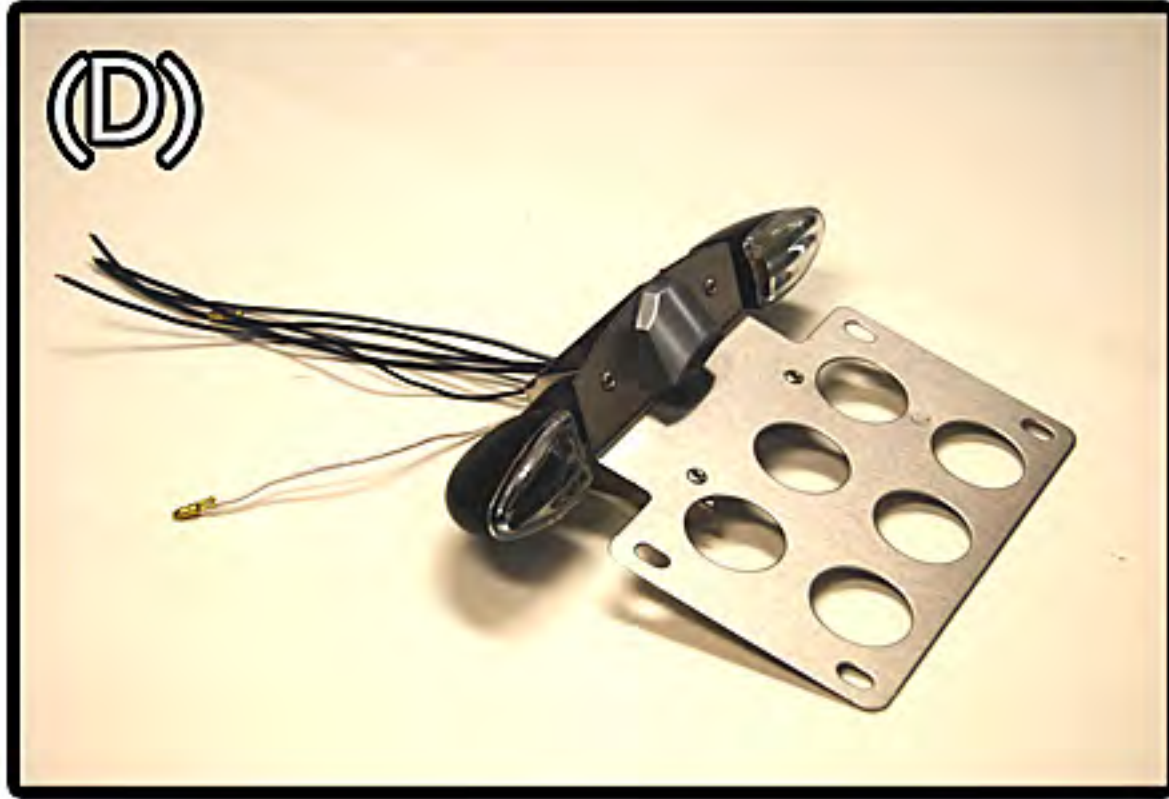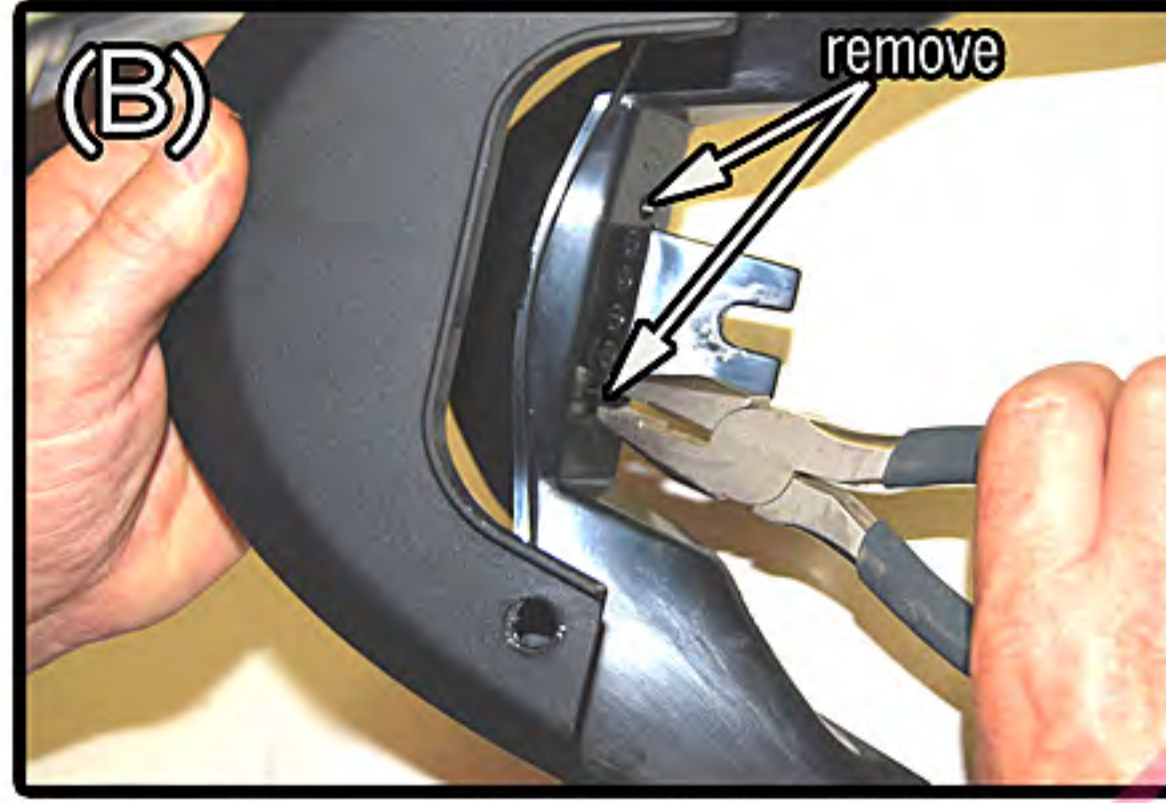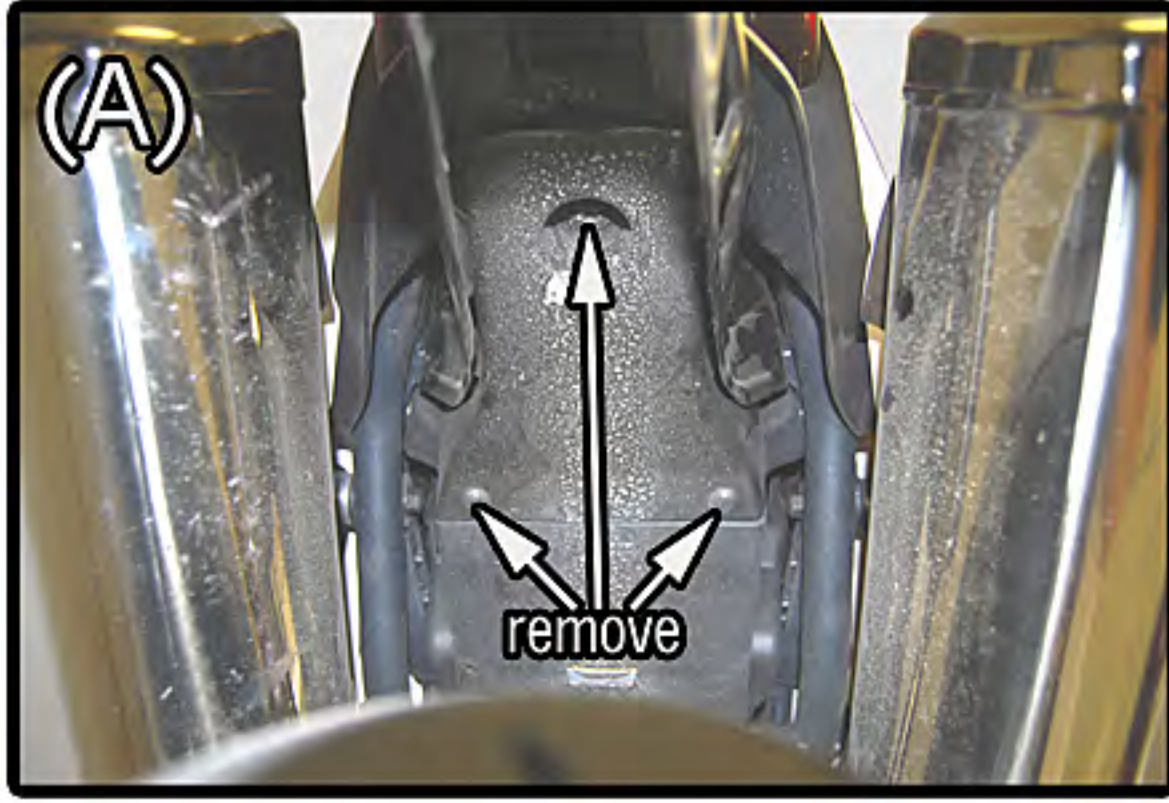


STOCK WIRE COLORS

Blk= Ground Grn/Wht= Right Turn
Yellow= License Grn/Red= Left Turn



PARTS LIST:

- | | |
|---------------------|--------------------|
| 1- Main Pan | 7- 6mm Nuts |
| 1- Pair Signals | 1- XL Washer |
| 1- License Light | 6- Washers |
| 2- 6x12 Allen Bolts | 2- Butt Connectors |
| 4- 6x10 Allen Bolts | |

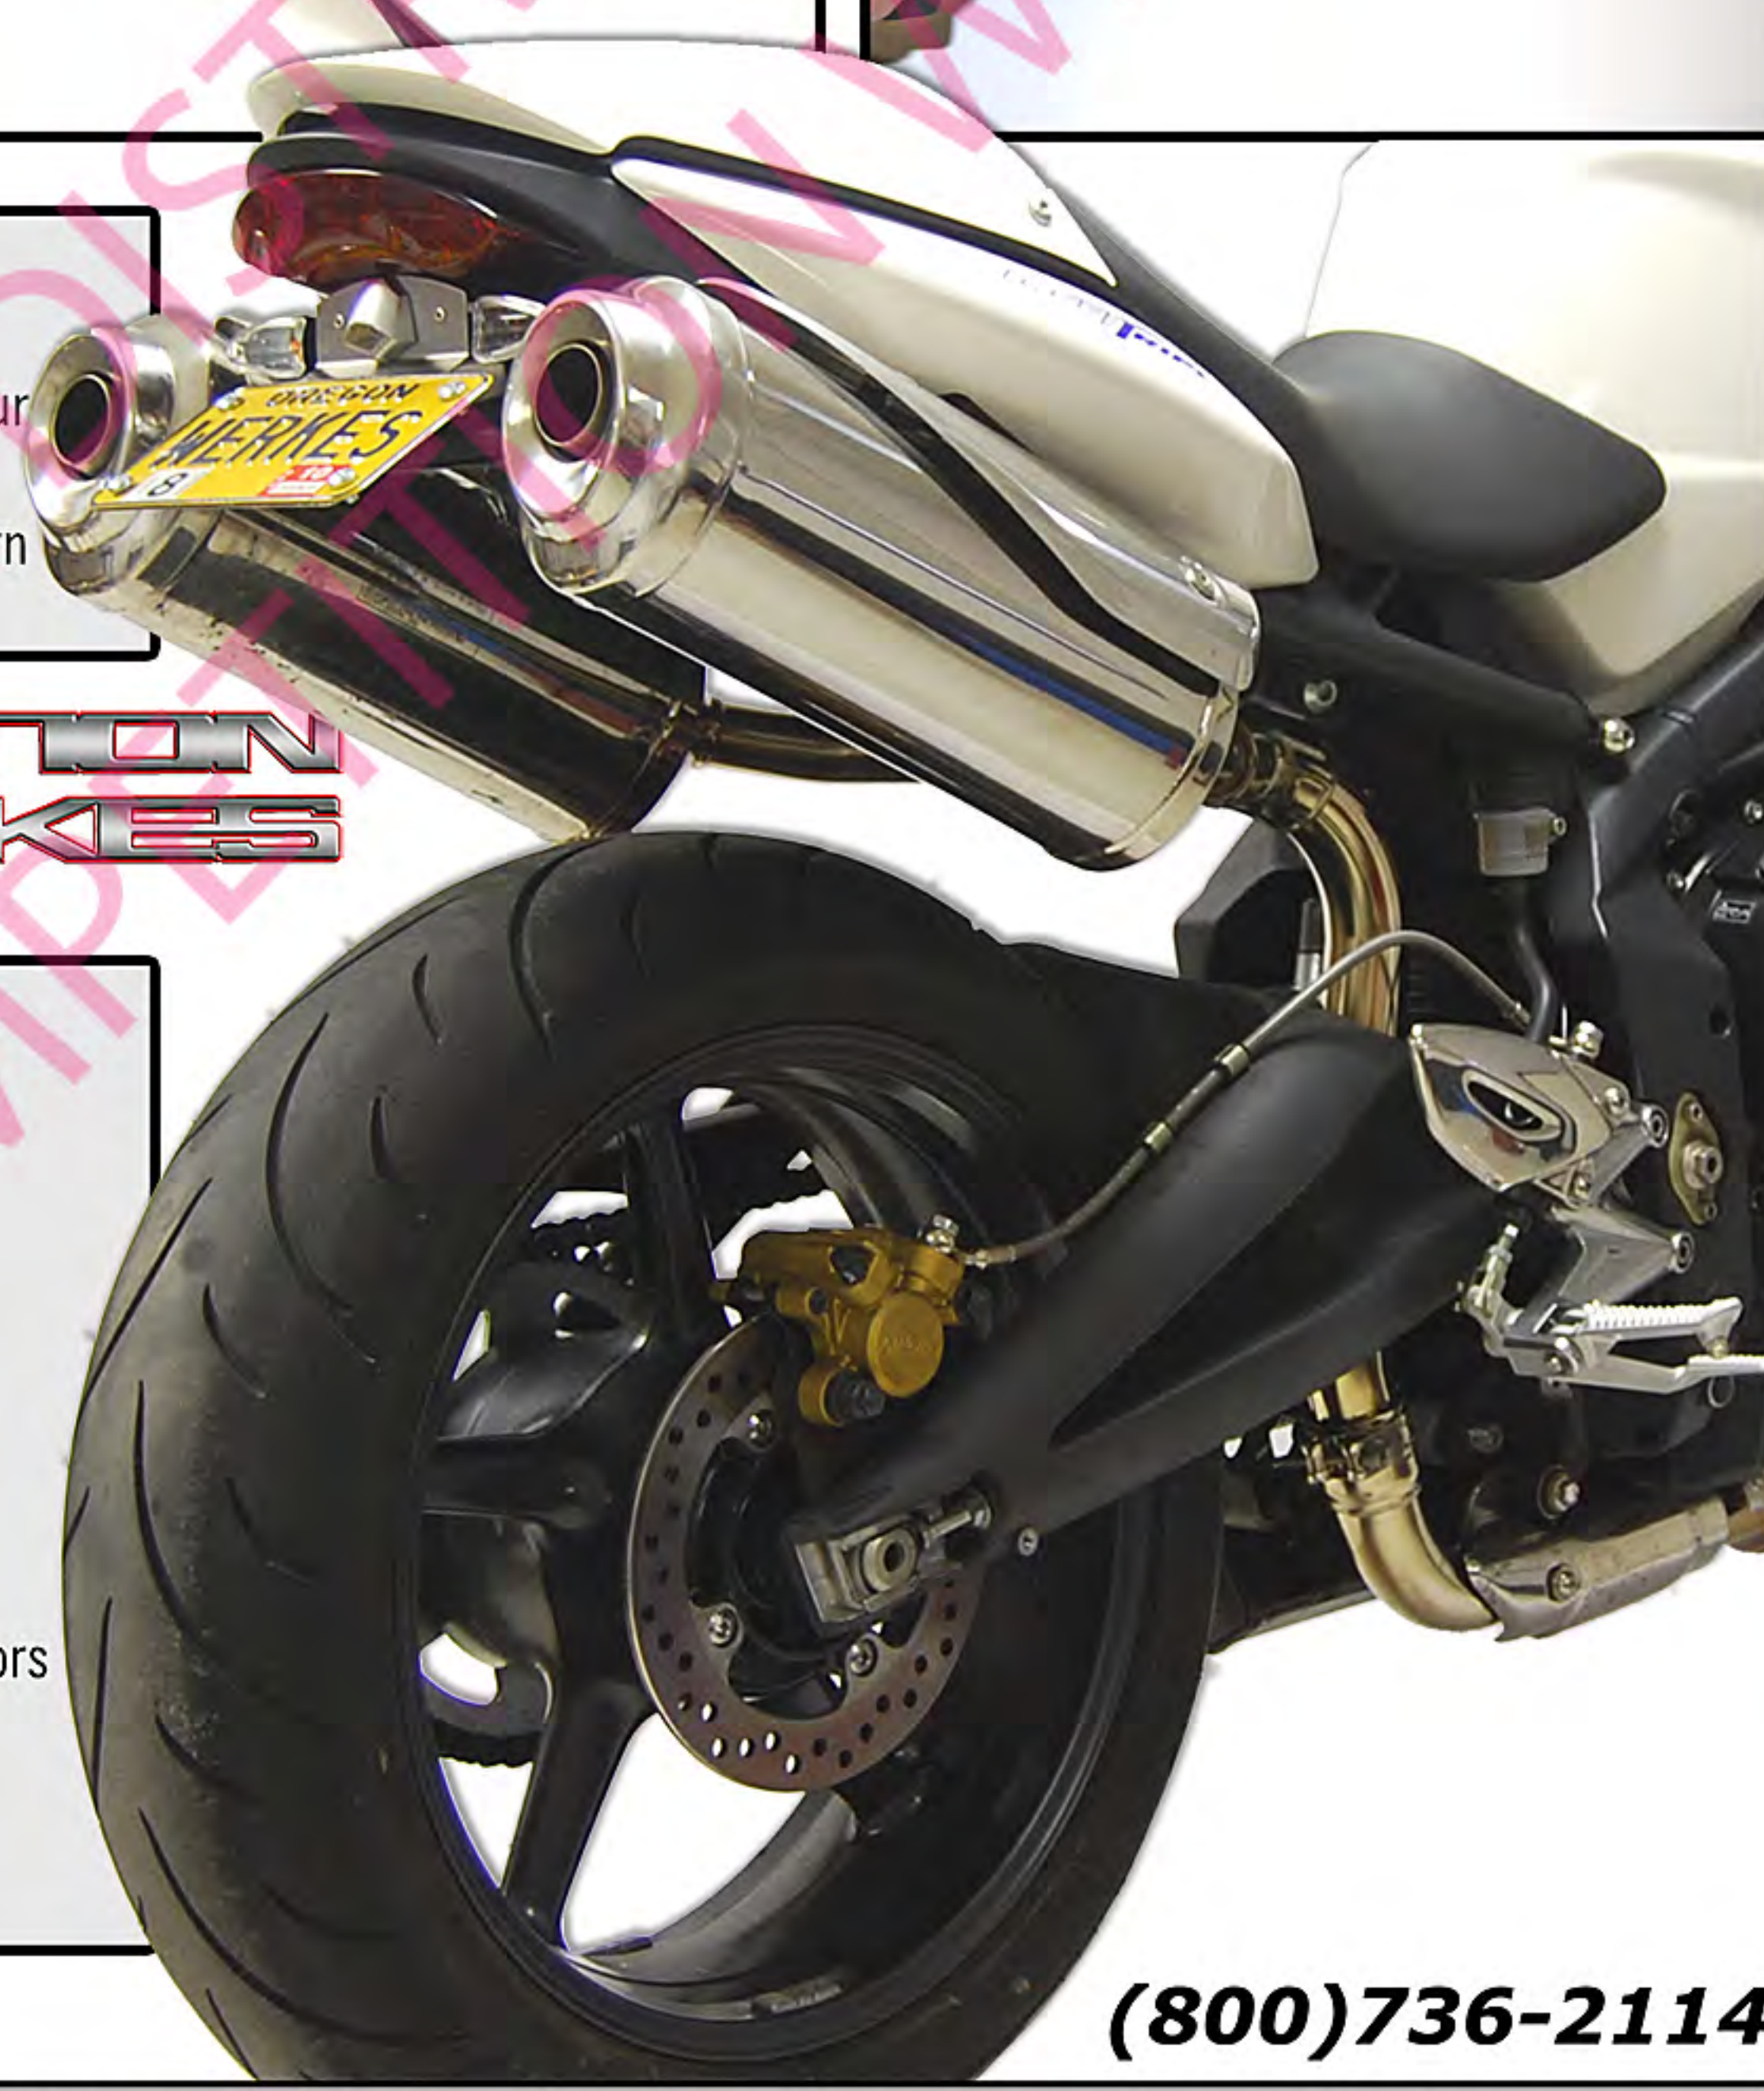

(800)736-2114

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.