

06 YAMAHA FZ1 STANDARD Fender Eliminator Kit.

Remove: Front & Rear seats. To release front seat, reach in from behind and push lever to the left.

Remove: The 8 Plastic rivets underneath & around undertail pan. To release the rivets push the center plunger in about 1/8", and then pry rivet out with fingernail or small screwdriver.

Remove: 4 bolts as shown *FIG(A) that hold on the rear fender. Let the fender hang loose for now.

Remove: the 6 bolts & 2 plastic rivets as shown *FIG(A). These 2 plastic rivets are removed by unscrewing the center plunger about 3 or 4 turns, and then pry out.

Remove: Painted tail section by grasping the 2 side rails, pulling back about 3 - 4" and then lifting one side up and off while dropping the other side. Unplug tail light as you do.

Remove: 2 bolts holding inner brace and remove. FIG*(B) Unplug turn signals, Lic light. FIG*(E), and remove fender.

Attach: License plate, Turn signal brackets & Turn signals to Lic Pan as shown FIG*(D) use four 6mm screws to mount the license plate, using the two longer screws at the top. Feed turn signal wires up through center hole. Cut off about 12" of wire with stock connectors from stock turn signals. Splice these to new signals using pink connectors. *NOTE* the 2 white turn signal wires are interchangeable. Grey connector to left signal, black connector to right signal.

Next:






This step is easier with 2 people. Set undertail pan in place with License pan assembly directly underneath the forward 2 holes with 2 large grommets between the 2 pans. Feed wires up through center hole in undertail pan FIG*(C). Insert two 8m x 30m bolts supplied from underneath, with two nuts on top. Don't fully tighten. Connect all wires, and check for proper operation.

Attach: license light to license light mount FIG*(D). Cut about 14" of wire with connector, from stock license light. Before splicing, test light for correct polarity by touching wires together with key on. (If light does not come on, reverse wires) Set license light mount in place over two rear-most holes in undertail pan with grommet in between FIG*(C). Feed wires up through center hole, insert two 8m x 30m bolts and attach nuts. Tighten all four bolts. Connect all wires FIG*(E), and check for proper operation.

Replace: Inner brace with two bolts, followed by the painted tail section, and two seats.

PARTS LIST

1 - License pan	2 - Turn signal brackets	6 - pink connectors
1 - LED Lic Light	4 - large grommets	2 - 6x10 allen screws
1 - Lic light mount	4 - 8m x 30m bolts	4 - 6mm nuts
1- Pair of Turn signals	4 - 8m nuts	2 - 6x12 allen screws

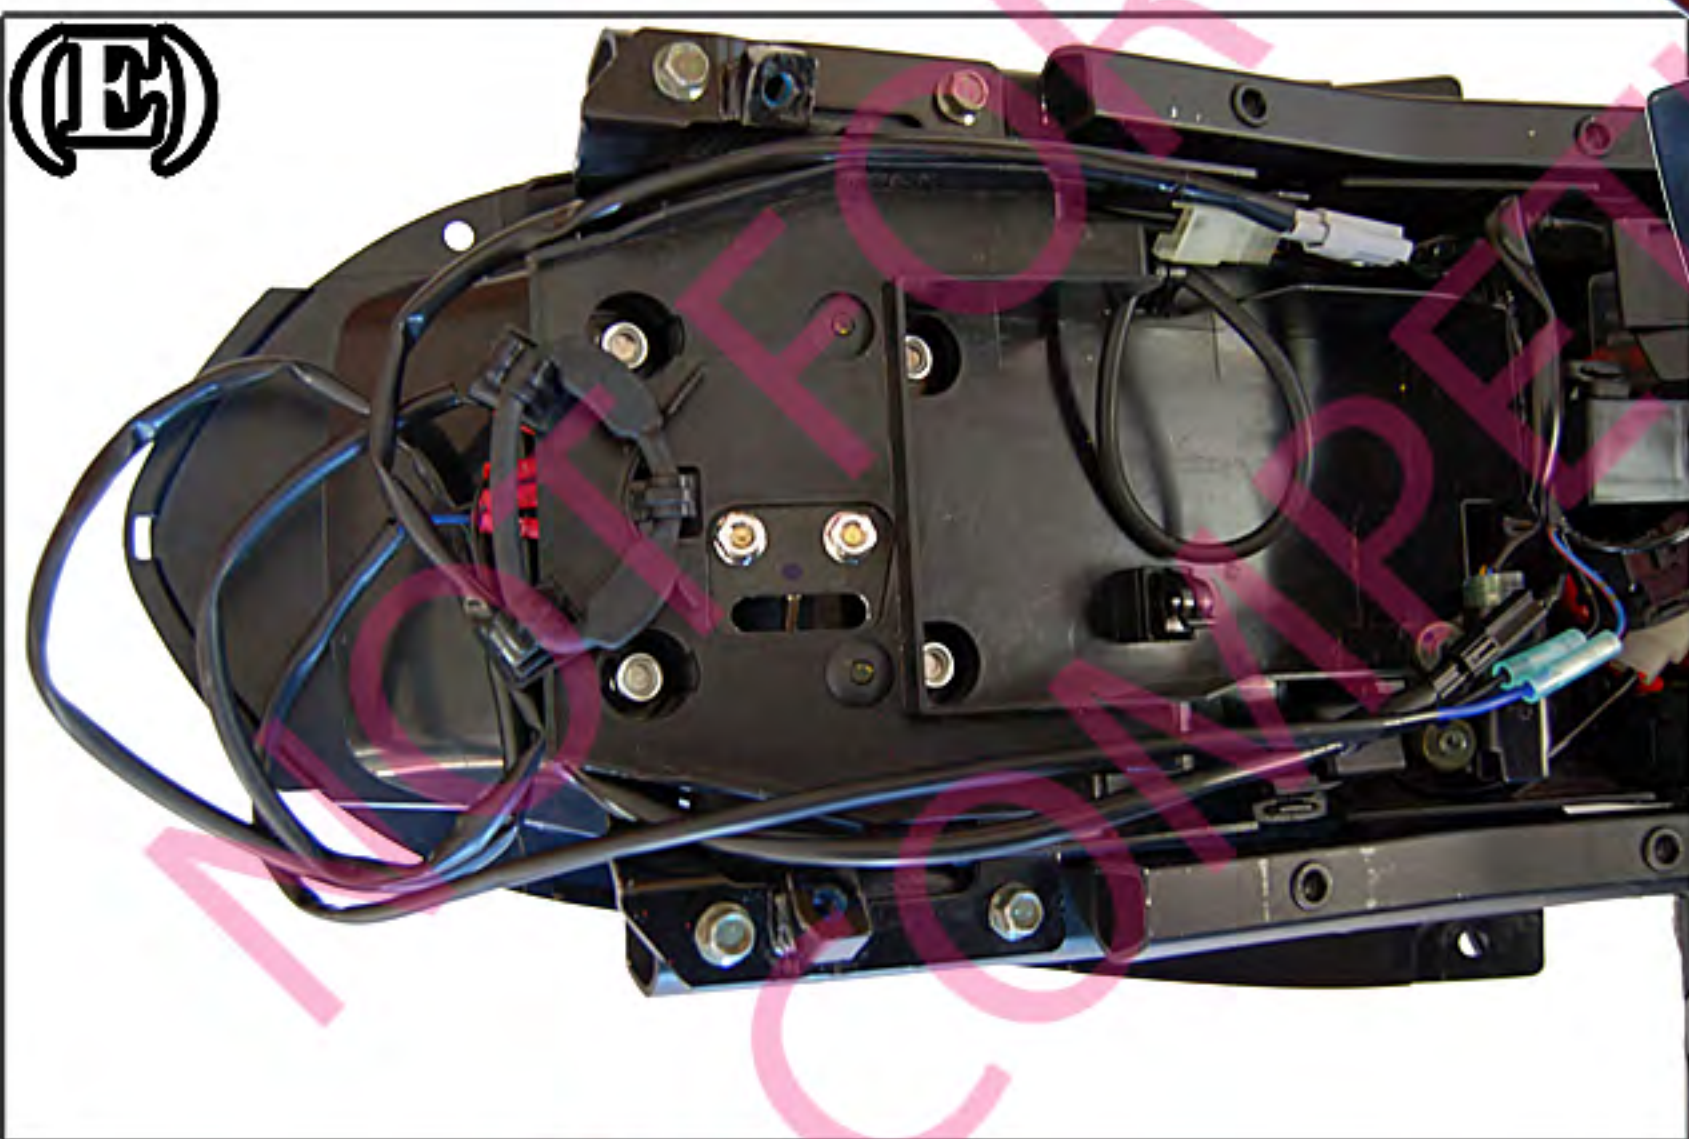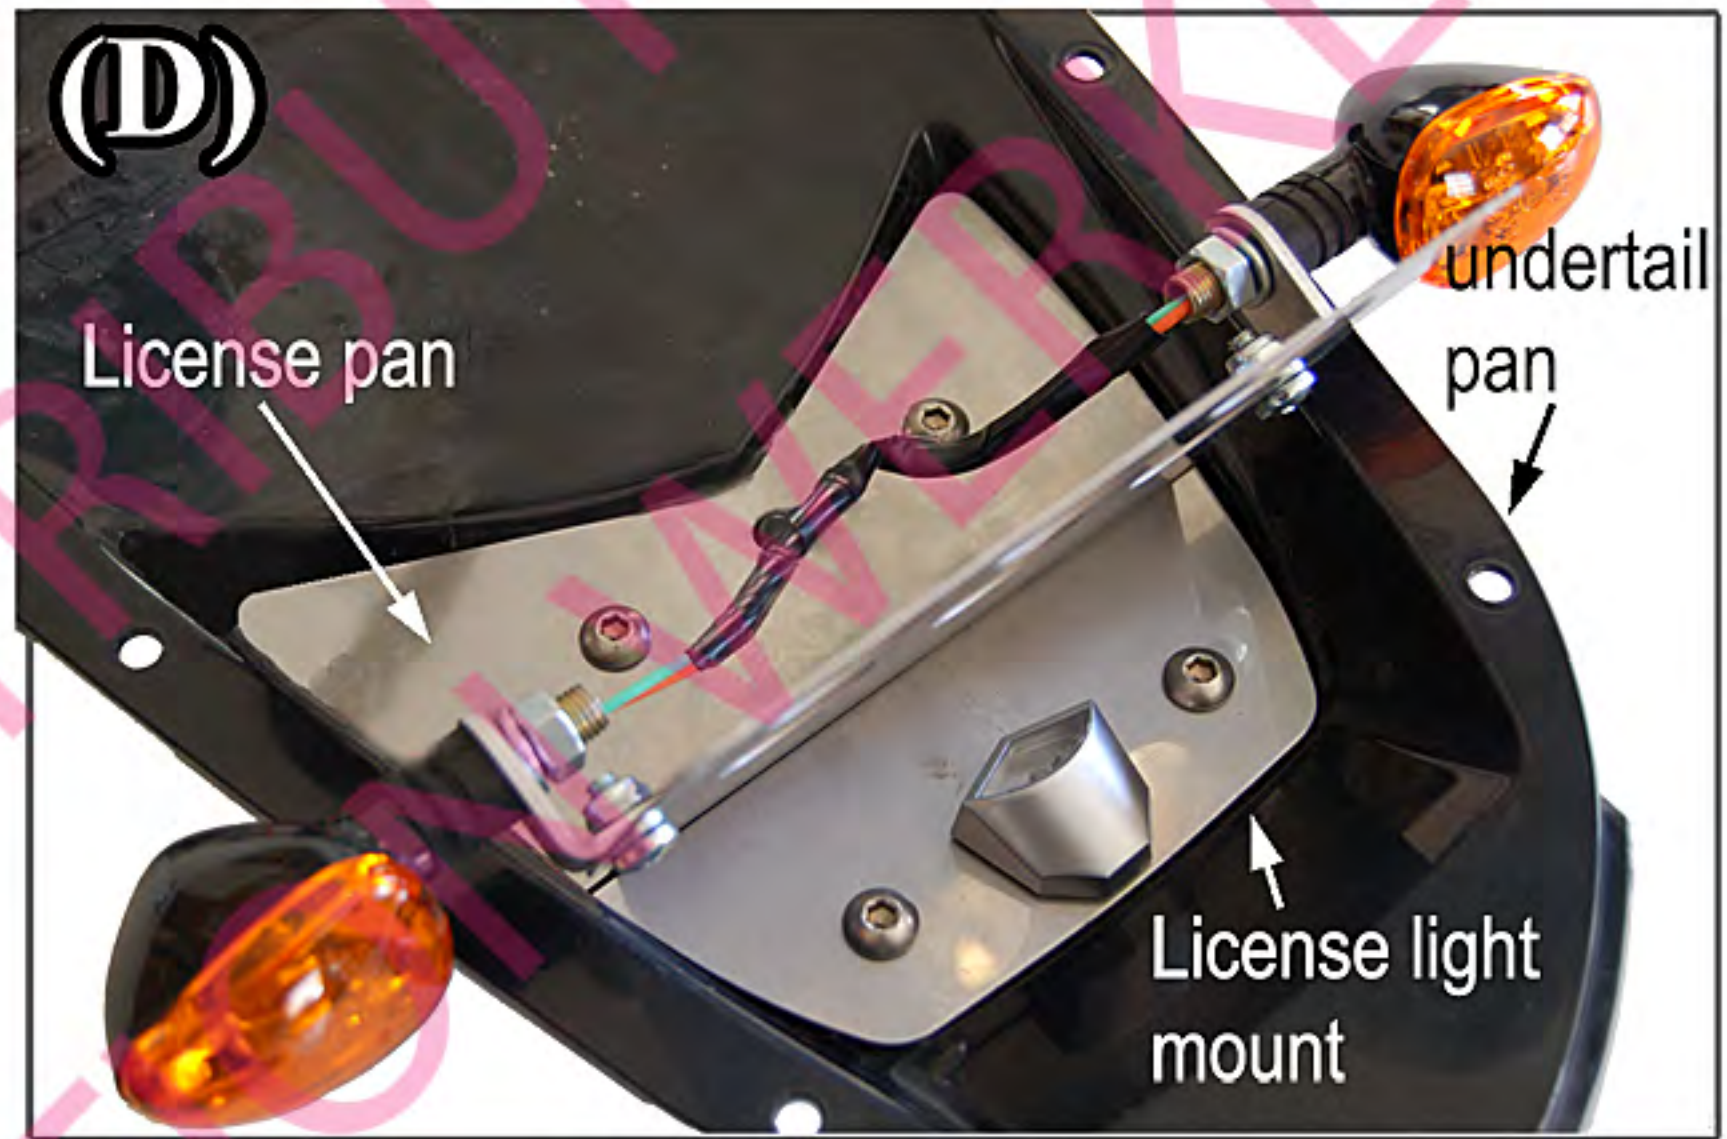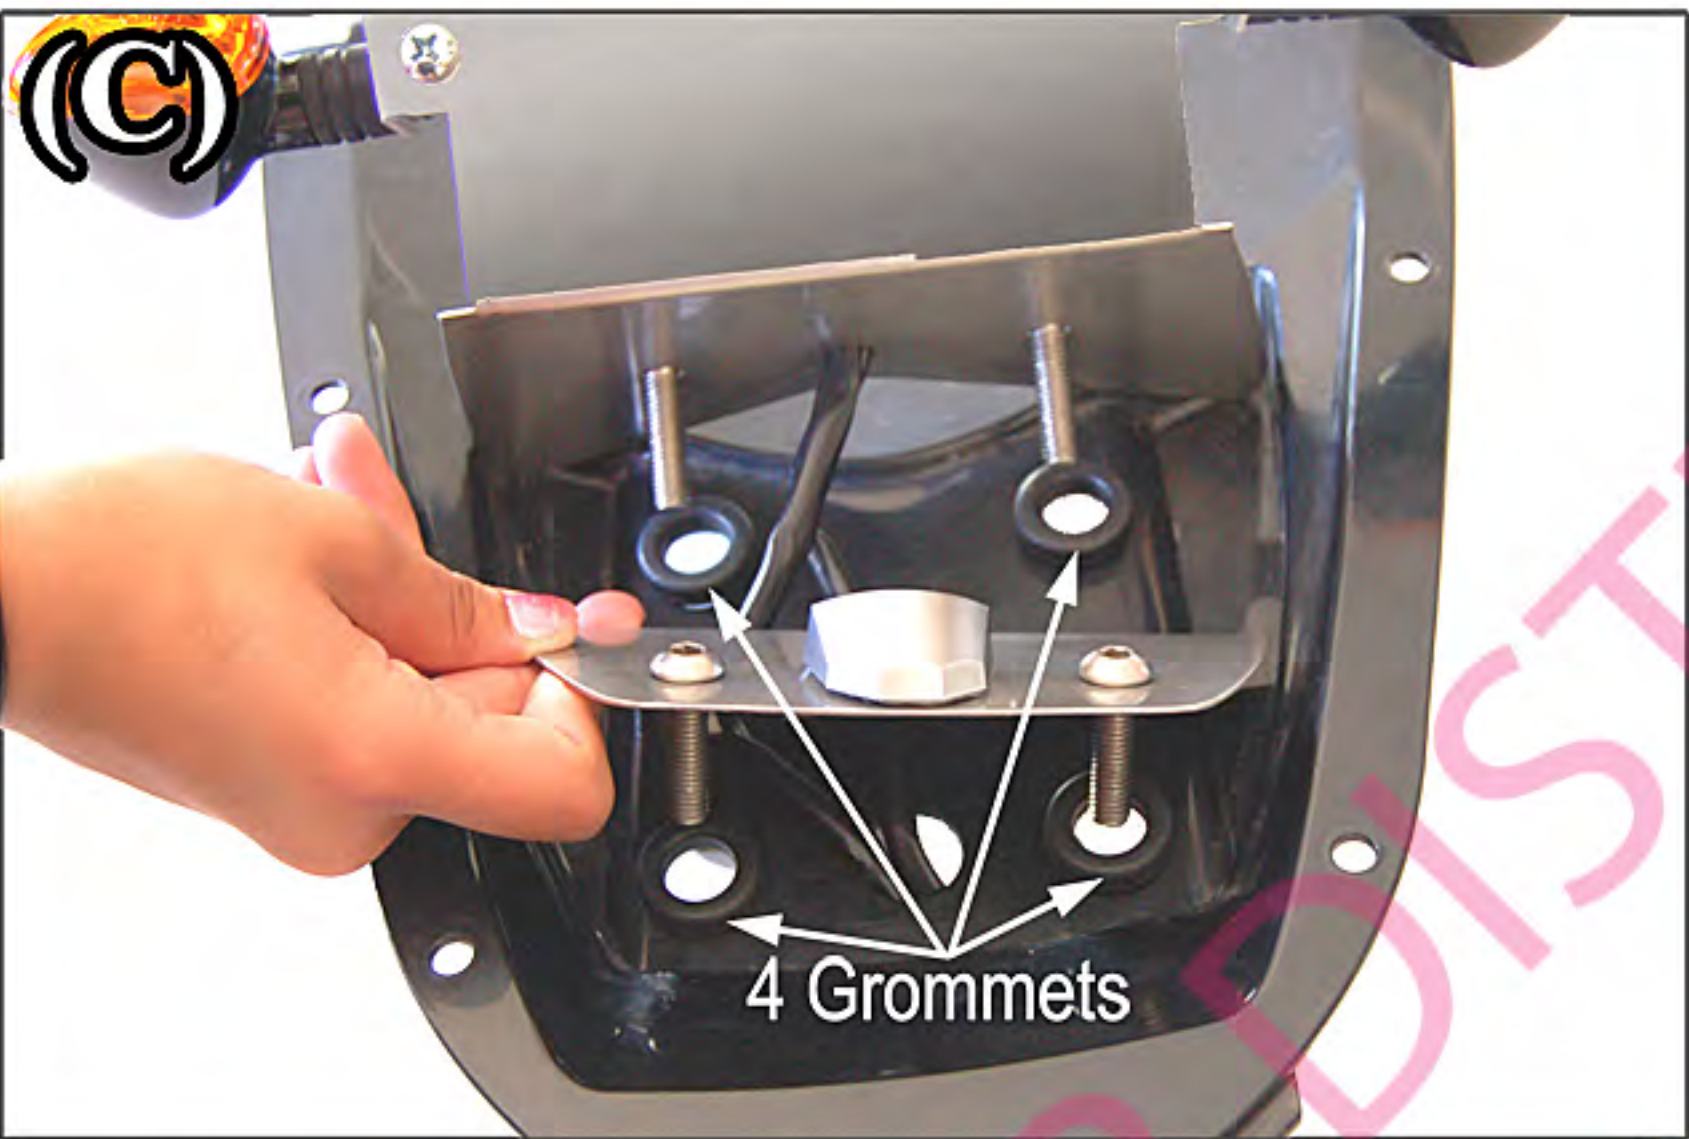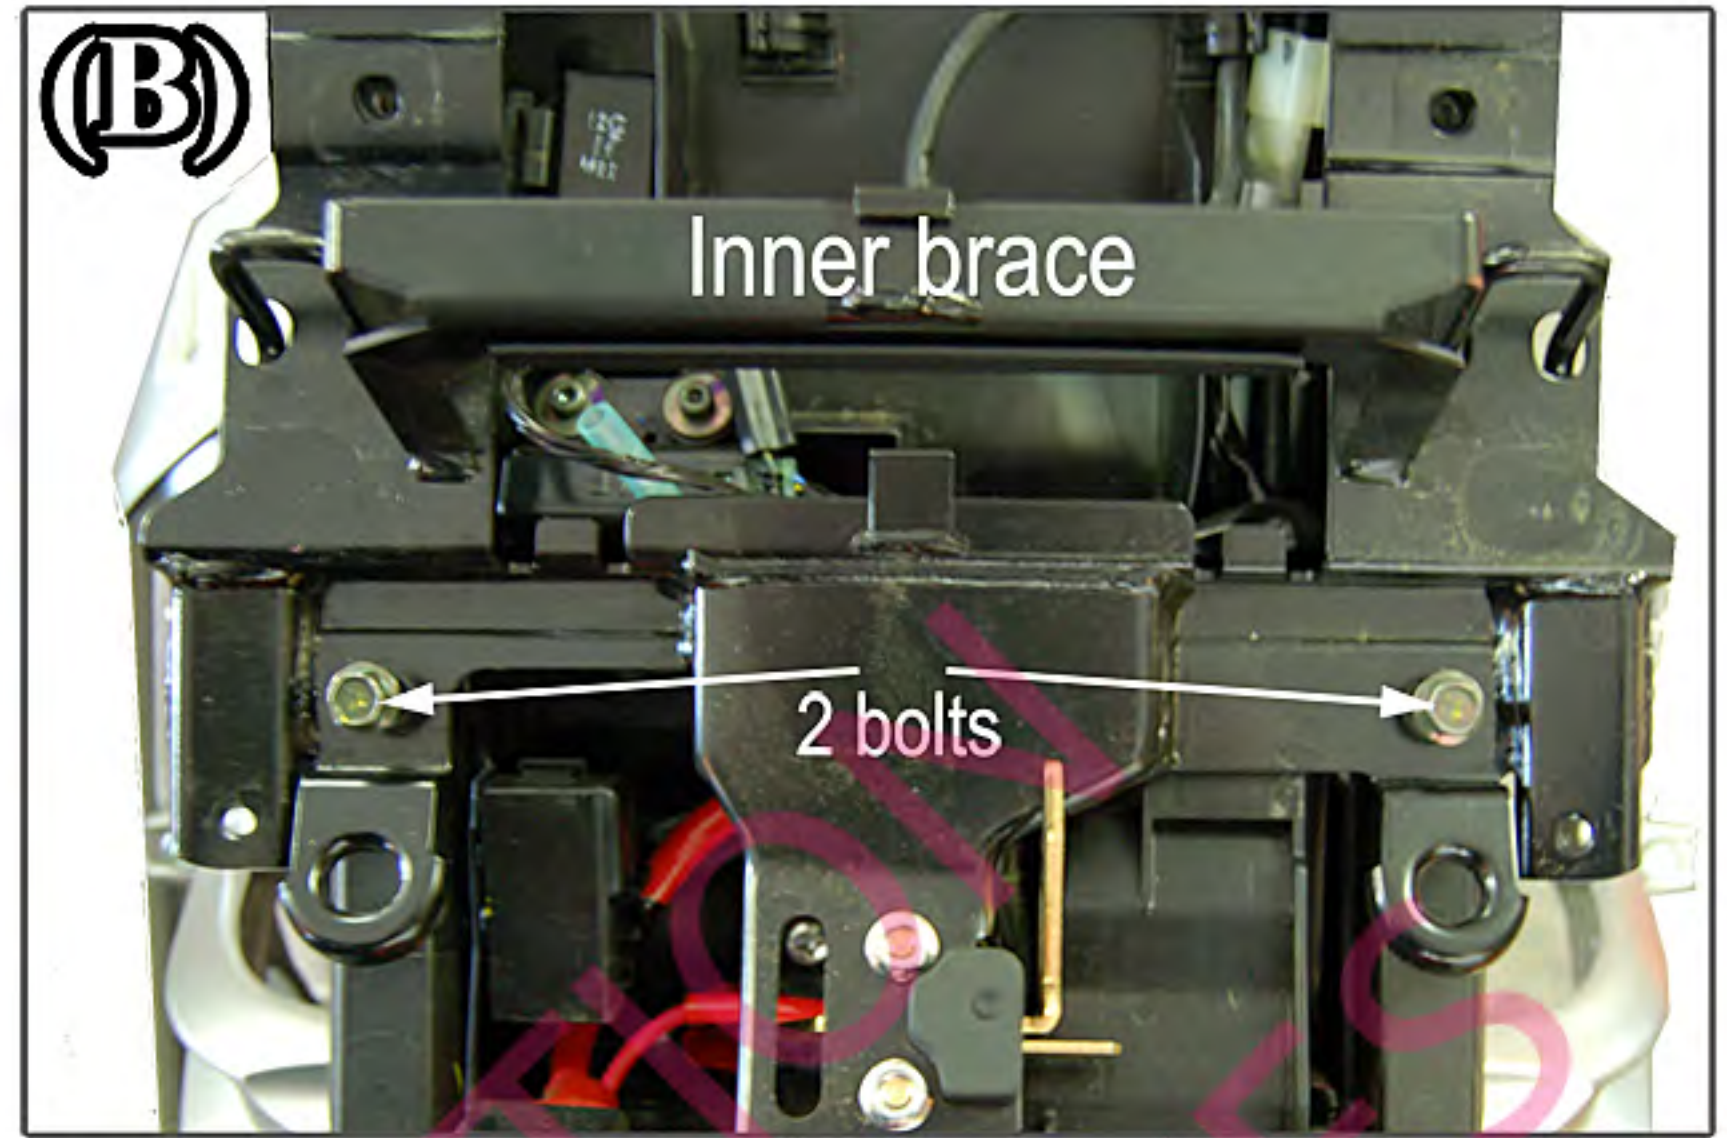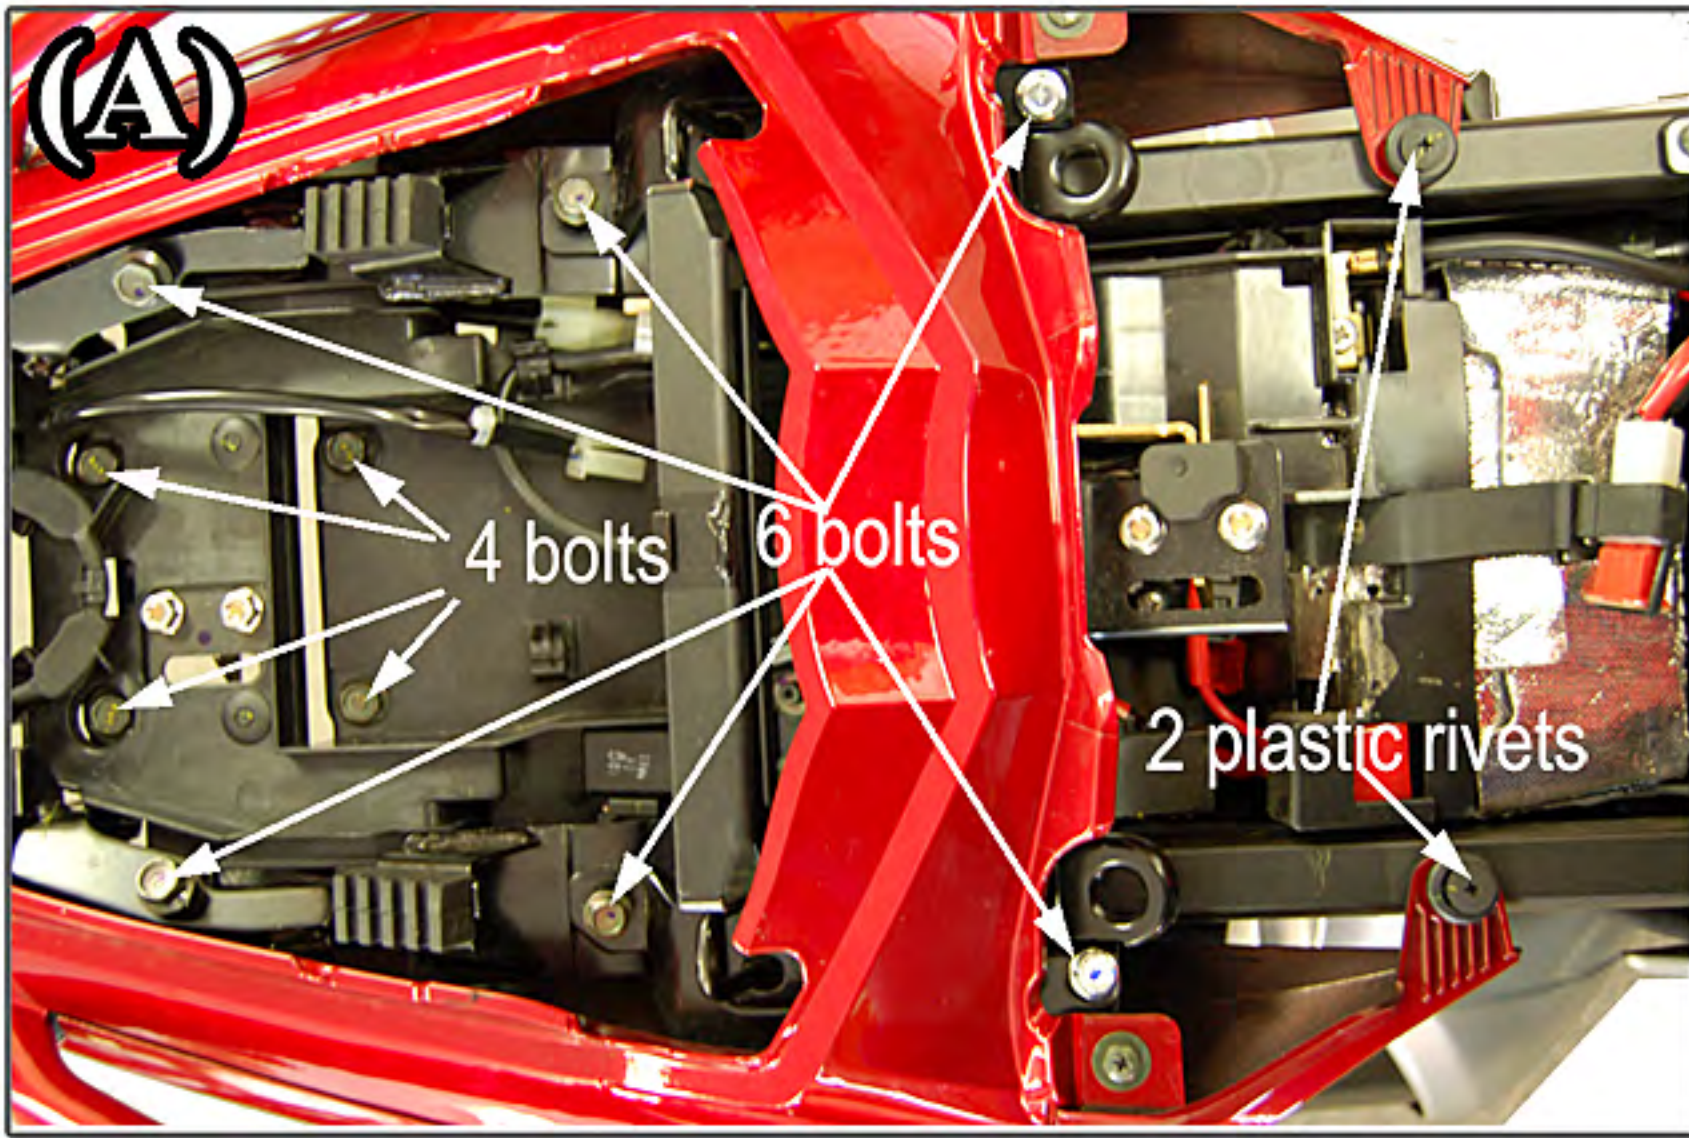

06 YAMAHA FZ1 STANDARD FENDER ELIMINATOR