


**CAUTION: STAINLESS STEEL EDGES CAN BE SHARP!**

- 1 . REMOVE SEAT AND LEFT SIDE PANEL. (ALLEN BOLT ON TOP, THEN PULL OUT).
- 2 LOWER REAR FENDER (2 ALLENS ON BOTTOM, 2 BOLTS ON SIDES. SEE FIG. D).
- 3 DISCONNECT WIRES TO TURN SIGNALS AND LICENSE PLATE LIGHT ON LEFT SIDE. CUT ZIP TIES FROM AROUND WIRES AND FRAME. REMOVE THE LID TO THE CONDUIT.
- 4 REMOVE REAR FENDER.
- 5 DISASSEMBLE LICENSE PLATE LIGHT. SEE FIG. F
- 6 CUT CONNECTORS FROM STOCK SIGNALS AND SPLICE TO NEW ONES. SEE FIG. E
- 7 MOUNT LICENSE PAN TO MAIN PAN USING 2 CENTER HOLES. SEE FIG. C. USE TWO 6X12 ALLEN BOLTS HERE.
- 8 MOUNT SIGNALS, RUN WIRES UP THROUGH OPENING BEHIND LICENSE LIGHT. FIG C
- 9 MOUNT LICENSE PLATE LIGHT. POP PLUG INTO HOLE IN MOUNT. FIG. C ( IT'S HARD TO SEE BUT IT WILL SIT HORIZONTALLY ABOVE OPENING IN MAIN PAN).
- 10 MOUNT COMPLETE ASSEMBLY AS SHOWN IN FIG C UP INTO PLACE. FIG. G. MAKE SURE WIRES ARE OVER FRAME. USE THE FOUR 6X12 ALLEN BOLTS HERE.
- 11 CONNECT WIRES (ZIP TIE). CHECK THAT ALL LIGHTING WORKS PROPERLY, REPLACE SEAT.

**PARTS LIST: MAIN PAN, LICENSE PAN, 2 "L" SIGNAL BRACKETS, 2-6X10 ALLEN BOLTS, 8 – 6X12 ALLEN BOLTS, 6 – 6MM NUTS, 4 WASHERS, 4 WIRE CONNECTORS, 2 ZIP TIES, 1 PAIR SIGNALS.**

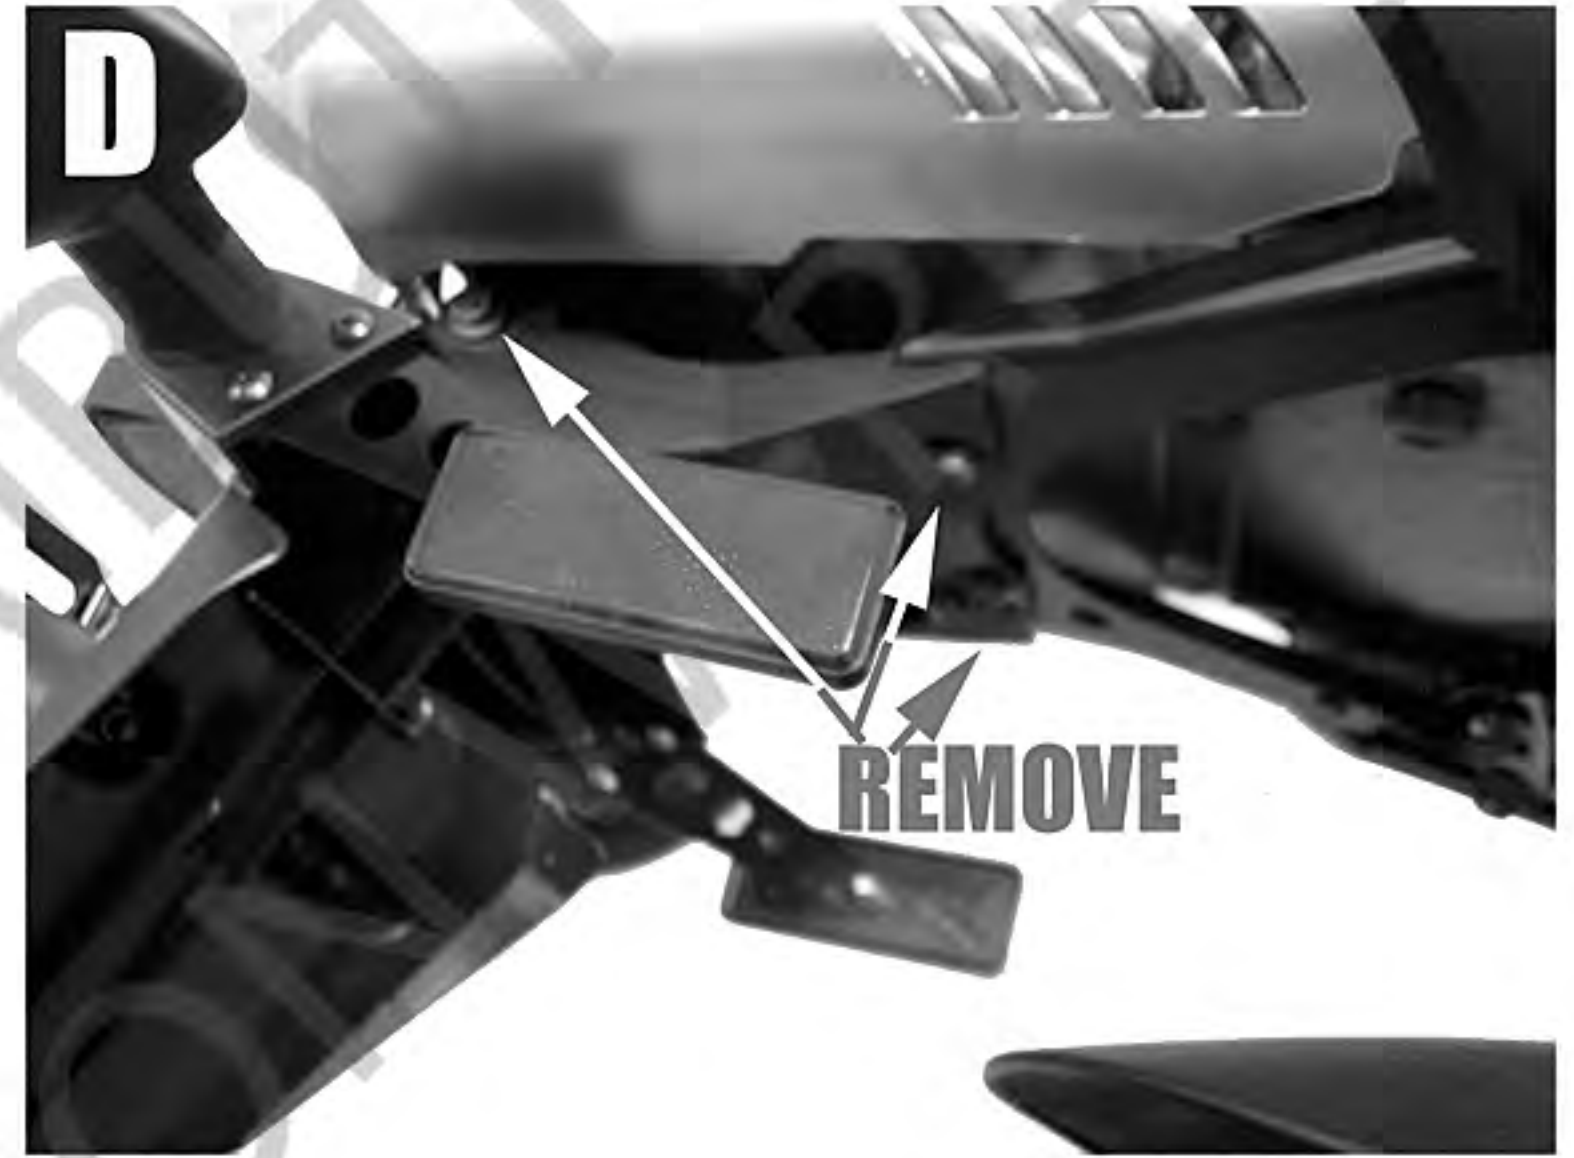

**FZ6**  
**YAMAHA**