




COMPETITION WERKES

<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

(800)736-2114

YAMAHA FZ-07

Page 1

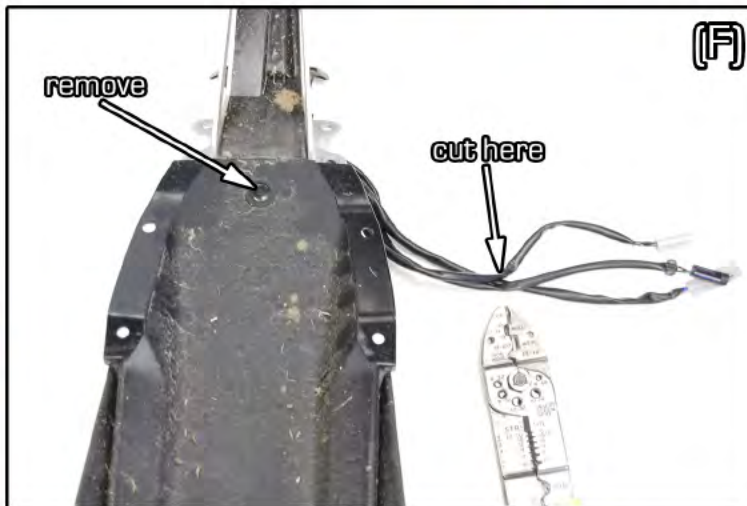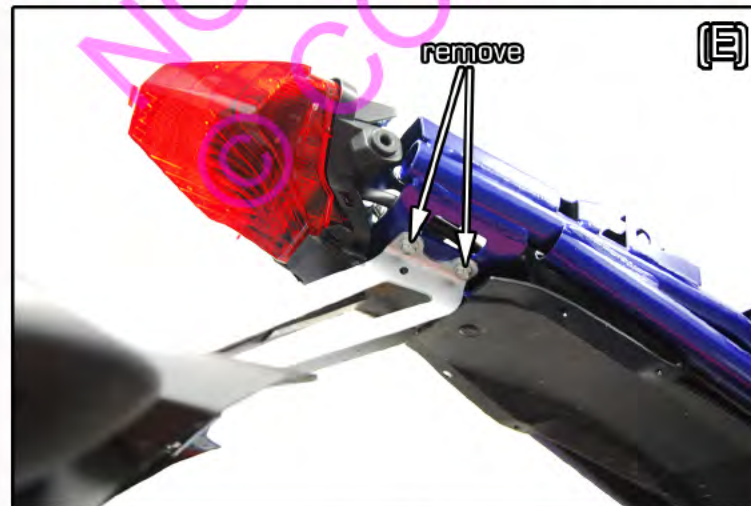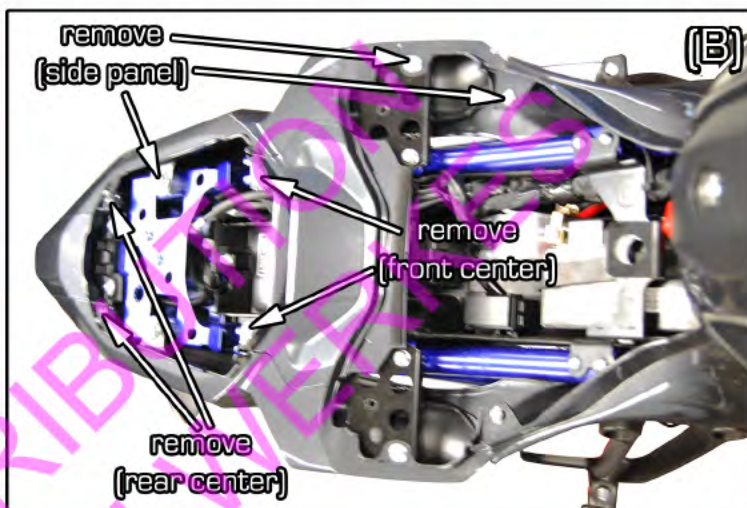

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

1Y700




COMPETITION WERKES

<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>

(800)736-2114

YAMAHA FZ-07

Page 2

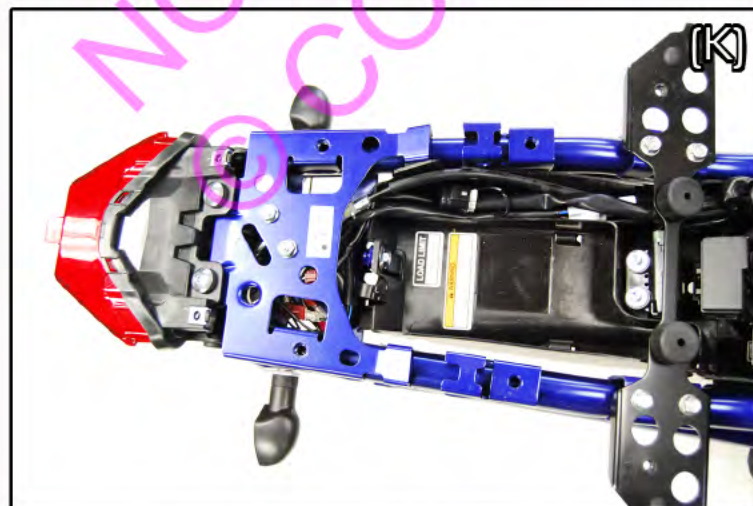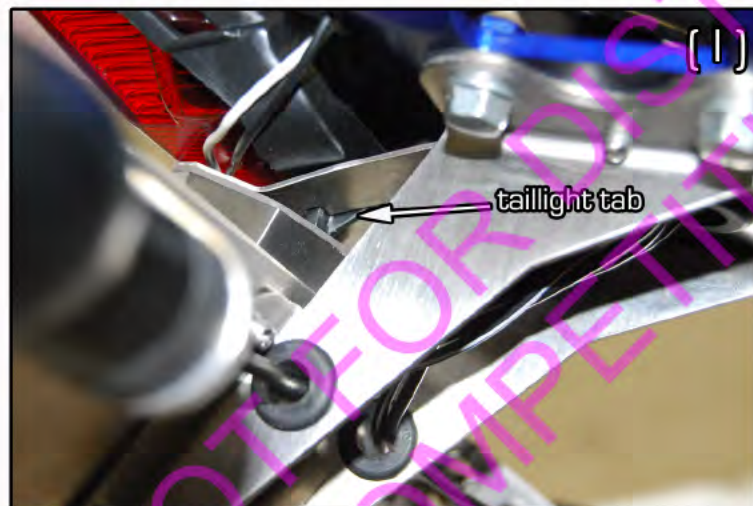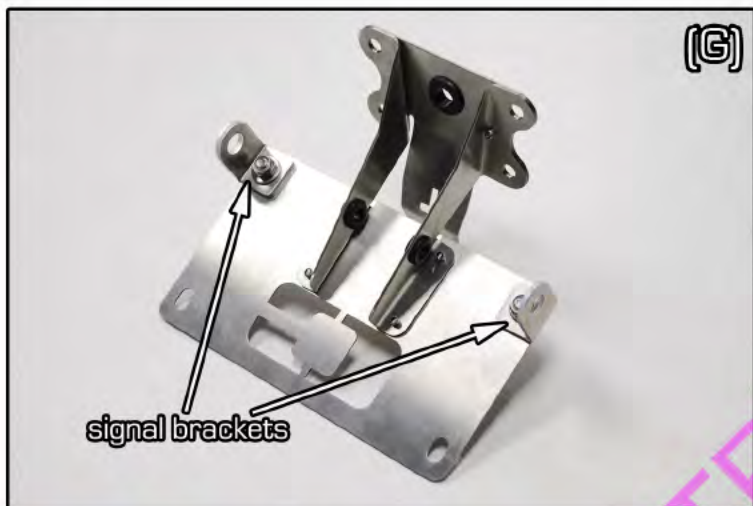

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

1Y700



<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>

(800)736-2114

YAMAHA FZ-07

Page 3

- REMOVAL:
- 1) Remove seats. (rear seat use key, front seat 2- 5mm bolts under corners) *FIG (A)
 - 2) Remove front center tail section (2- phillip screws) *FIG (B)
 - 3) Remove rear center tail section (2- phillip screws) *FIG (B)
 - 4) Remove rear side panels (1- hex bolt, 2- allen bolts, 1- spacer*FIG (B), and 3- plastic rivets *FIG's (C&D) per side). *NOTE* Sizes/placement of hardware. Pull panels out of grommets.
 - 5) Access wires by releasing black retaining clip and snipping zip-ties in storage area. Unplug license light, and turn signals (2- grey connectors, 1- black connector).
 - 6) Remove rear fender assembly (4- 8mm bolts). *FIG (E)
 - 7) Remove plastic undertail from fender assembly (1- plastic rivet). *FIG (F)
 - 8) Cut wires about 6" from connectors. *FIG (F) Plug wire connectors back into stock locations.
- INSTALL:
- 1) Secure your license plate to License Pan (use 2-6x10 allen bolts in bottom holes backed with washers and nuts).
 - 2) Mount Signal Brackets to License Pan (use 6x12 allen bolts in upper holes backed with washers and nuts). *FIG (G)
 - 3) Install Short Stalk Signals to Signal Brackets and route wires through grommets. *FIG (H)
 - 4) Adhere License Light to License Pan. *FIG (H) *NOTE* exchange bullet ends for supplied Butt Connectors.
 - 5) Position taillight tab into slot provided on License Pan. *FIG (I) Secure License Pan (use 4- stock bolts). *FIG (J)
 - 6) Route wires as shown in photos. Connect wires using supplied connectors. Refer to color chart as needed. Check lighting for proper function.
 - 7) Position wires under crossbar (or as desired). *FIG (K)
 - 8) Position plastic undertail back on bike (use tab at front).
 - 9) Replace side panels (use stock rivets and bolts, and spacers). *FIG (L)
 - 10) Position front and rear centers (use stock screws).
 - 11) Replace seats.

PARTS LIST:

- 1- License Pan [w/ Grommets]
- 2- Signal Brackets
- 1- Pair Short Stalks (S1123-C)
 - 1- License Light
 - 2- Butt Connectors
 - 2- 6x10 Allen Bolts
 - 2- 6x12 Allen Bolts
 - 4- Washers
 - 4- 6mm Loc-Nuts

WIRE COLOR CHART:

- STOCK:
- Ground- Black
 - Left- Brown
 - Right- Green
 - License- Blue

- LICENSE LIGHT:
- Ground- Black
 - Positive- White

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

1Y700