




<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

(800)736-2114

WerkesUSA GP Exhaust Insert For Second Generation WerkesUSA Exhaust ONLY.

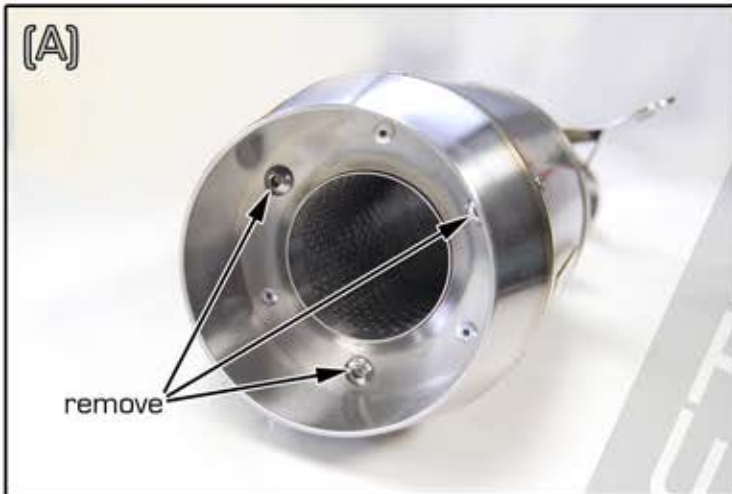

- A) Remove three Allen Bolts from exhaust canister using a 3 mm Allen wrench. ****NOTE**** Carbon builds up on these bolts. Take your time work bolt in and out while adding penetrating oil.



- B) Position Exhaust Insert into exhaust.



- C) Align holes. Secure Exhaust Insert using Allen Bolts previously removed. ***NOTE*** Red Loc-tite is recommended.

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

INSERT