


<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

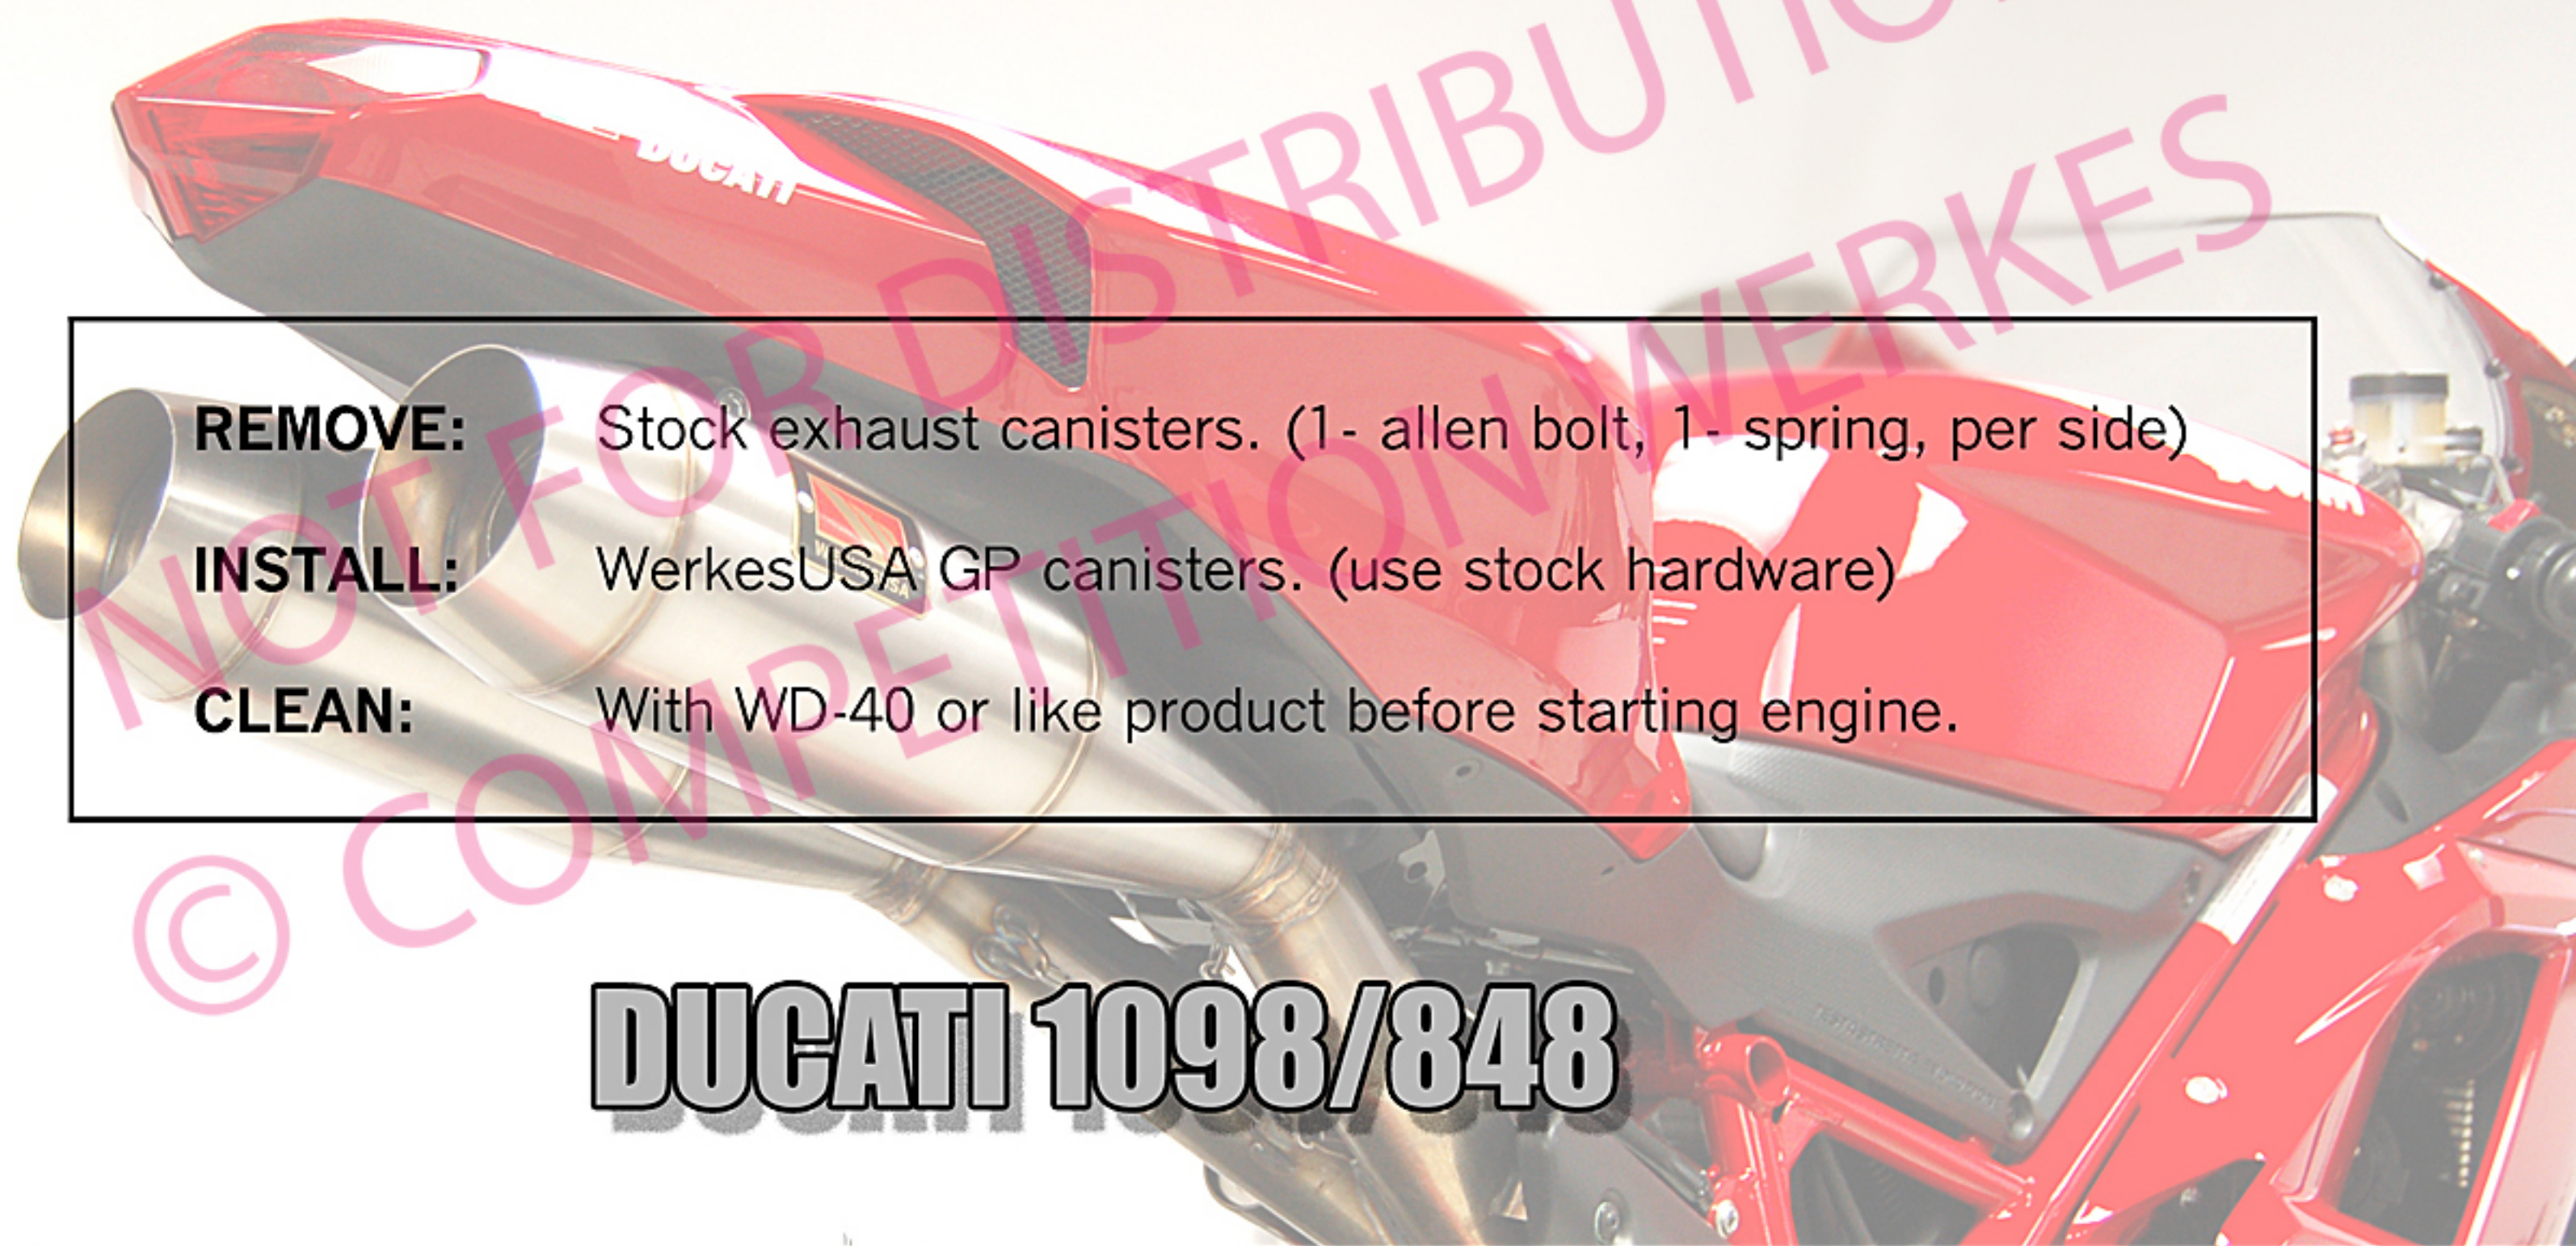

REMOVE: Stock exhaust canisters. (1- allen bolt, 1- spring, per side)

INSTALL: WerkesUSA GP canisters. (use stock hardware)

CLEAN: With WD-40 or like product before starting engine.

DUCATI 1098/848

****IMPORTANT**** To insure uniform coloring thoroughly clean with WD-40 or like product before starting motorcycle ****IMPORTANT****

The purchaser releases Competition Werkes Inc from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.