



<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

DUCATI

(800)736-2114

Panigale V4 GP Exhaust System

***NOTE* This is NOT an easy installation. Mechanical skill and specialty tools are required!**

REMOVAL:

- 1) Remove both (left and right) lower side panels.
- 2) Remove exhaust valve cables from servo motor (right side near radiator). *FIG (A)
- 3) Remove right side heel guard.
- 4) Remove black upper right side heat shield cover (7- bolts at locations shown in *FIG (B))
- 5) Remove aluminum upper right side heat shield (3- bolts) *FIG (B)
- 6) Remove remaining upper heat shield assembly (4- bolts). -let hang- *FIG's (C) & (D). Watch for falling washers from top of heat shield
- 7) Remove chain guard (1- bolt then slide back). *FIG (E)
- 8) Remove 4- exhaust springs (at inlets) and mounting bolts (1- per side) from exhaust canister.
- 9) Remove rear headpipe nuts from flanges. *FIG's (D) & (F) using tool shown *FIG (G).
- 10) Remove exhaust canister by sliding back (off front head pipe). Then down (off rear headpipe).

INSTALLATION:

- 1) Reinstall rear headpipe (telescopic magnet tool helps to get nuts in position).
- 2) Reinstall upper heat shield assembly and cover.
- 3) Install Exhaust Mount (use supplied 8x16 bolts). *FIG's (H) & (I)
- 4) Install Left Front Mid-pipe with supplied Chain Guard Mount behind mid-pipe bracket. (use supplied 8x20 bolt, washer, and stock springs) Identify using *FIG (H).
- 5) Install Left Rear Mid-pipe (use supplied springs). Use *FIG (H) to help identify (steps 5-9).
- 6) Install Right Front Mid-pipe (use stock springs and supplied 8x20 bolts and washers)
- 7) Install Right Rear Mid-pipe. (use supplied springs) Identify using *FIG (H)
- 8) Install Upper Canister (use supplied spring, 8x25 bolt, washers and ny-loc nut) *FIG (I)
- 9) Install Lower Canister (use supplied spring, 6x12 bolt, and ny-loc nut)
- 10) Reinstall chain guard..
- 11) Install supplied Heel Guard.
- 12) Reinstall side panels.
- 13) Clean exhaust of finger prints and grime using WD-40 (or similar) before starting engine.

****IMPORTANT**** To insure uniform coloring thoroughly clean with WD-40 or like product before starting motorcycle ****IMPORTANT****

PARTS LIST:

- 1- Upper Canister 1- Lower Canister 4- Mid-pipe Sections 6- Springs
 2- 8x16 Bolts 2- 8x20 Bolts 1- 8x25 Bolt 4- 8mm Washers 1- 8mm Ny-loc Nut
 1- 6x12 Bolt 1- 6mm Ny-Loc Nut 1- Chain Guard Mount 1- Heel Guard 1- Exhaust Mount






The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

WDPV4



<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

(800)736-2114

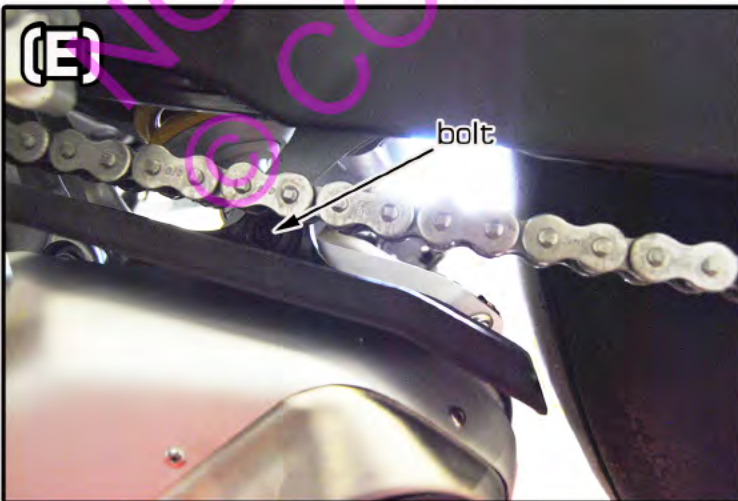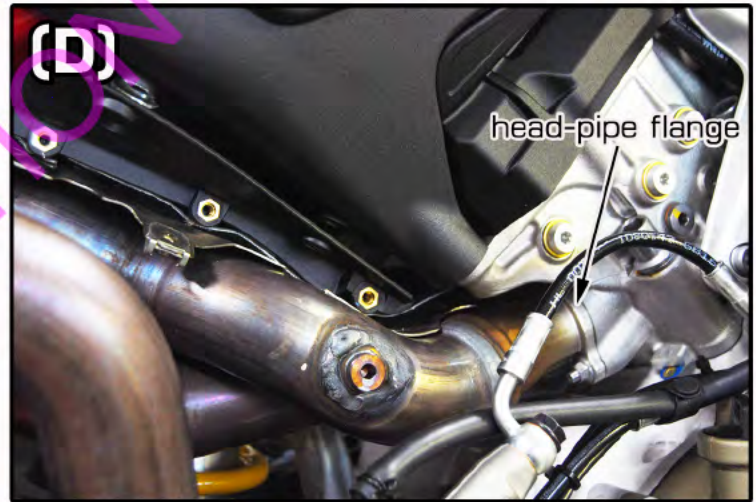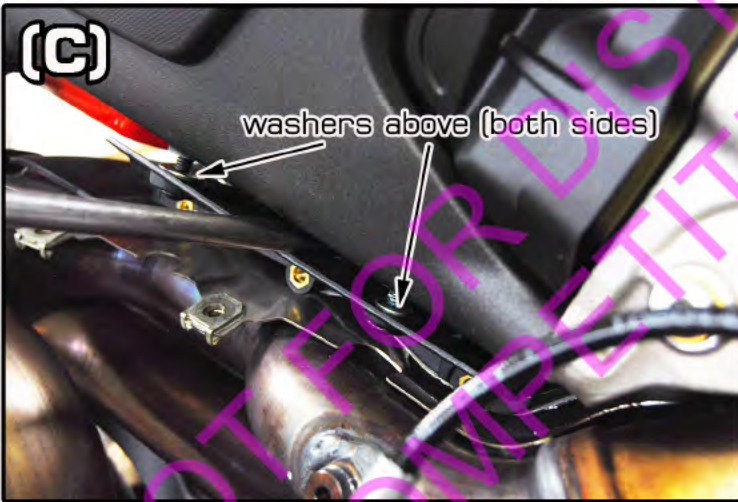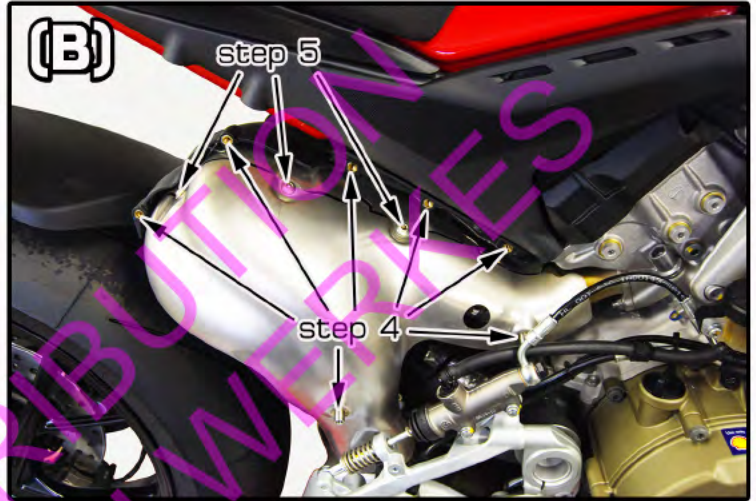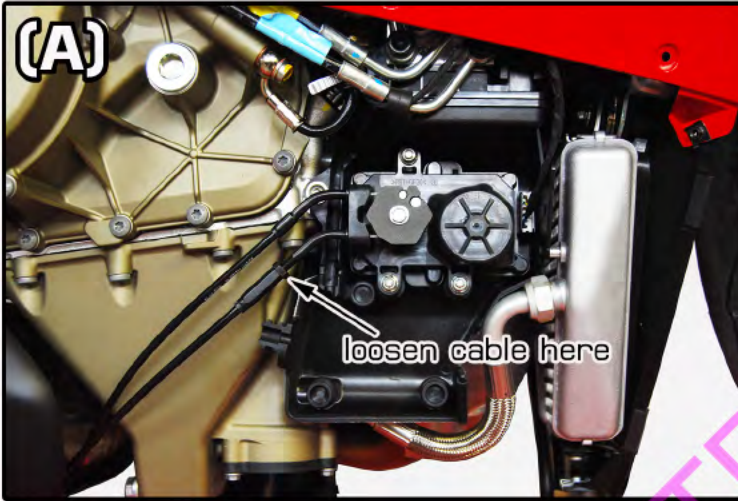




The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

WDPV4



<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

(800)736-2114

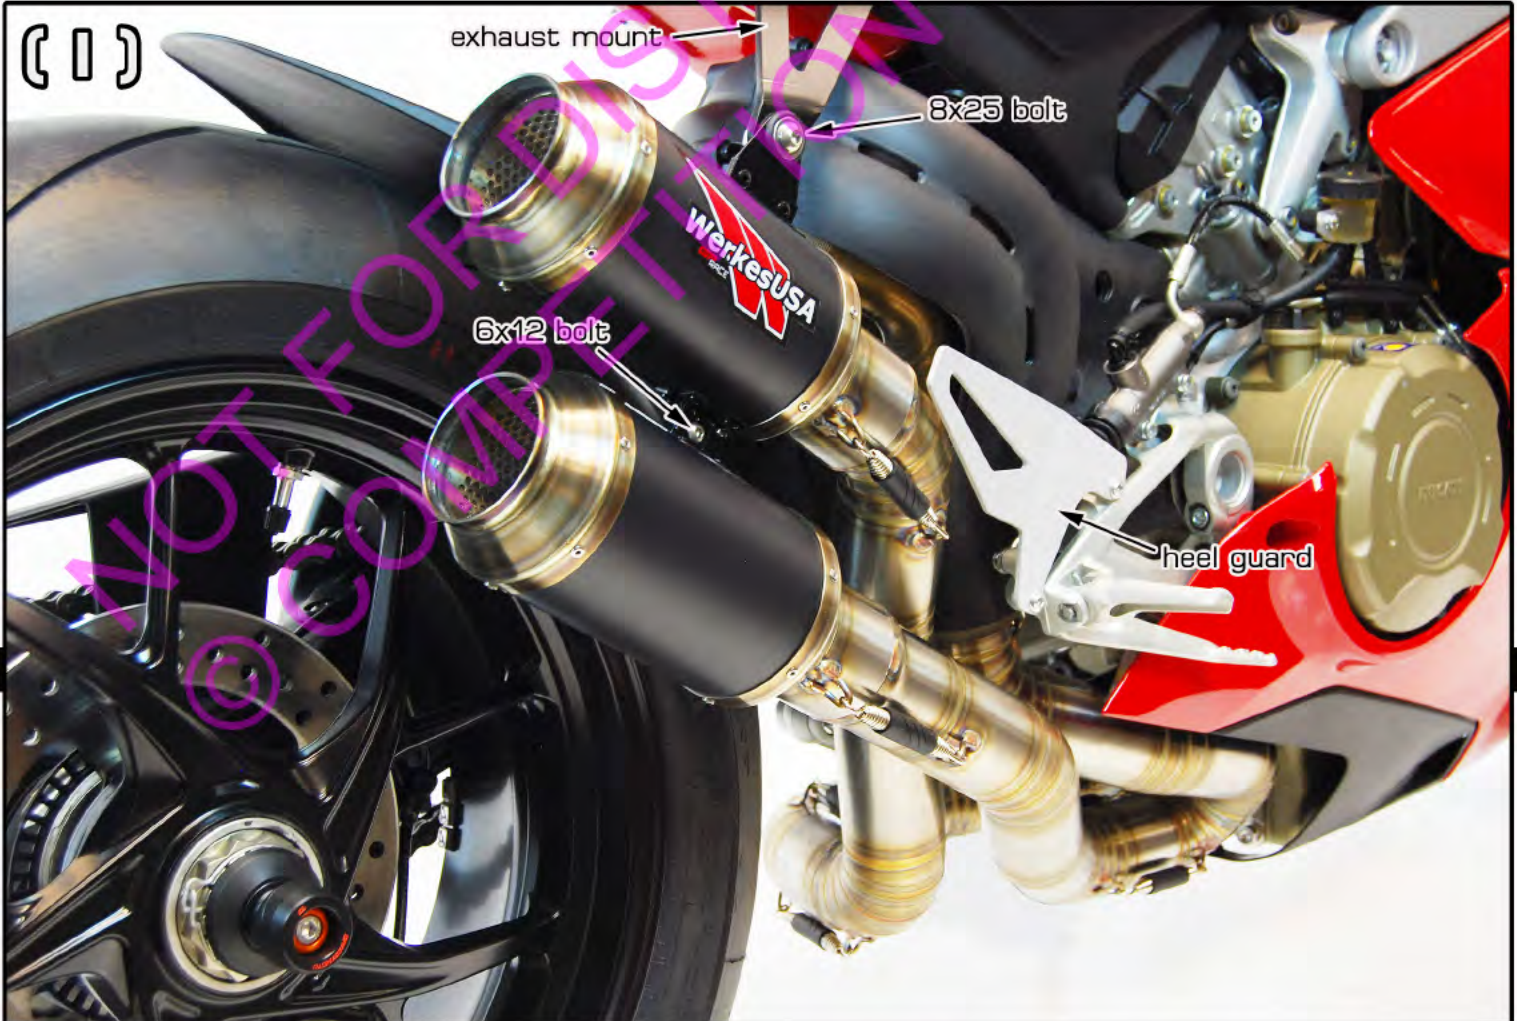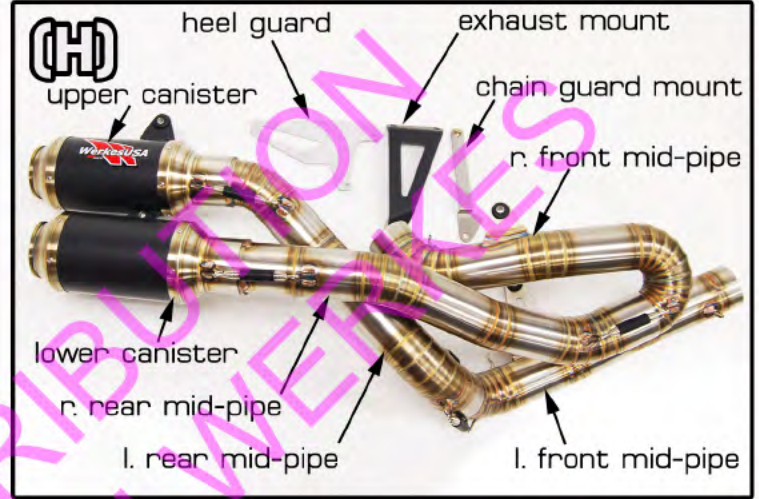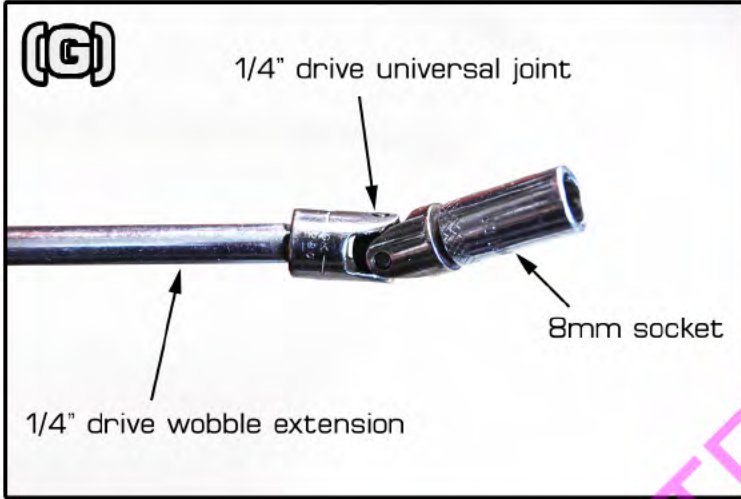

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

WDPV4