




Honda CBR600rr slip-on exhaust

(800)736-2114

<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

- REMOVAL:
- 1) Remove rear seat (use key). Remove front seat (2- allen bolts under corners) * FIG (A).
 - 2) Remove tail section (remove 4- allen bolts * FIG (A), pull out on side panels below front seat, spread tail section outward, and pull off towards the rear).
 - 3) Unplug turn signals and license light. * FIG's (B)&(C) * NOTE * white, blue, and orange connectors.
 - 4) Remove rear fender (4- bolts) * FIG (B) Slide toward rear to release clips to heat shield.
 - 5) Remove side plastic heat shield (1- allen bolt) * FIG (D).
 - 6) Remove right rear footrests (2- allen bolts) * FIG (D)
 - 7) Remove front (right side) footrest (2- allen bolts, 1- allen bolt to heat shield) * FIG (D). **Let hang.**
 - 8) Remove side aluminum heat shield (1- allen bolt on top) * FIG (D).
 - 9) Remove exhaust canister (3- bolts and a clamp, pull down and back).
 - 10) Trace a line on the undertail heat shield (use a Sharpie). Use bottom edge of subframe as a guide.
 - 11) Remove undertail aluminum heat shield (1- allen bolt on top * FIG (A), 1-allen lower right).

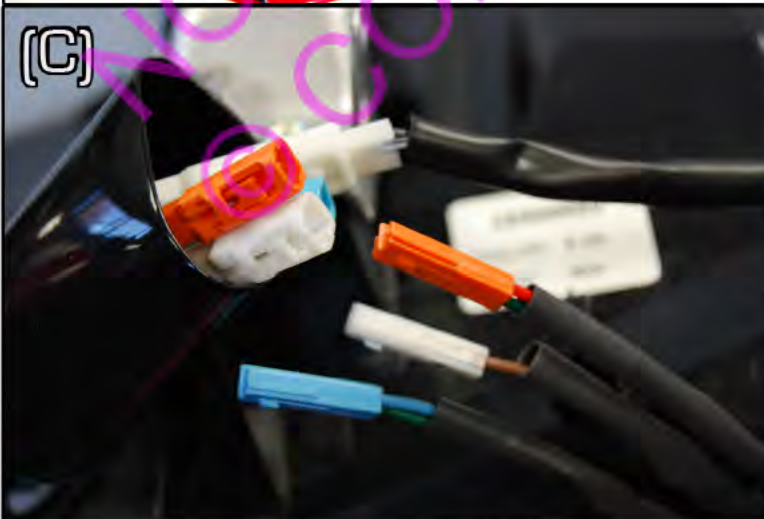

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

WH608-S

Honda CBR600rr

slip-on exhaust

PARTS LIST:

1- Pair GP Canisters 1- Mid Pipe 2- 2" Clamps 1- Mounting Bracket 1- 8x65 Bolt
 2- 8x16 Bolts 2- 8mm Washers 1- 8mm Nut OPTIONAL: 1- Fender Eliminator (1H608LTD)

- CUTTING:**
- 1) Make first cut across (use tin snips). *FIG (E)
 - 2) Make second cuts leaving mounting points.
 - 3) File or sand rough edges.
 - 4) *OPTIONAL* Paint heat shield black.

- INSTALL:**
- 1) Replace undertail heat shield.
 - 2) Remove rearmost subframe bolt.
 - 3) Install Mounting Bracket to subframe.
 (1- 8x65mm bolt, washer and nut) *FIG (F)
 - 4) Install Mid Pipe with 2" Clamp (leave loose).
 - 5) Install Canisters (1- 2" clamp, 2- 8x16 bolts).
 Align for proper clearance before tightening.
 - 6) Install stock side heat shield, rear foot rest, front foot rest, and plastic heat shield.
 - 7) Install Fender Eliminator (per instructions).
 - 8) Clean exhaust with WD-40 or similar before starting engine.



(F)



The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

WH608-S