

<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

## (800)736-2114



- 1) Remove side exhaust canister (1- bolt, 1- nut, 1- clamp).
- 2) Remove front lower heat shield (5- bolts). \*FIG's (A) & (B)
- 3) Remove headpipe (1- O2 sensor, 2- bolts, 1- clamp).
- Remove center exhaust chamber (2- upper bolts, 1- lower bolt).
  \*NOTE\*: remove u-nuts from frame to prevent loss.
- 5) Transfer grommet, lower spacer tube, and large inlet gasket from center exhaust chamber \*FIG (C) to WerkesUSA Chamber Delete \*FIG (D).
- 6) Install headpipe (leave loose).
- 7) Install WerkesUSA Chamber Delete using stock bolt and clamp (leave loose). \*FIG (E)
- 8) Install side exhaust canister using stock hardware (leave loose).
- 9) Check clearances of headpipe and tighten. Securely install O2 sensor.
- 10) Tighten clamp and bolt on WerkesUSA Chamber Delete.
- 11) Tighten clamp and bolt on side exhaust canister.
- 12) Clean exhaust with WD-40 (or similar) before starting.

"IMPORTANT" To insure uniform coloring thoroughly clean with WD-40 or like product before starting motorcycle "IMPORTANT"

## PARTS LIST: 1- WerkesUSA Chamber Delete


The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

## WHV402D



<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>



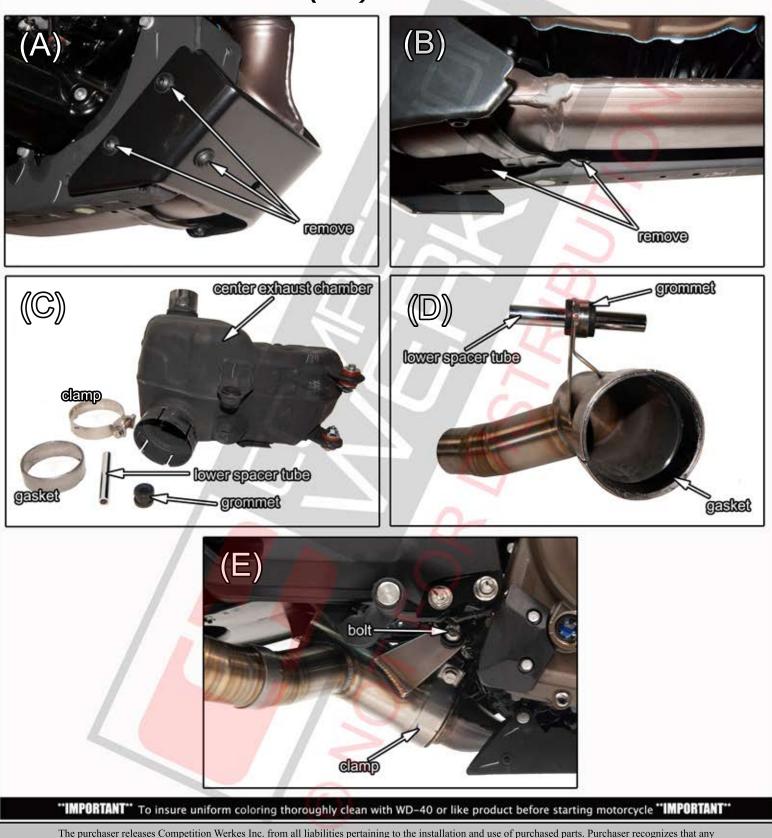

alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

## WHV402D