





<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

(800)736-2114

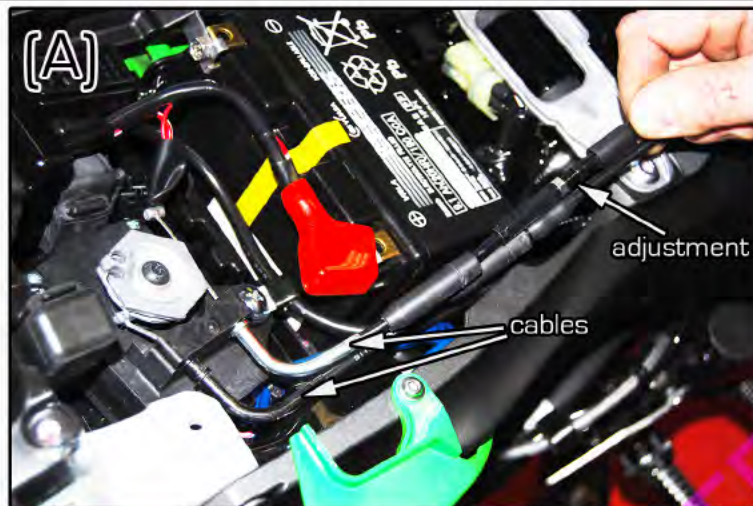


- REMOVAL:
- 1) Remove rear seat (use key).
 - 2) Remove top of tailsection (4- allen bolts).
 - 3) Remove front seat (2-bolts, slide back).
 - 4) Remove cables from exhaust valve motor (can gain slack by adjusting cable). *FIG (A)
 - 5) Cut zip-tie (near tank).
 - 6) Remove cable retaining hook from inside of frame above swingarm pivot. *FIG's (B&C). Use extension from left side of bike.
 - 7) Pull cables through frame.
 - 8) Remove upper heatshield (2-bolts, slide forward).
 - 9) Remove exhaust canister (1- bolt, 1- clamp).
 - 10) Remove lower heatshield (3- bolts).
 - 11) Remove catalytic converter (1- bolt, 1- clamp).
 - 12) Remove stock rearset bolts and replace with longer 8x35 Allen Bolts and spacers provided.

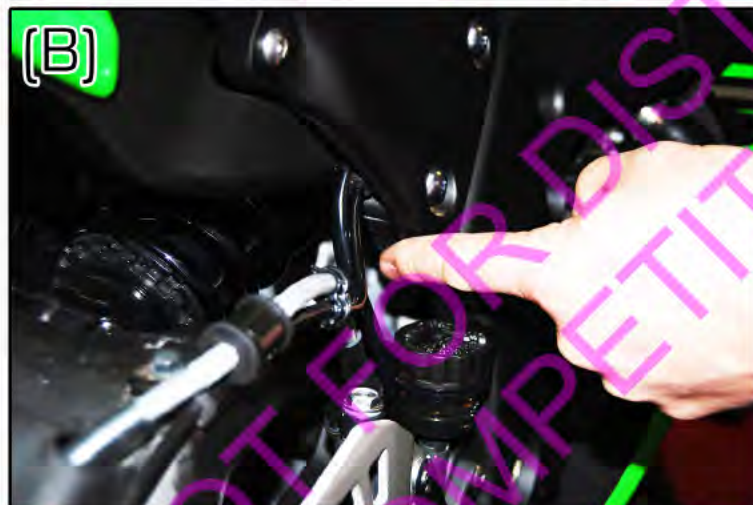

- INSTALL:
- 1) Secure exhaust Mounting Bracket behind rearset with supplied 8mm Nuts. *FIG (D)
 - 2) Install WerkesUSA Exhaust Canister using supplied Clamp, 8x25 Bolt, Washers, and Nut.

PARTS LIST:

- | | |
|---------------------|---------------------------------|
| 1- Exhaust Canister | 1- Mounting Bracket (w/grommet) |
| 2- 8x35 Allen Bolts | 1- 8x25 Allen Bolt |
| | 2- 8mm Washers |
| 3- 8mm Nuts | 2- 8mm Spacer |
| | 1- 2.125" Clamp |

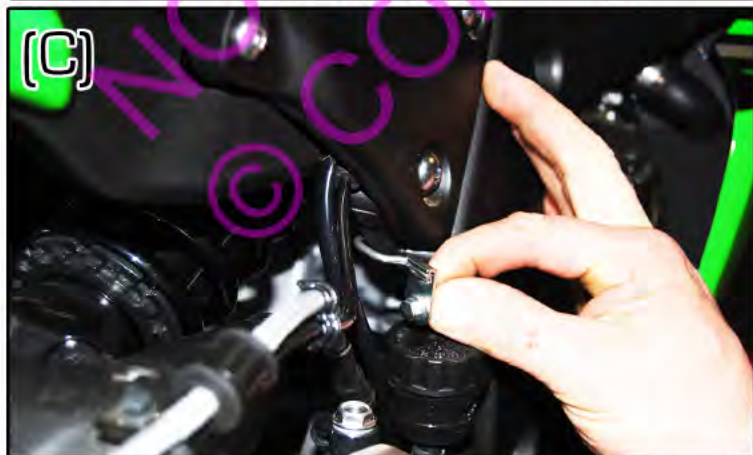

****IMPORTANT**** To insure uniform coloring thoroughly clean with WD-40 or like product before starting motorcycle ****IMPORTANT****

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

WK1005R