



<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

**(800)736-2114**

**KTM**  
**Super Duke R** Slip-on Exhaust

REMOVE: Rear stock exhaust canister (1- bolt, 1- clamp)


INSTALL: WerkesUSA exhaust canister (stock clamp, supplied 8x35mm bolt and washer).

CLEAN: Exhaust of fingerprints and grime with WD 40 (or similar) before starting engine.

Parts List:

1- WerkesUSA Canister 1 8x35mm Bolt 1- 8mm Washer

**\*\*IMPORTANT\*\*** To insure uniform coloring thoroughly clean with WD-40 or like product before starting motorcycle **\*\*IMPORTANT\*\***

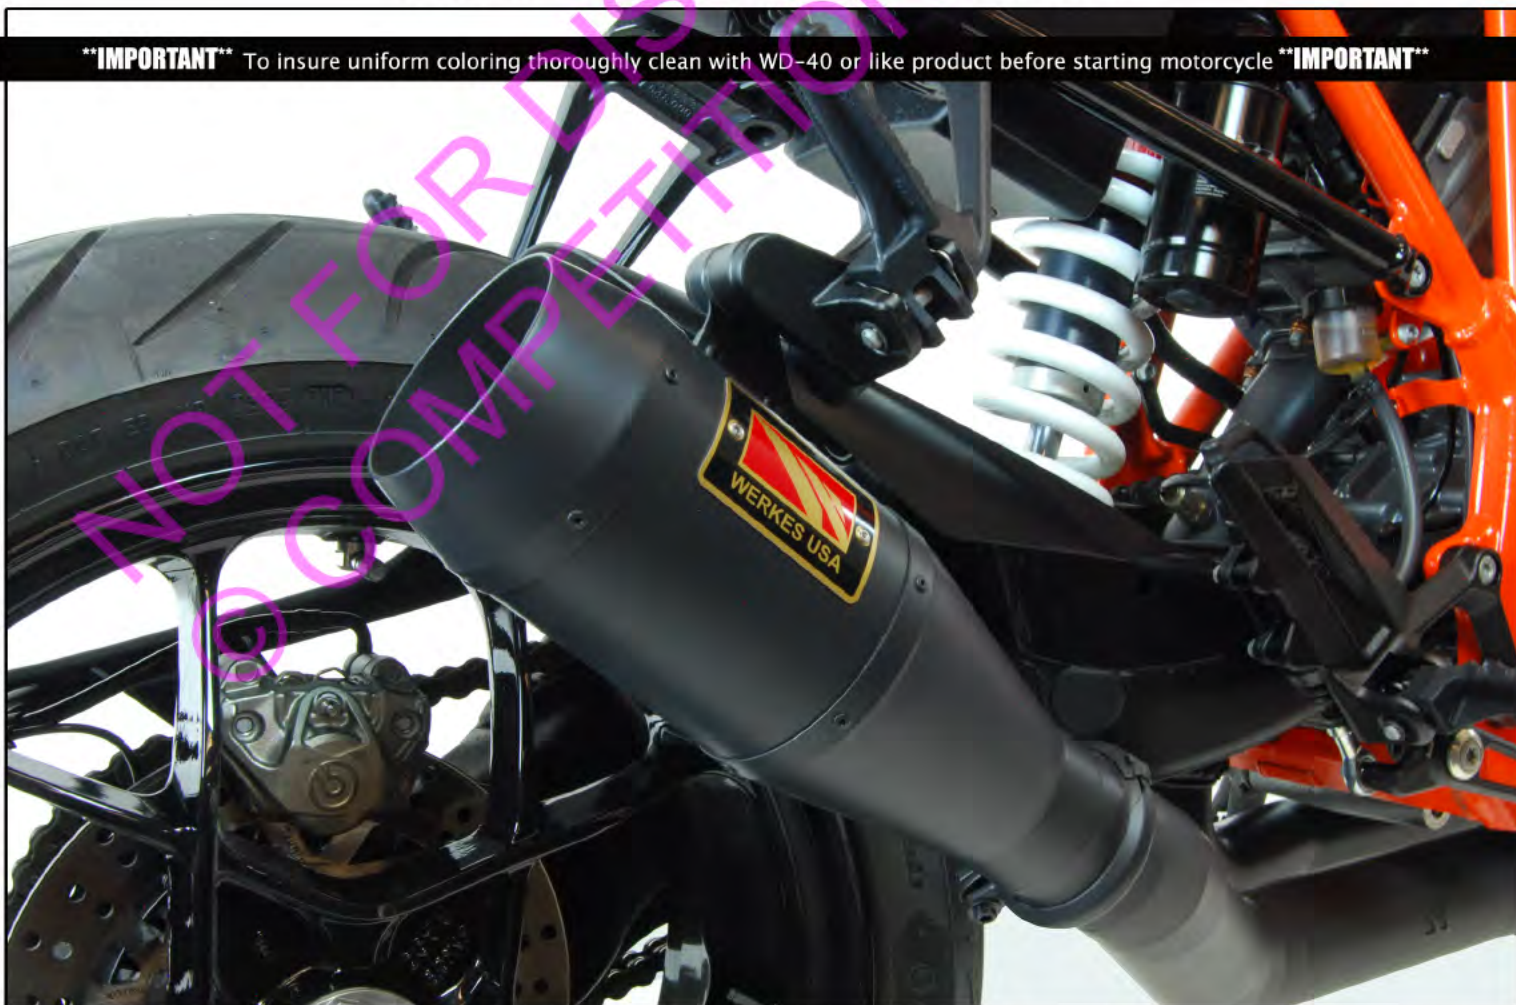

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

**WKT1291**