



**KTM**  
**390 Duke**

<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

**(800)736-2114**

Page 1


- REMOVE:
- 1) Remove lower engine shield and rearmost bracket (on bottom of engine).
  - 2) Unbolt headpipe at cylinder.
  - 3) Remove stock exhaust (1-clamp, 2- upper bolts, 1- long lower bolt, then drop down and out).
- INSTALL:
- 1) Transfer lower spacer and rubber bushings from stock exhaust to WerkesUSA exhaust canister. (see photo)
  - 2) Install headpipe at cylinder. **\*\*Leave loose\*\***
  - 3) Install WerkesUSA Canister. (use supplied clamp and long stock bolt through rubber bushings/ spacer). Adjust to desired fit (verify headpipe clearance near water pump).
  - 4) Tighten headpipe nuts and exhaust bolt. Tighten clamp securely.
  - 5) Reinstall rearmost bracket and lower engine shield.
  - 6) Double check all hardware is tight.
  - 7) Clean exhaust with WD-40 or similar before starting.



PARTS LIST:

1- WerkesUSA Canister    1-1.75" Clamp    1- Cover Plate (not used on Duke)

**\*\*IMPORTANT\*\*** To insure uniform coloring thoroughly clean with WD-40 or like product before starting motorcycle **\*\*IMPORTANT\*\***

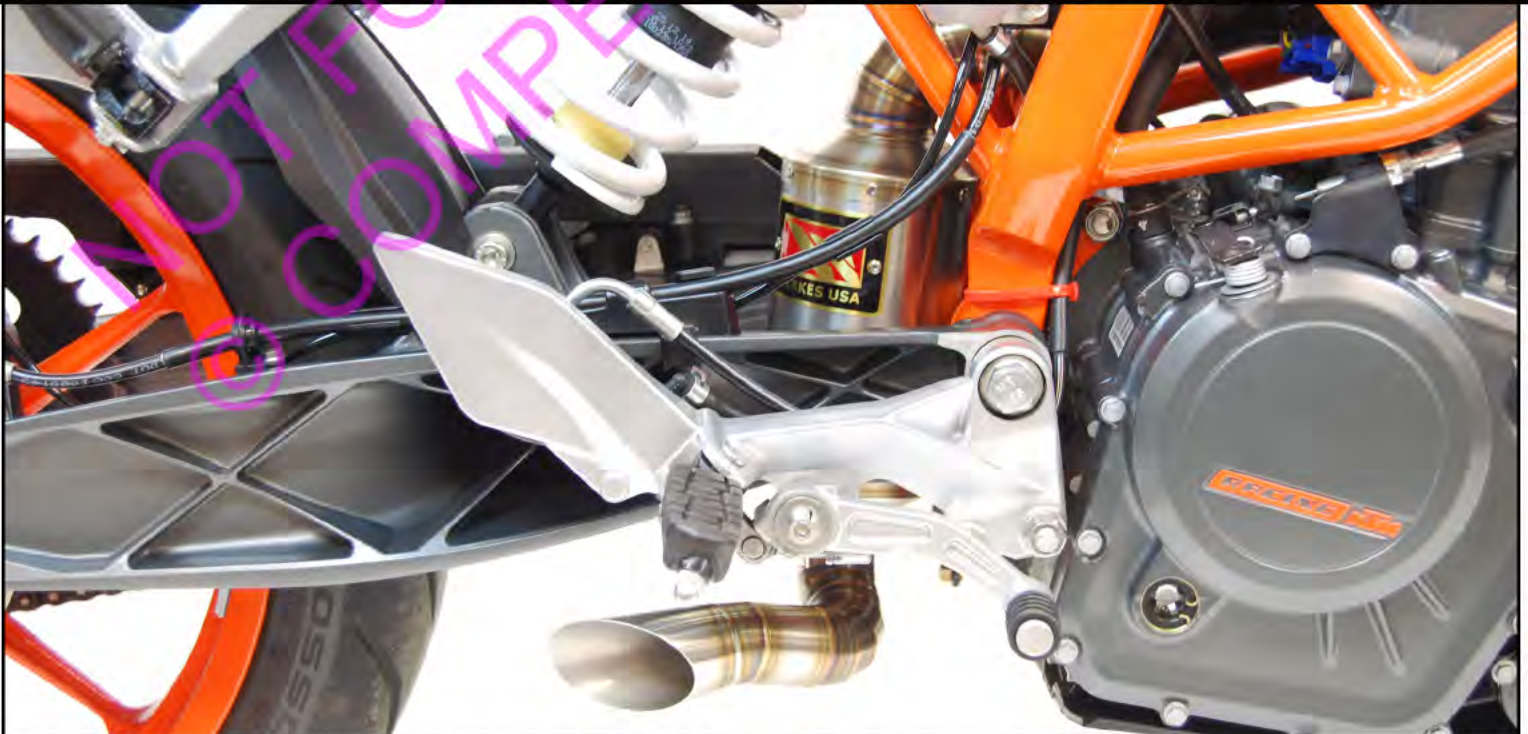

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

**WKT390**



**KTM**  
**RC390**

<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

**(800)736-2114**

Page 2

- REMOVE:
- 1) Remove rightside lower body panel.
  - 2) Remove lower body panel bracket. \*See photo to right\*
  - 3) Unbolt headpipe at cylinder.
  - 4) Remove stock exhaust (1- clamp, 2- upper bolts, 1- lower bolt, then drop down and out).
  - 5) Remove exhaust trim panel from body panel (pry off green washers)



- INSTALL:
- 1) Transfer lower spacer and rubber bushings from stock exhaust to WerkesUSA exhaust canister. (see middle photo)
  - 2) Install Cover Plate to lower body panel. (2- 6x30 with 6mm nuts on back) \*\*NOTE: snug, not tight.\*\* See bottom photo.
  - 3) Install headpipe at cylinder. \*\*Leave loose\*\*
  - 4) Install WerkesUSA Canister. (use supplied clamp and long stock bolt through rubber bushings/spacer) \*\*Leave clamp loose\*\*
  - 5) Replace lower body panel bracket. Secure rightside lower body panel.
  - 6) Adjust exhaust for proper fit. Check tip, and headpipe clearance. Tighten clamp, headpipe nuts, and exhaust bolt.
  - 7) Clean exhaust with WD-40 or similar before starting



**PARTS LIST:**

- |                       |                   |
|-----------------------|-------------------|
| 2- 6x30 Allen Bolts   | 2- 6mm Nyloc Nuts |
| 1- WerkesUSA Canister | 1- 1.75" Clamp    |
|                       | 1- Cover Plate    |

**\*\*IMPORTANT\*\*** To insure uniform coloring thoroughly clean with WD-40 or like product before starting motorcycle **\*\*IMPORTANT\*\***



The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

**WKT390**