




(800)736-2114

KTM 690 Duke GP Slip On Exhaust

PARTS LIST:

1- GP Canister 1- Spacer 1- 8x30 Allen Bolt 2- 8mm Washers 1- 8mm Nyloc Nut

<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

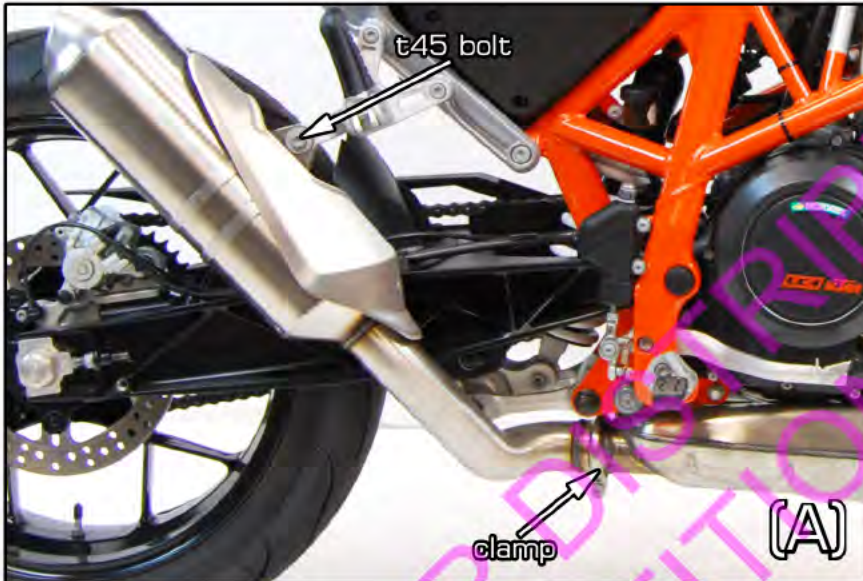

1) Remove stock exhaust canister (1- t-45 bolt, 1- clamp). *FIG (A)

2) Install WerkesUSA GP exhaust canister (1- 8x30 allen bolt, and washer through stock grommet and supplied spacer. Back with washer and 8mm nut. Reuse stock clamp). *FIG (B)



3) Clean all fingerprints and grime by wiping down with WD-40 (or similar).

****IMPORTANT**** To insure uniform coloring thoroughly clean with WD-40 or like product before starting motorcycle ****IMPORTANT****

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

WKT690S-S