



<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

(800)736-2114

MV Agusta B3



REMOVAL:


- 1) Remove stock muffler (3- allen bolts).
- 2) Remove left heatshield (2- allen bolts). * FIG (A)

INSTALL:

- 1) Replace heatshield with Washer behind front hole and Spring Mount behind rear hole using supplied 6x16 Allen Bolts. * FIG (A)
- 2) Slide WerkesUSA GP Canister into position. Attach supplied Exhaust Spring from Spring Mount to GP Canister.
- 3) Position supplied Heel Guard between rearset and GP Canister. Secure BOTH using stock bolt and supplied Washer and Nut.

PARTS LIST:

1- GP Canister 1- Heel Guard 1- Exhaust Spring 1- Spring Mount 2- 6x16 Allen Bolts
2- Washers 1- 6mm Nut

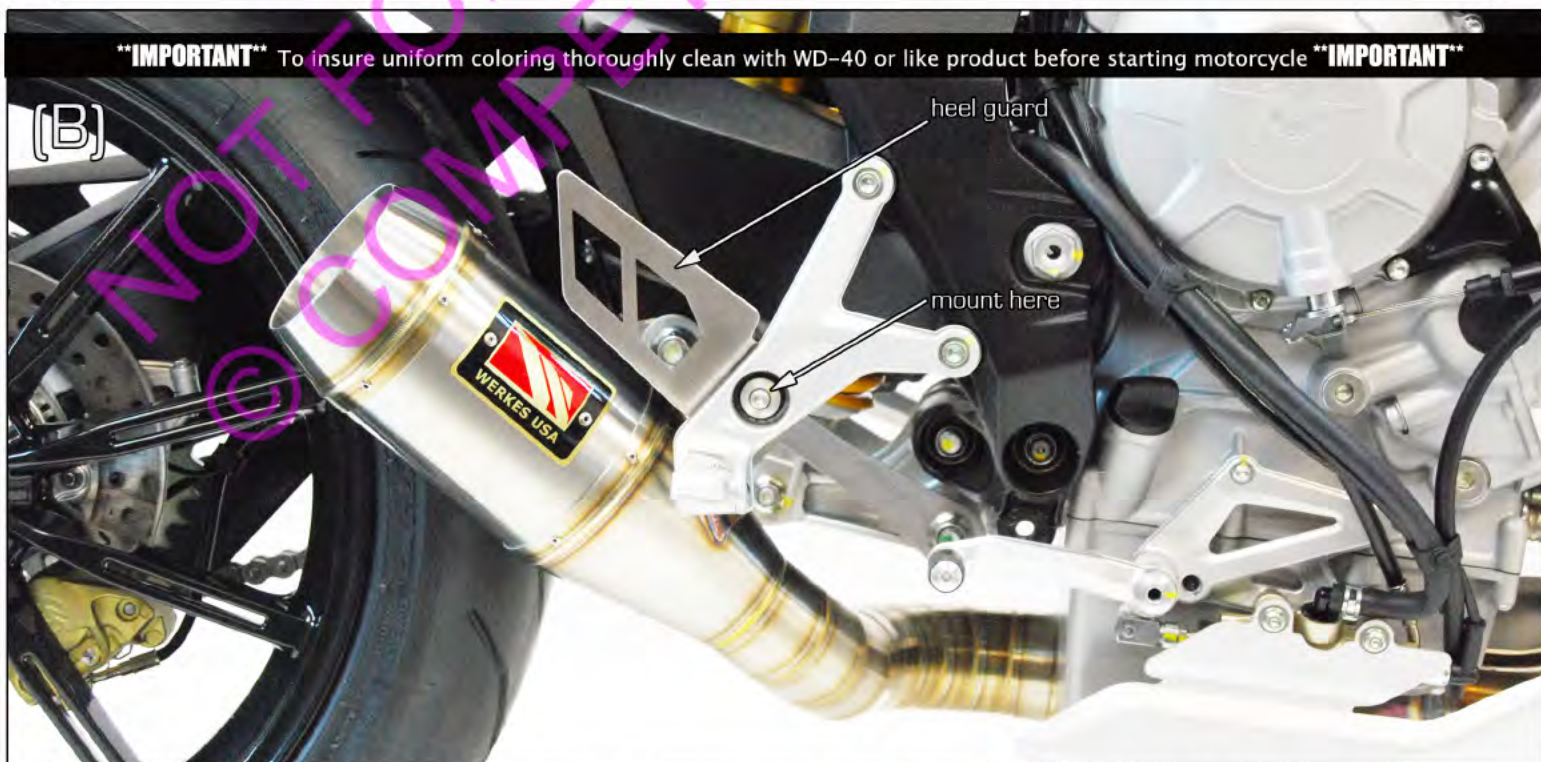

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

WMV800A