




<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

(800)736-2114

2013 Triumph Street Triple GP Slip-On Exhaust

****IMPORTANT**** To insure uniform coloring thoroughly clean with WD-40 or like product before starting motorcycle ****IMPORTANT****

- REMOVE: Stock exhaust canister (2- bolts and 1- clamp).
- INSTALL: WerkesUSA GP exhaust canister using stock bolt clamp, and gasket.
- CLEAN: Exhaust of fingerprints oil, or grime before starting motorcycle.

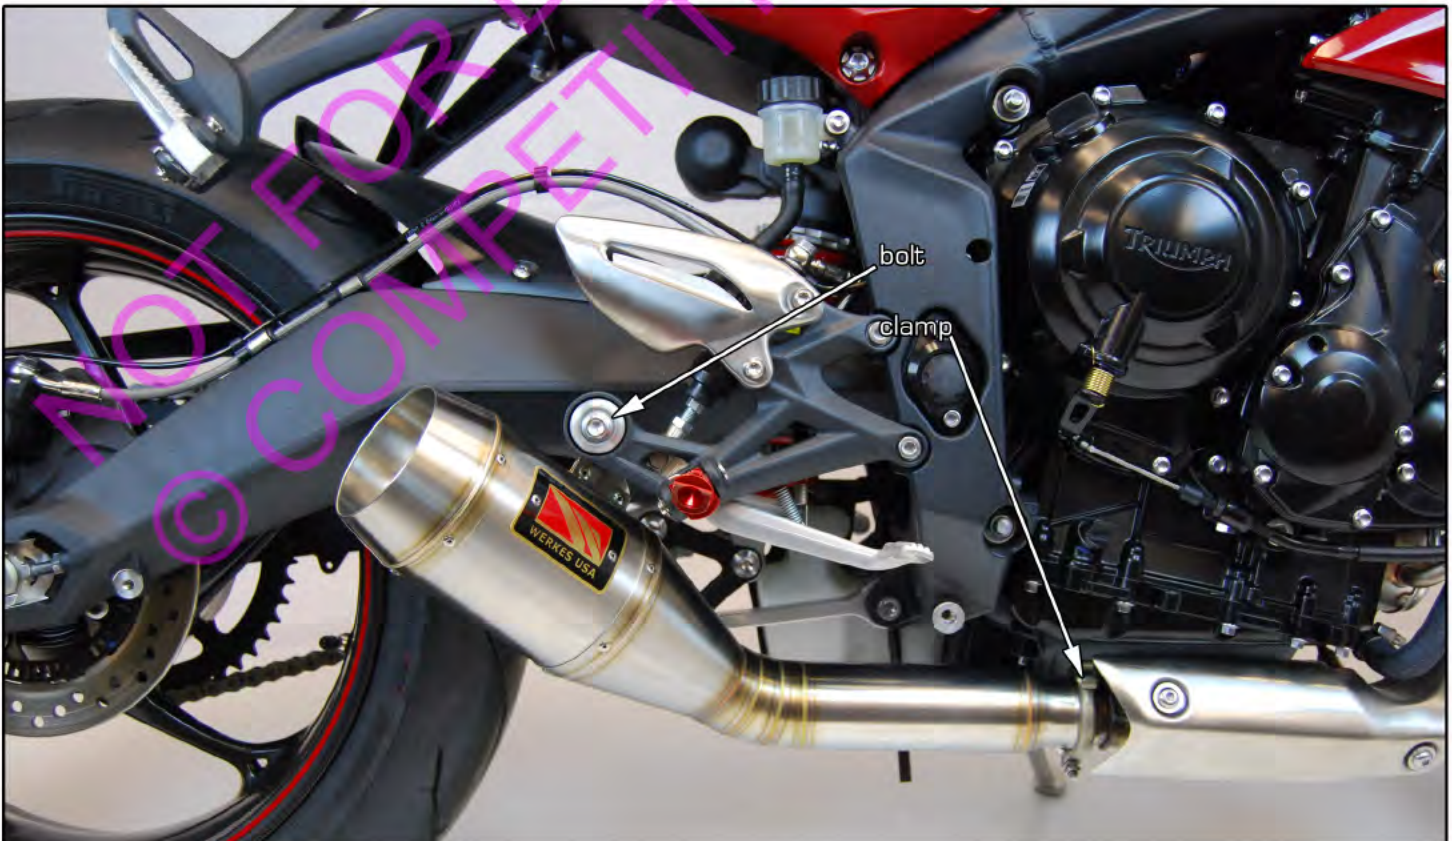

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

WT678-S