



ACRYLIC - LINED SHOWER INSTALLATION

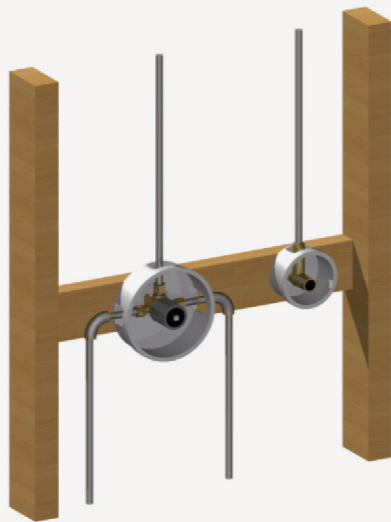


01 Fix cups to the frame so that they finish flush with the wall stud. Plumb out the fittings.


*use the supplied packers if needed to achieve the correct set back requirement for the water control valve.

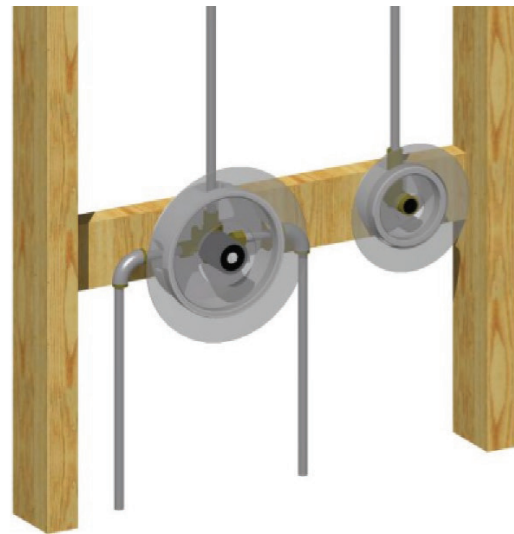

02 Remove the manufacturer's recommended size access hole for the mixer from the large flange. Remove a 30mm hole from the small flange. Apply a bead of sealant to the channel on the flanges and firmly push onto the cups.

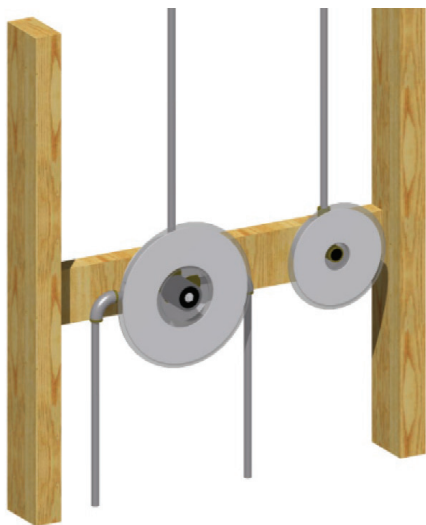

03 Remove identical holes from the wall lining to match. Apply the remainder of the sealant to the outside of the flanges.

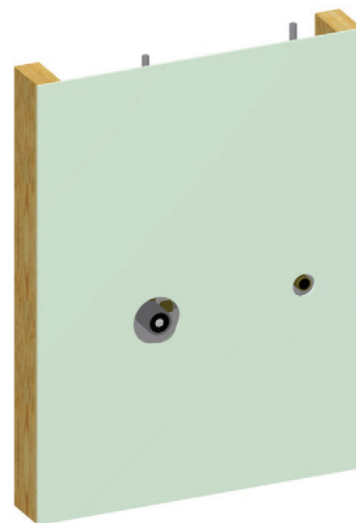

04 Fix the wall lining. Distribute excess sealant over exposed wall lining core in the holes.

sales@wetwallcaddy.nz
www.wetwallcaddy.nz

Copyright © 2009 Aquatite Enterprises Limited. All rights reserved. This document may not be reproduced or republished in whole or part in any form without the prior written consent of Aquatite Enterprises Limited. While every precaution has been taken in the preparation of this literature, Aquatite Enterprises Limited assumes no liability for errors or omissions, or from any damages resulting from the use of this information. The contents and any product specifications within this document are subject to revision due to ongoing product improvements and may change without notice. The Aquatite, Wetwall Caddy, and Cavity Cup names and logotypes are trademarks of Aquatite Enterprises Limited.

**PROTECT YOURSELF
AND YOUR CLIENTS
WETWALL CADDY™**