



DIFFICULTY



TOOLS/SUPPLIES

- Plastic Trim Removal Tool
- T-10 Torx Driver
- Phillips Screw Driver
- Center Punch/Scribe Tool
- Power Drill
- 3/16" and 1/2" Drill Bits
- Soldering Iron & Solder
- Tape or Heat Shrink

INSTALLATION

- Step 1. Remove tray from console
- Step 2. Mark and drill holes in tray
- Step 3. Attach charging coil to tray
- Step 4. Trim and attach mat to substrate
- Step 5. Remove armrest lid
- Step 6. Remove trim pieces to route harness
- Step 7. Splice into ignition cable for 12v
- Step 8. Reassemble vehicle

INSTALL LOCATION

Top Tray of Center Console



TIPS & TRICKS

ITEM	WIRE COLOR	WIRE LOCATION
Accessory	Violet/Green	ignition switch, black 7 pin plug, pin 5


- Tip 1. Double check scale of printed ruler to make sure that the print is to the correct scale.
- Tip 2. Lay cutout paper templates on card stock to position correctly over charging coil.
- Tip 3. Trace template to card stock and cut out.
- Tip 4. Lay card stock template on mounting surface to make sure that you have the correct template and check for correct fitments

Let me give you a hand!

brandmotion.com/1310template



MAT

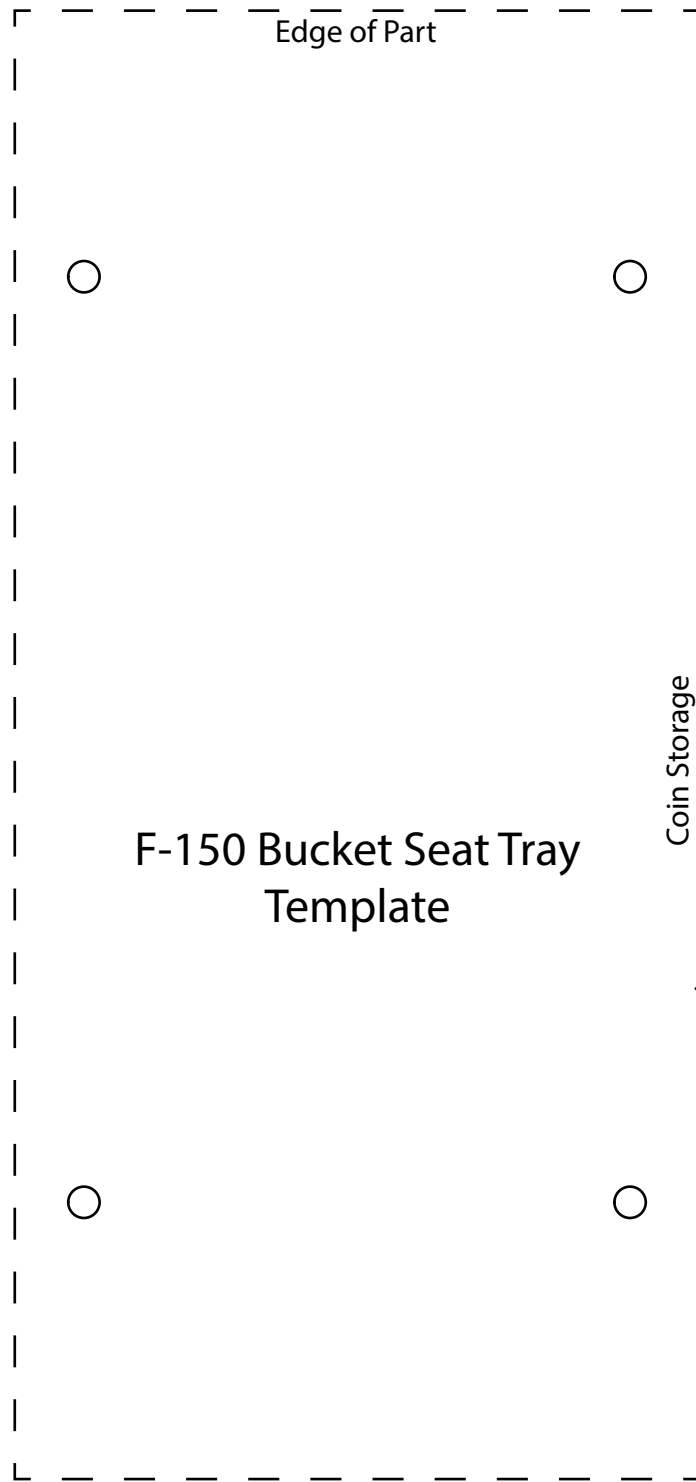


1cm

1in



F-150 FACTORY MAT

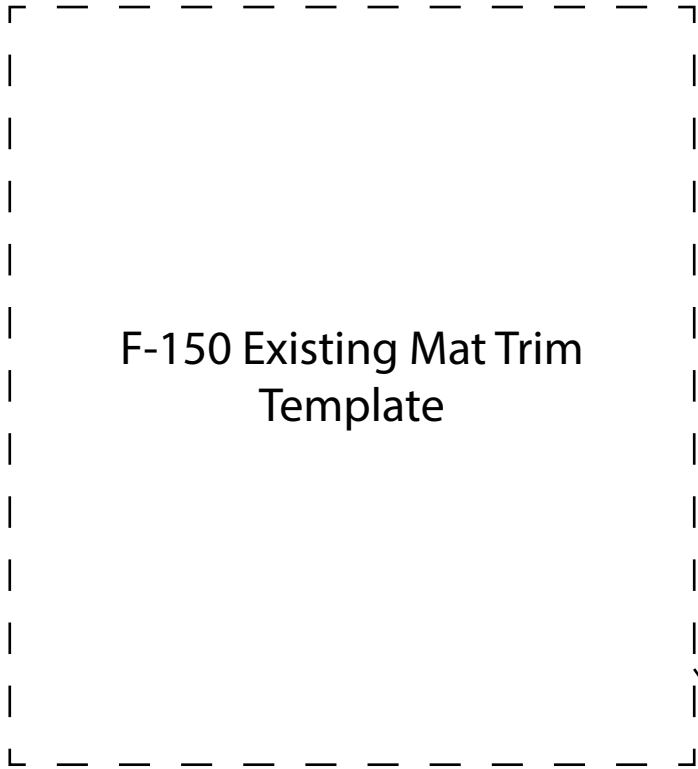

F-150 Existing Mat Trim
Template

