


GT86 BRZ Diffuser Install Instructions

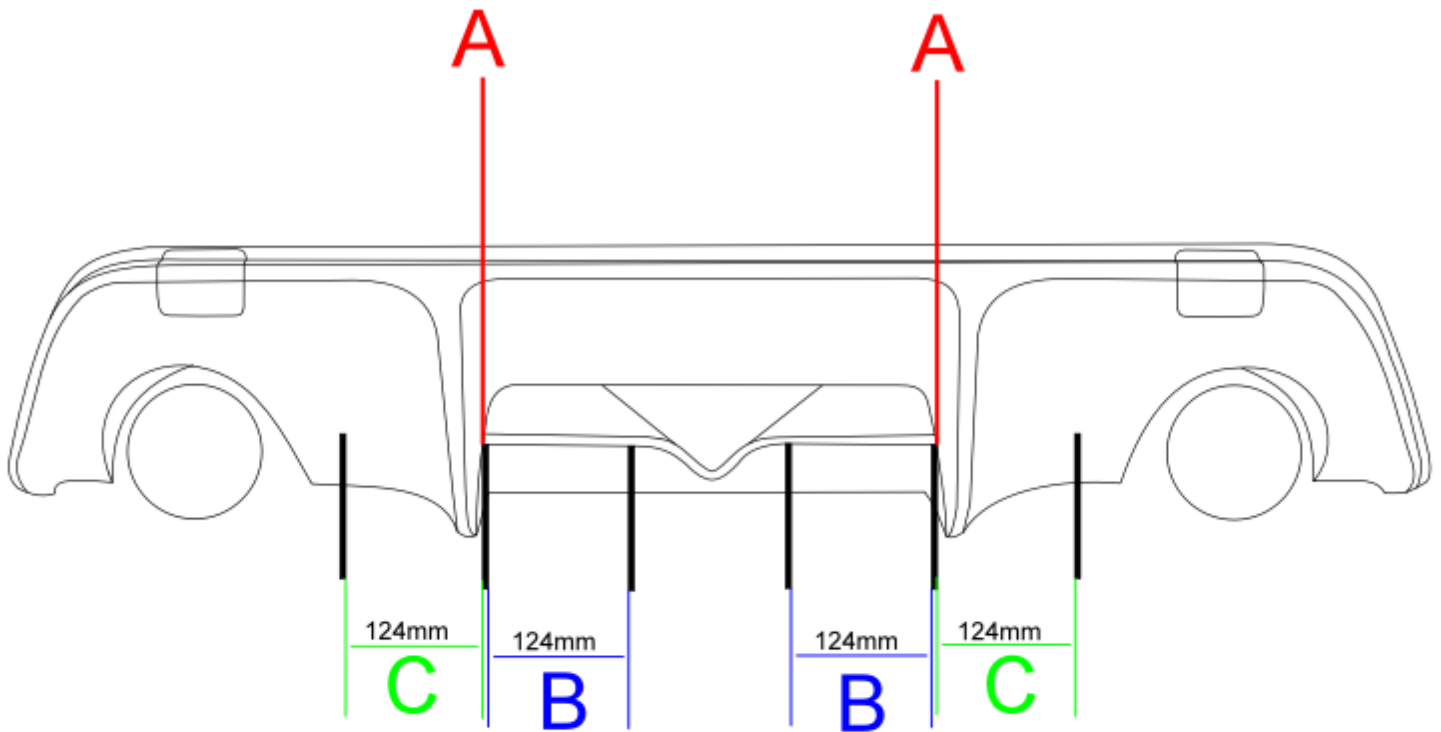

Instructions:

Note:

- Set A and B are identical. Set C differentiate in size. Each set consists of a left and a right, determined by the screw hole orientation.
 - Do NOT over tighten, when the screw feels tight stop screwing, as this can cause the thread to be damaged and a loose fit.
1. Place the fins of set A on the inside edge of the bumper. Ensure they are upright as the bumper has a slight taper (see diagram). Ensure the fin screw holes are facing inwards towards the centre of the bumper.
 2. Hold securely in place and firmly fix the fins to the bumper using the provided self tapping screws. It is recommended to attach the fin with a single screw first and pivot the fin until completely straight. Attach the remaining screws.
 3. Once set A is fixed in place, measure 124mm towards the centre of the bumper from each fin and mark with tape.
 4. Line set B up with your markers and ensure the screw holes are facing towards the centre of the bumper.
 5. Hold the fins in place and firmly drive the self tapping screws into the bumper.
 6. After set A and B are attached, you are left with set C (slightly smaller than all the others). Repeat the measuring process of 124mm but this time towards the outside of the bumper on each side.
 7. Attach set C on your markers with the screw holes orientated towards the centre of the bumper.