


Kia Picanto GT Line Rear Diffuser Kit Instructions

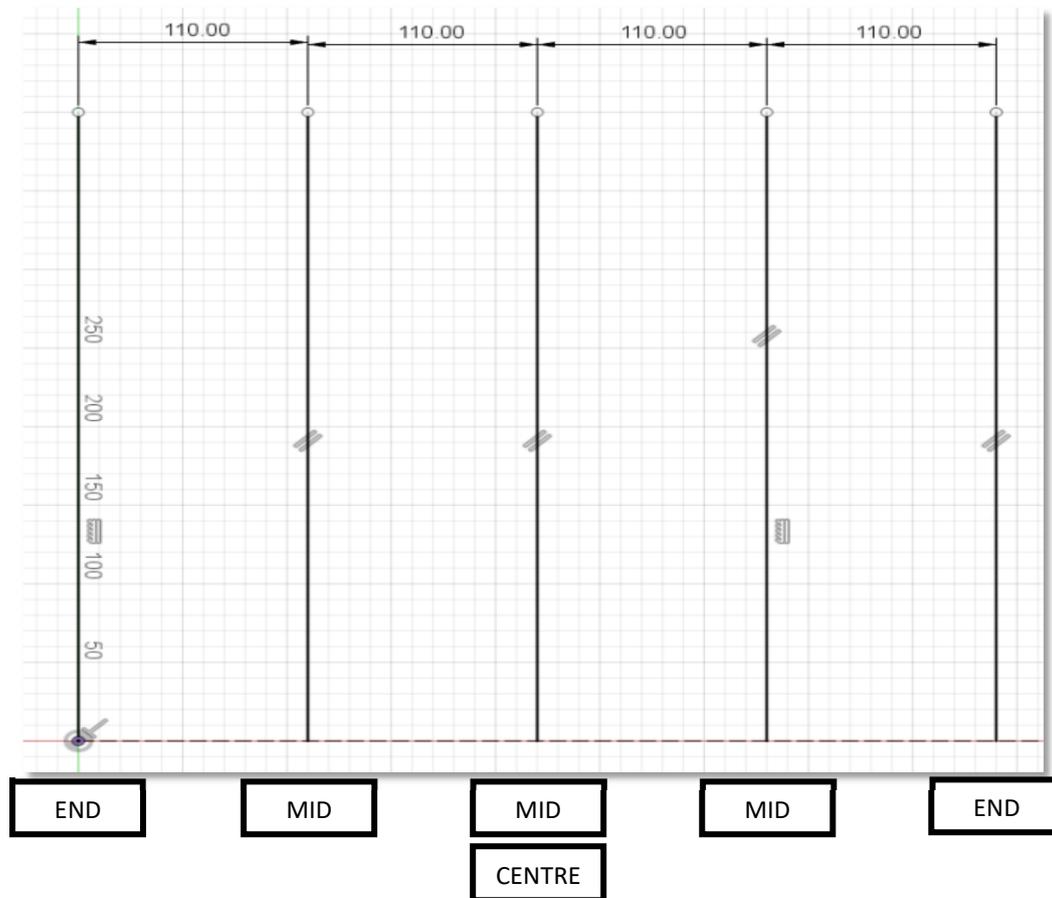

Note:

- Do NOT over tighten, when the screw feels tight stop screwing otherwise this can cause the thread to be damaged and create a loose fit.
- You can measure from the centre of the fins for spacing or using one edge e.g. left hand side as long as you keep the same side throughout measuring as the fins are 10mm thick.
- We recommend sticking the fins on with double sided tape before installation with screws to ensure the spacing and alignment is correct before screwing into the bumper.
- You can use either the included self tapping screws or M3 bolts, nuts & washers to install your diffuser kit. If using bolts, we recommend using either locking nuts or a thread locking compound to ensure that vibrations wont loosen the bolts.

Installation:

location with masking tape to ensure an even symmetrical fit. Start by installing the two end fins as these attach to the existing fins moulded in the car's original bumper - this will help with referencing and spacing the inner fins. Once happy with location, apply double sided tape to the fin and stick to the bumper.

screwing one screw in first and checking the fin for straightness from a distance, before securing the final screw. If using nuts and bolts, you can either use the holes created by the self tapping screws as pilot holes or drill out the holes straight away then proceed to secure with nuts and bolts.