


Seat Arosa Rear Diffuser Kit Instructions

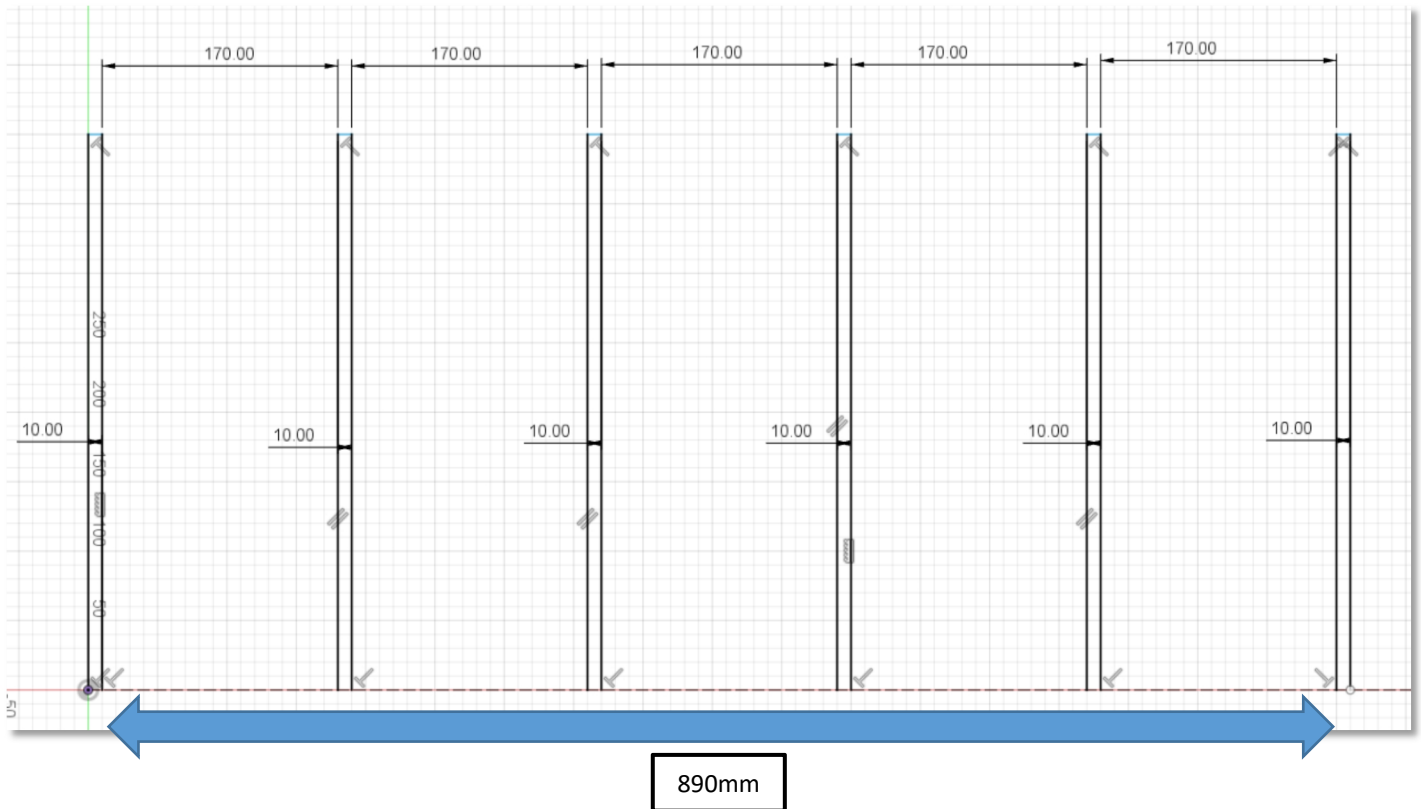

Note:

- Do NOT over tighten, when the screw feels tight stop screwing otherwise this can cause the thread to be damaged and create a loose fit.
- You can measure from the centre of the fins for spacing or using one edge e.g. left hand side as long as you keep the same side throughout measuring as the fins are 10mm thick.
- We recommend sticking the fins on with double sided tape before installation with screws to ensure the spacing and alignment is correct before screwing into the bumper.
- You can use either the included self tapping screws or M3 bolts, nuts & washers to install your diffuser kit. If using bolts, we recommend using either locking nuts or a thread locking compound to ensure that vibrations won't loosen the bolts.

Installation:

pieces on the left & right of the rear bumper, ensuring the distance between the inner edge of these two fins is 890mm. Once happy with location, apply double sided tape to the fins and stick to the bumper.

recommend screwing one screw in first and checking the fin for straightness from a distance, before securing the final screw. If using nuts and bolts, you can either use the holes created by the self tapping screws as pilot holes or drill out the holes straight away.

170mm along to identify the position for the next fin as seen in the diagram above.