

# Hunting Beast Gear Assembly

## 9" Mini Platform

## 12" Mini Platform

**WARNING:** failure to follow all warnings listed could result in serious injury or death  
**WARNING:** Do not use without full body harness (Fall Arrest System) that meets requirements of Test Method F2337.  
**WARNING:** Do not use before reading all instructions  
**WARNING:** Maximum weight capacity is 300 lbs  
 BGCS89827, BGCSNO89827, BGCS89826, BGCSNO89826  
 Hunting Beast Gear P.O. Box 139 Lannon, WI 53046 262-293-6412  
 Instructions are available at [www.huntingbeastgear.com](http://www.huntingbeastgear.com)



### Parts List

- A. (1) 9" Mini Platform or 12" Mini Platform
- B. (2) 2" Grade 8 Soc Head Bolt
- C. (2) 1-1/4" Grade 8 Soc Head Bolt
- D. (2) 2" Grade 8 Hex Head Bolt
- E. (2) 1" Stick End Caps
- F. (6) Grade 8 Lock Nuts
- G. (1) 3/16" Allen Wrench

### Assembly Notes \ Instructions

#### 9" Mini Platform Install

##### Top Side Stick Install

1. Slide Mini Platform over Climbing Stick Tube (X)
2. Ensure the 45° angle of the platform points up or aligns with the top edge pointing towards the tree. (Z)
3. Install the 1-1/4" Grade 8 Soc Head Bolt (A)
4. Install the 2" Grade 8 Hex Head Bolt (B)
5. Install stick End Cap (C)

##### Bottom Side Stick Install

1. Slide Mini Platform over Climbing Stick Tube (X)
2. Ensure the 45° angle of the platform points up or aligns with the top edge pointing towards the tree. (Z)
3. Install the 2" Grade 8 Soc Head Bolt (D)
4. Install the 2" Grade 8 Hex Head Bolt (E)
5. Install stick End Cap (G)

#### 12" Mini Platform Install

##### Top Side Stick Install

1. Slide Mini Platform over Climbing Stick Tube (X)
2. Ensure the 45° angle of the platform points up or aligns with the top edge pointing towards the tree. (Z)
3. Install the 1-1/4" Grade 8 Soc Head Bolt (H)
4. Install the 2" Grade 8 Soc Head Bolt (I)
5. Install stick End Cap (J)


##### Bottom Side Stick Install

1. Slide Mini Platform over Climbing Stick Tube (X)
2. Ensure the 45° angle of the platform points up or aligns with the top edge pointing towards the tree. (Z)
3. Install the 2" Grade 8 Soc Head Bolt (K)
4. Install the 2" Grade 8 Soc Head Bolt (L)
5. Install stick End Cap (M)

### Tools Needed

1. 3/16 Allen Wrench - Used to install Soc Head Bolts
2. 11 MM or 7/16 Socket - Used to install lock nuts and Hex Head Bolts
3. Rubber Mallet - Used to install End Caps
4. 11 MM or 7/16 wrench

#### 9" Mini Platform Install

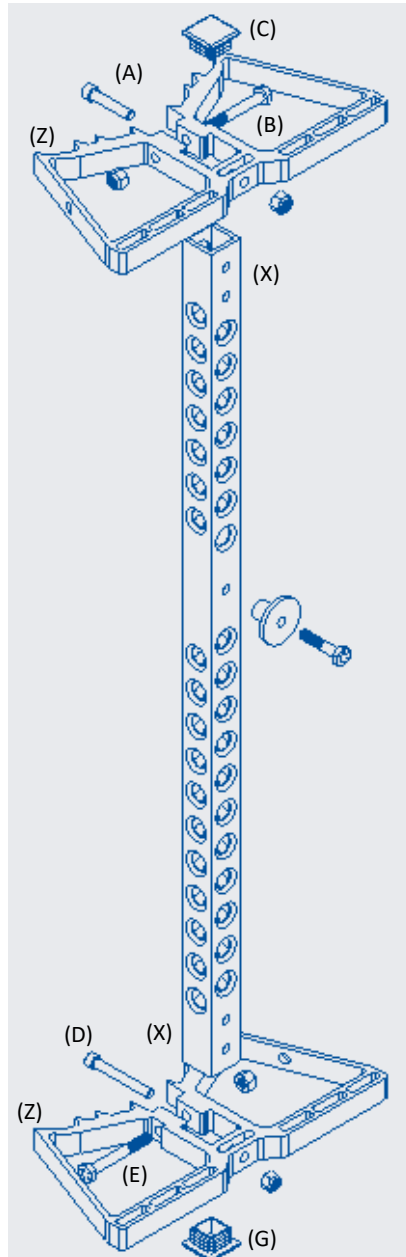

#### 12" Mini Platform Install

