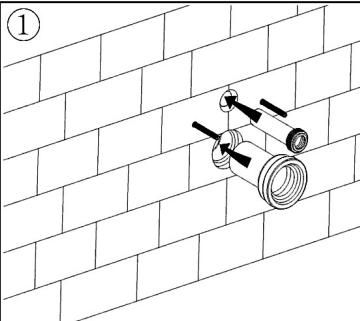
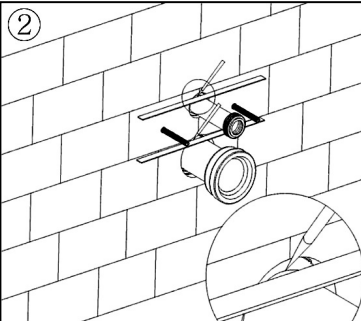
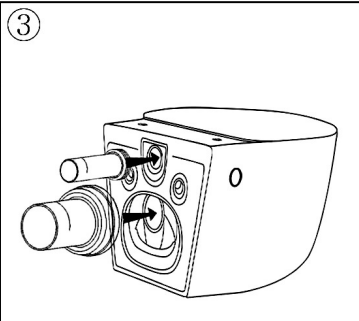
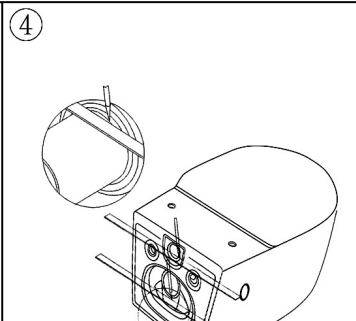
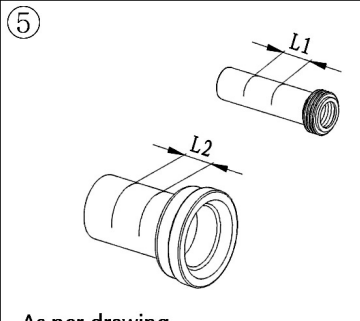
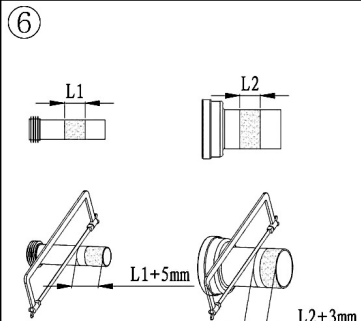
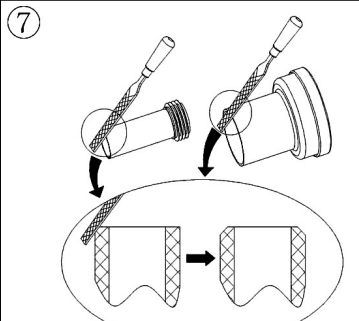
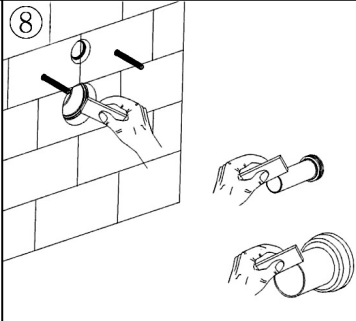
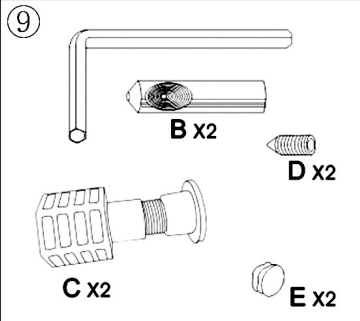
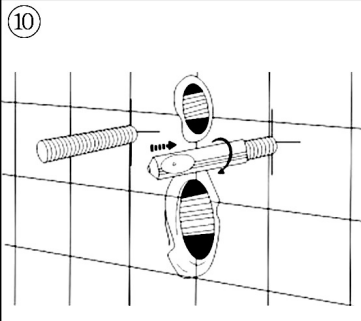
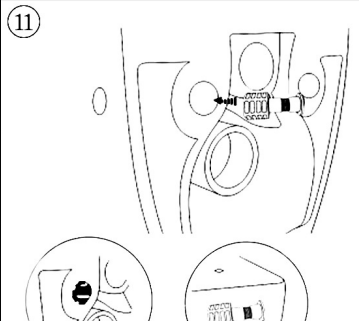
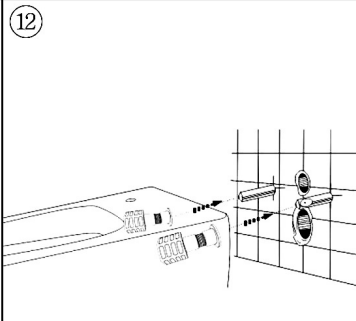
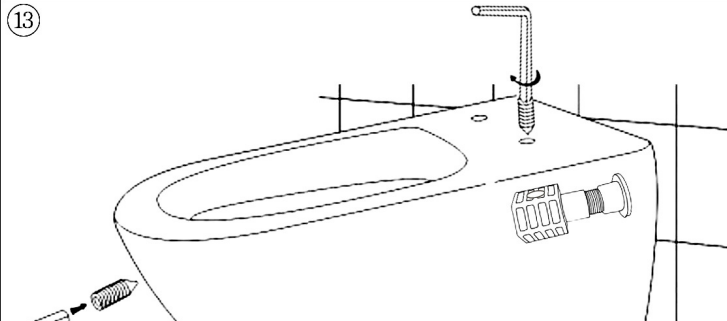


Installation Instructions

WALL-HUNG TOILET

<p>①</p>  <p>Fully insert the straight tube into cistern flushing outlet and connecting pipe into discharging outlet.</p>	<p>②</p>  <p>Draw the lines as above picture</p>	<p>③</p>  <p>Apply lubricant on rubber washers of straight tube and connecting pipe, then insert into ceramic holes.</p>	<p>④</p>  <p>Draw the lines as above picture</p>	
<p>⑤</p>  <p>As per drawing, L1 is distance between the two lines on straight tube. L2 is distance between the two lines on connecting pipe</p>	<p>⑥</p>  <p>Cut the straight tube and connecting pipe as per above drawing.</p>	<p>⑦</p>  <p>Polishing the cutting surface to get chamfer angle as per drawing and deburring</p>	<p>⑧</p>  <p>Apply lubricant on joint surface of straight tube and connecting pipe</p>	
<p>⑨</p>  <p>Five accessories: Part A, B x2, C x2, D x2, E x2</p>	<p>⑩</p>  <p>Fix the part B into the screw as the above picture;</p>	<p>⑪</p>  <p>Put Part C into the installing hole on the pan;</p>	<p>⑫</p>  <p>Insert the Part C into Part B;</p>	
<p>⑬</p>  <p>Fix Part into the hole on Part C by tool Part A;</p>				