


HK-UNI | Universal Helmet Kit

INSTALLATION GUIDE


PARTS INCLUDED

- (1) Helmet Kit
- (2) Velcro speaker mounts
- (1) OFFROAD Adapter (blue plug)
- (1) STEREO Adapter (grey plug)

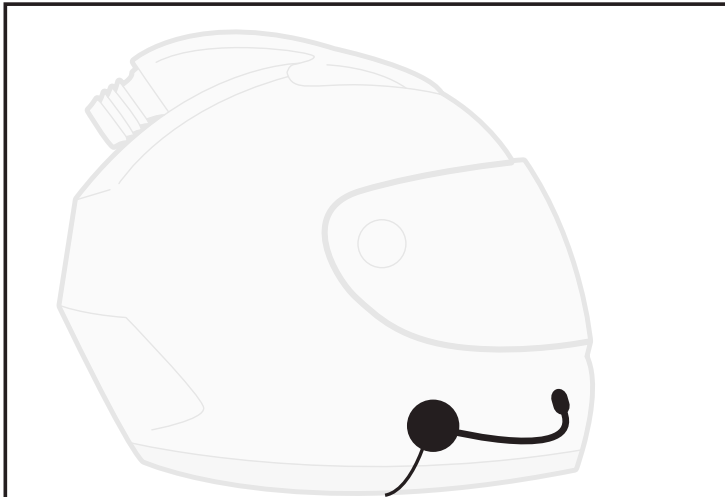


STEP 1

Using the 3M adhesive, affix mic boom to the interior of your helmet positioning the mic directly in front of your lips. The adhesive should mount to the shell, **ON THE LEFT SIDE** under the helmet liner. *(LEFT REFERS TO LEFT SIDE AS IF YOU WERE WEARING THE HELMET)*

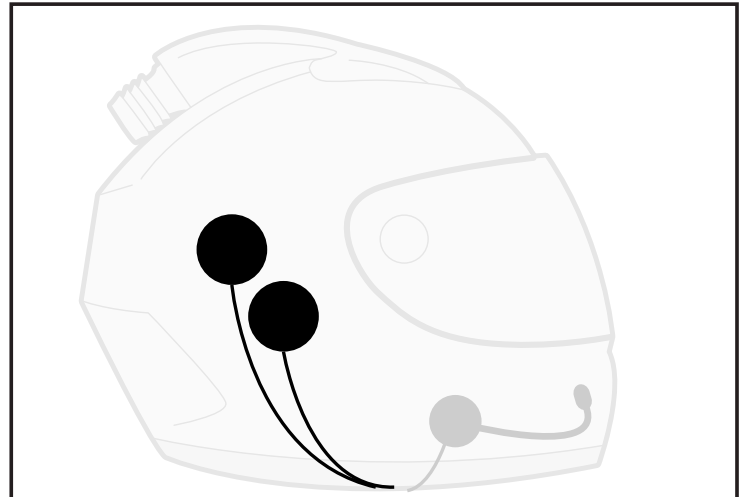


STEP 2

Locate the ear pockets inside your helmet and secure helmet kit speakers with supplied 3M adhesive speaker mounts. The speaker with the longer cable attaches to the right side.

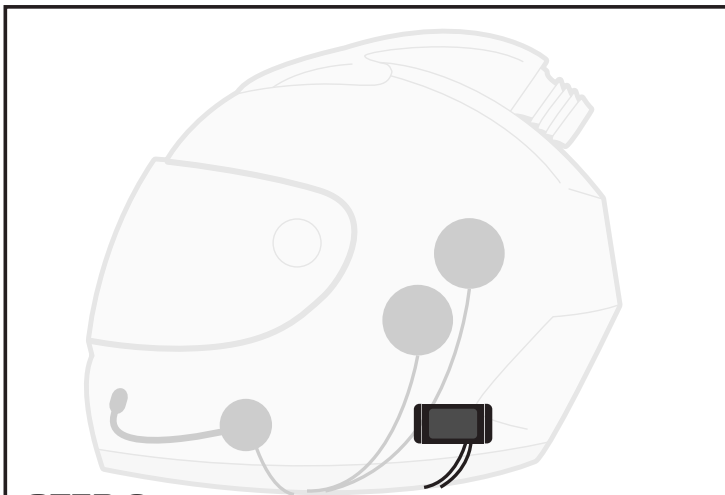

STEP 3

Affix the helmet kit jack box on the exterior of the helmet using the 3M adhesive. Optimal location shown above. Adjust as necessary to accommodate cable lengths.

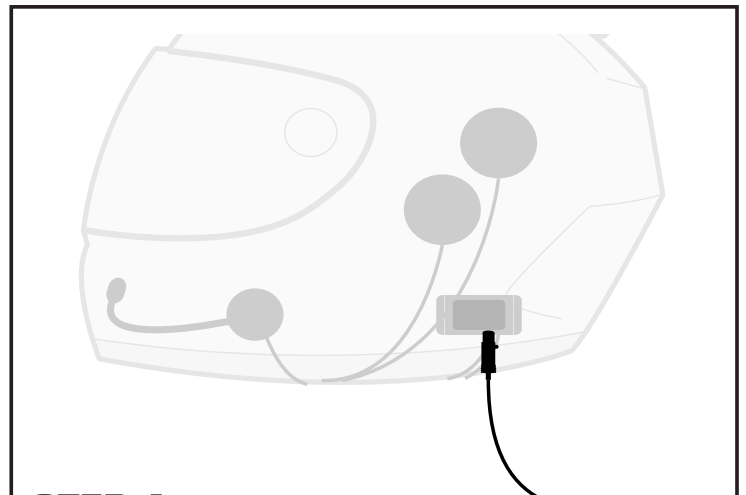

STEP 4

Attach the appropriate adapter cable for your intercom. The cable with the grey molded plug is for use with STEREO intercoms only. The cable with the blue molded plug is for all standard OFFROAD intercoms.

Tuck any excess cabling behind the helmet liner to clean up your installation.