

# Installation Guide

---

1. Remove the Glove Box from the dashboard. Set aside.

2. Locate the antenna cable and firewall grommet.

3. Remove the AM/FM antenna whip from the vehicle.

4. Remove the chrome trim cap from the original antenna mount.

5. Remove the 4 screws holding the original antenna mount to the cowl.

**Note: Save these screws. They will be re-used to install the new mount.**



6. Slowly lift the original antenna mount straight up.

**Note: The original antenna cable is connected to this mount. \*Do not let it fall into the cowl!\***

7. Disconnect the cable from the original antenna mount.

8. Using electrical tape, tape the new antenna cable end to the end of the original AM/FM antenna cable.

9. Gently pull the antenna cable grommet from the firewall.

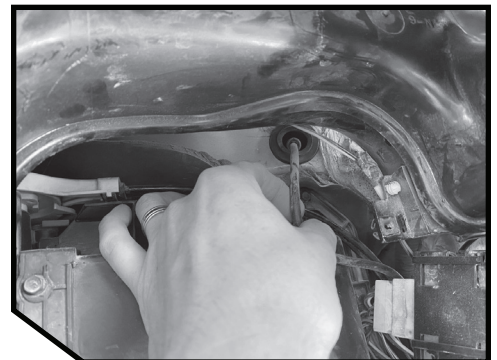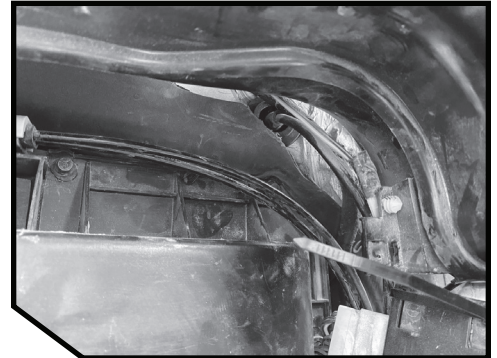

# Installation Guide

---

10. From inside the cab of the vehicle, slowly, and gently, pull the old cable and draw the new cable in.

**Note: Do not force the cable! If the cable is not easily pulled, adjust and try again.**

11. Once the new antenna cable is completely through the firewall, remove the tape holding it to the old AM/FM antenna cable.

12. Cut the metal retainer holding the firewall grommet on the old AM/FM antenna cable.

13. Cut the firewall grommet in half in a way that it can be reused again.

14. Install the firewall grommet on the new cable and push the grommet back into the firewall.

15. Route the antenna cable through the dash, reusing the original AM/FM antenna cable holders.

